

Calibrate Conference Disassembly Instructions

Item #	Part #	Description
1		Worksurface
2		Base
3	RH-QS0978	#9 x 7/8" Flat Head Screw
4	RT-BTxx (xx = actual length)	Trough
5	RT-BTEC	Trough End Cap
6	OX-LB	L-Bracket
7		Access Panel
8	RH-26294001	Panel Bracket
9	RS-HSFDU812-A	#8 x 1/2" Pan Head Screw
10	RH-26294030	Panel Button
11	RH-SMBMTP17834B	#8 x 3/4" Truss Head Screw
12	RS-PEDWT	Counterweight

Disassembly Instructions:

1. Remove worksurface from base using a #2 phillips drive.
2. Remove troughs from worksurface using a #2 phillips drive.
3. Detach trough end caps from troughs.
4. Remove L-brackets from bases using a #2 phillips drive.
5. Detach access panels from bases.
6. Disassemble all access panel hardware using a #2 phillips drive.
7. Remove any counterweights from bases.

