

Day to Day Aluminum Base Table Disassembly Instructions

Disassembly Instructions:

1. Remove the worksurface from base using a #2 philips drive.
2. Remove the U-channel from the worksurface using a #2 Philips drive.
3. Remove the top plates from the posts using a 3/16" hex drive
4. Remove the feet using a 9/16" hex
5. Remove glides or casters.

Item #	Part #	Description
1	W-WSxxyy (xx= 24 or 30) (yy = 36-96 in increments of 6")	Worksurface
2	T-UCKxx (xx= 36-72 in increments of 6")	U-Channel
3	RWFS-UTP	Top Plate
4	WFS-(xx)(y)(z)W (xx = 16,29 or 42) (y = GP or CP) (z = 2, 3 or 4)	Post
5	WFS-UTLxxBP (bright polished) RWFS-UTLxx-B (painted) (xx= 24 or 30)	Foot
6	RWFS-UTG-I (glide) RWFS-UTC-I (caster)	Glide/Caster
7	RH-QS0978	#9 x 7/8" Flat Head Screw
8	RH-SHF51618-1	5/16-18 x 1" Flat Head Screw
9	RH-92240A627-	3/8-16 x 1 3/8" Hex Bolt
10	RH-91831A127-I	3/8-16 Locknut
11	RWFS—UTPI-I	Post Insert

