

# Day to Day Steel Base Table Disassembly Instructions

## Disassembly Instructions:

1. Remove the worksurface from base using a #2 philips drive.
2. Remove the U-channel from the worksurface using a #2 Philips drive.
3. Remove the long bolts to using a 5/8" hex drive to disassemble the top plates, posts, foam blocks and feet.
4. Remove the glides or casters from the feet.

Item #	Part #	Description
1	W-WSxxyy (xx= 18, 24, 30 or 36) (yy = 36-72 in increments of 6")	Worksurface
2	T-UCKxx (xx= 36-72 in increments of 6")	U-Channel
3	RWFS-TTP-CL	Top Plate
4	RT-ST292G (Glide) RT-ST292C (Caster)	Post
5	RWFS-FB33	Foam Block
6	RWFS-TTxx (xx = 18, 24, 30 or 36)	Foot
7	RC-ELBOLT1 (glide) RWFS-UTC-I (caster)	Glide/Caster
8	RH-BASEBOLT1	Long Bolt
9	RH-QS0978	#9 x 7/8" Flat Head Screw

