



Flip Table Installation Instructions

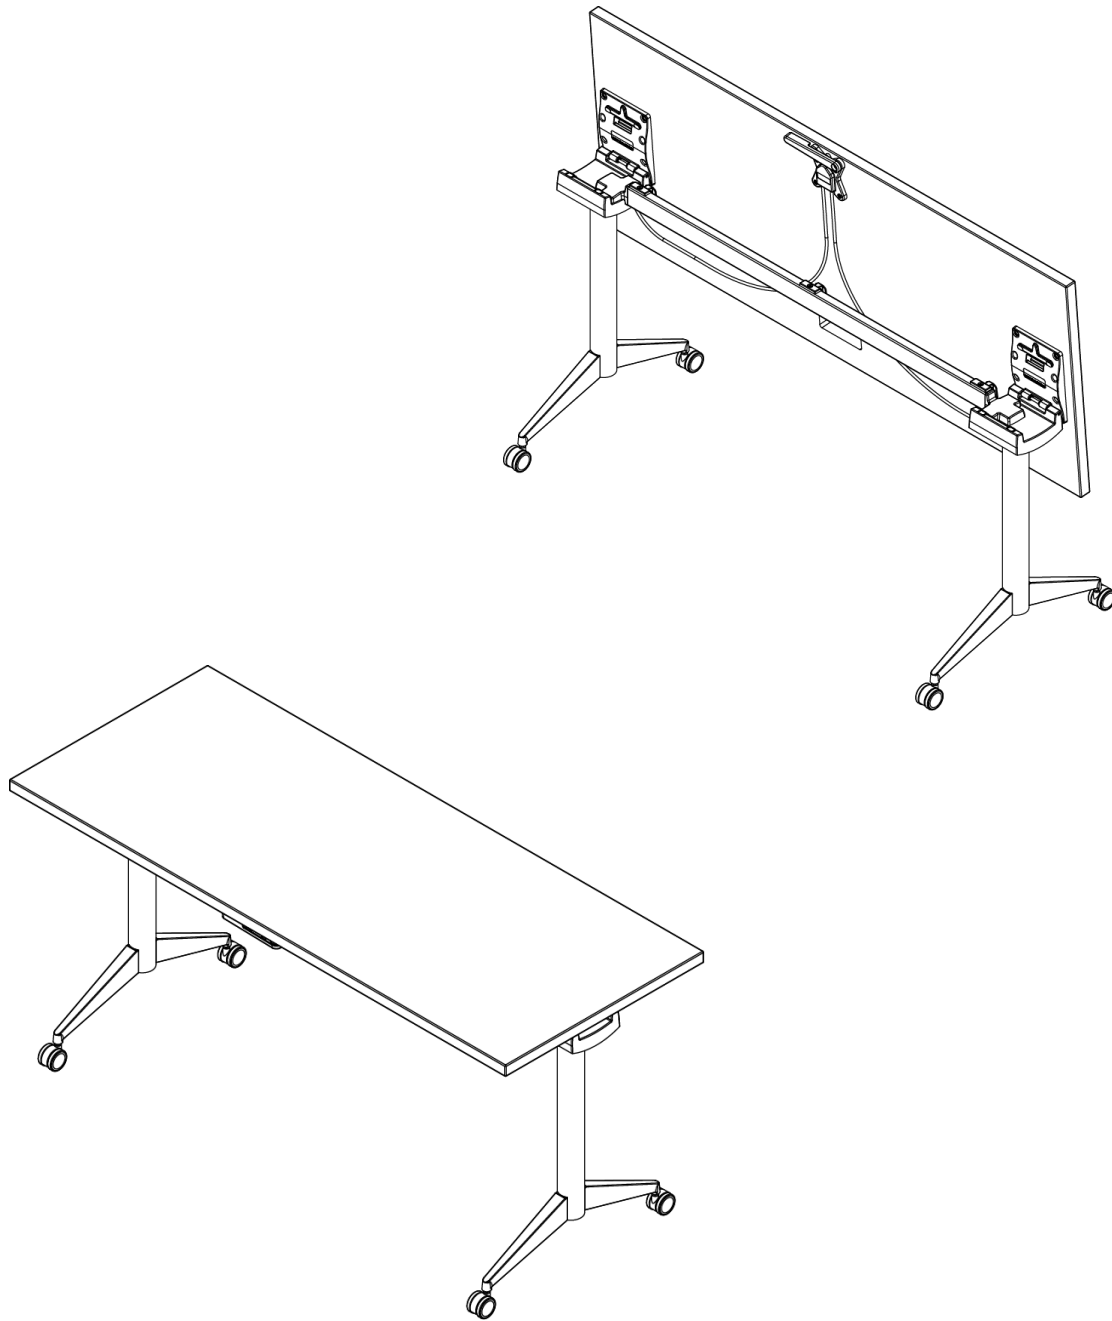

Date	Page No.	Description of change	Name
7/5/2018	1-5	Released	S. Powers
10/25/18	8	Added Jumper Installation	S. Powers
3/1/19	6	Added wedge note, changed modesty screw	S. Powers
10/7/19	5	Added warning section	S. Powers
02/07/20	4	New Images. Added Fastener P/N's.	P. Fortin
3/11/20	3,4	Add fastener p/n RP-M2BOLT3	P. Fortin
8/4/2021	7	Updated surface cutout dimensions	S. Powers
2/24/2025	5	Changed 1/4-20 x 1/2" to 1/4-20 x 5/8"	S. Powers
06/19/2025	3-8	Updated flip mechanism and power	S. Powers

Flip Table Installation Instructions

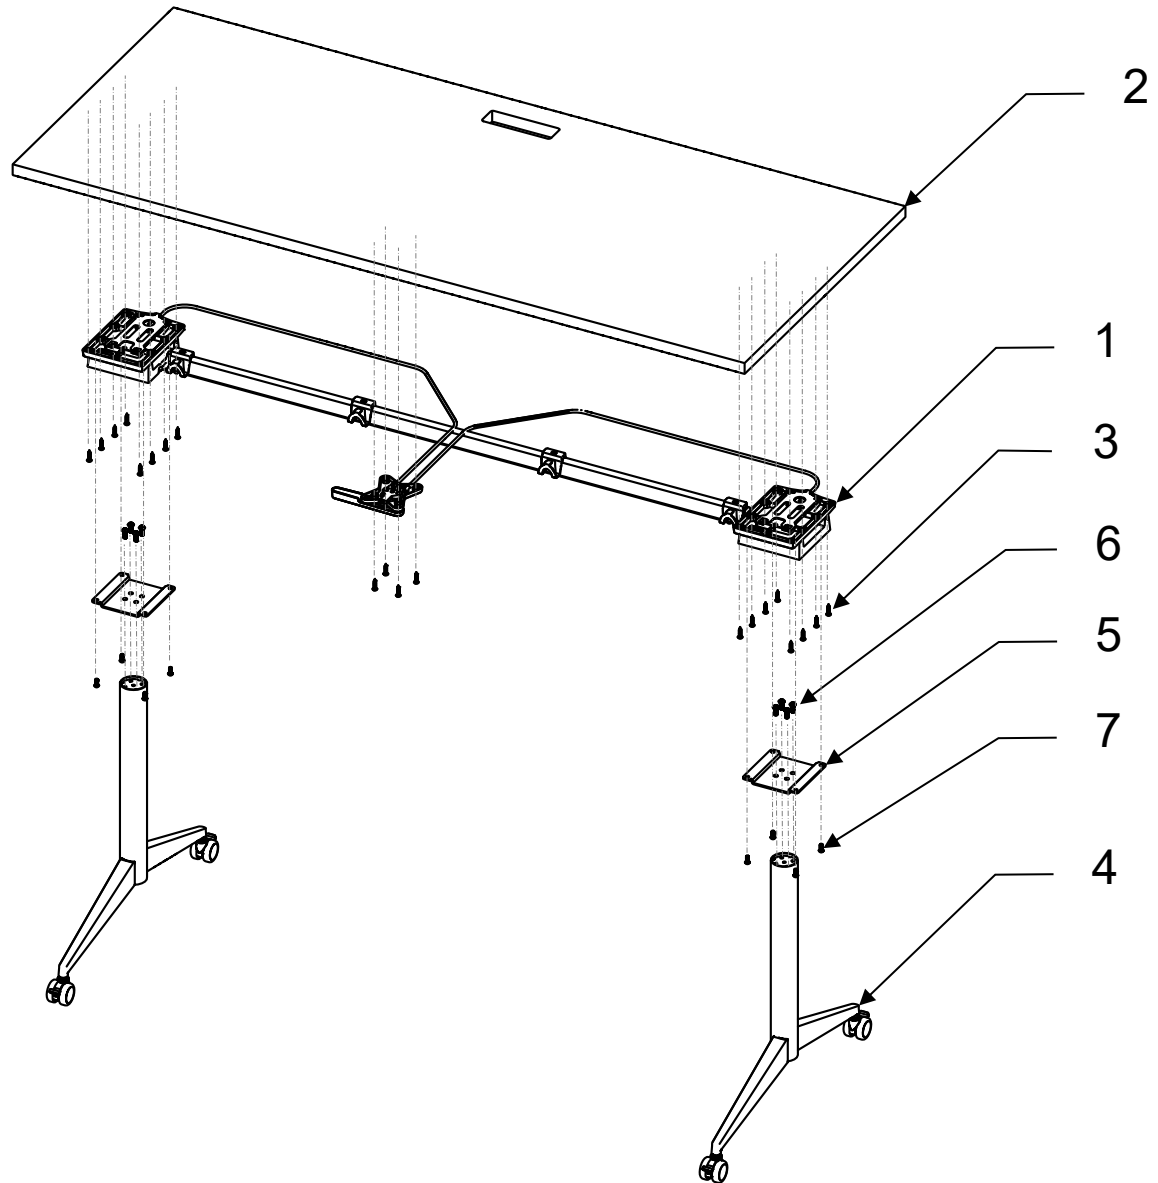


1. Flip Mechanism
2. Worksurface
3. #12 x 1" Pan Head Screw (RH-QSPP17121B)
4. Aluminum T-Leg
5. Top Plate (RWFS-FTPR)
6. 5/16-18 x 3/4" Button Head Cap Screw (RH-91255A581)
7. 1/4-20 x 5/8" Button Head Cap Screw (RP-M2BOLT3)

Flip Table Installation Instructions


STEP 1

Fasten the Flip Mechanism to the Worksurface. Install the (20) #12 x 1" Pan Head Screws into the pilot holes provided. Use the lever of the Flip Mechanism to disengage the mechanism, to expose the inner screw set.

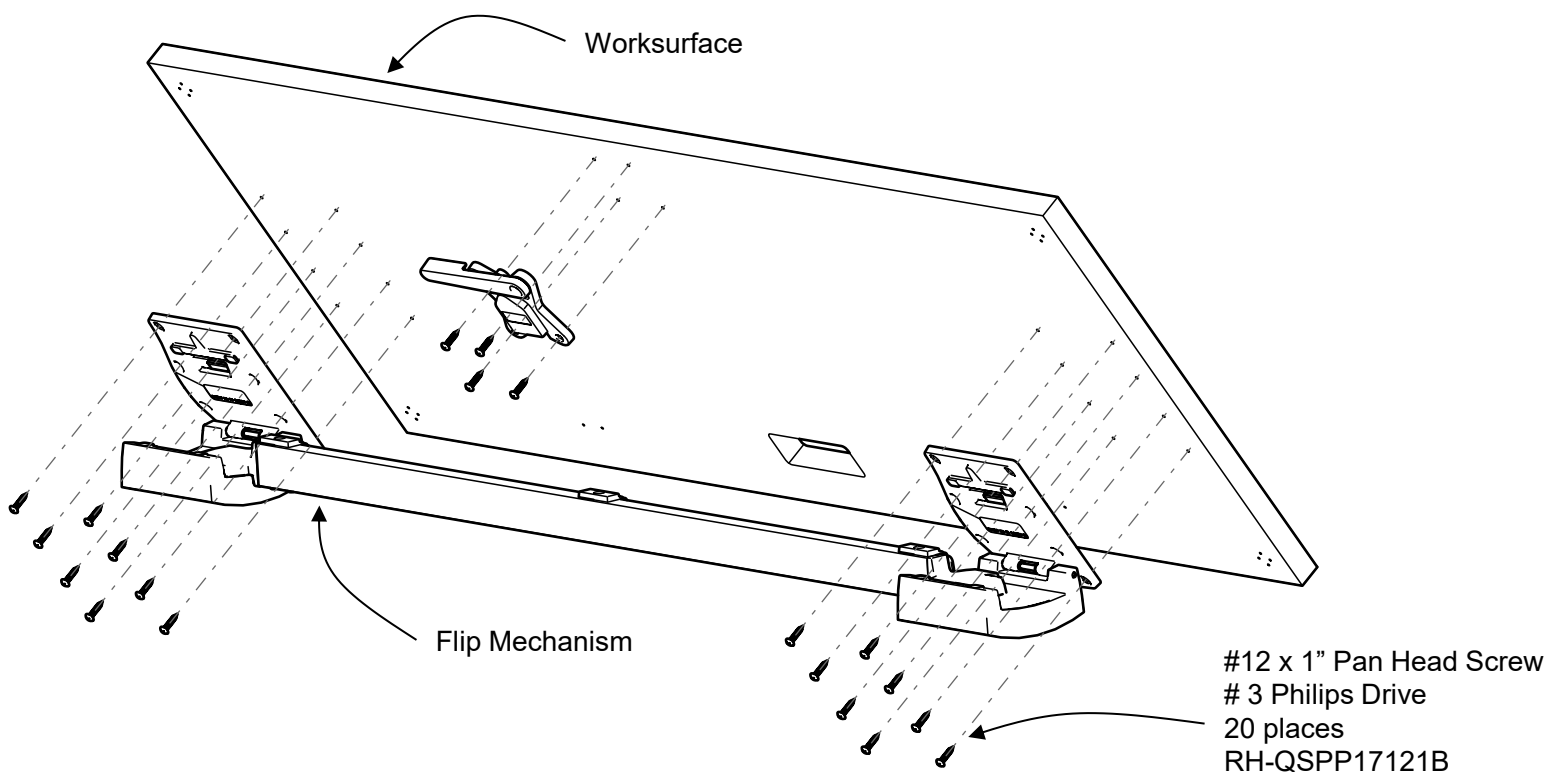

STEP 2


Assemble Top Plate to T-Leg assembly using (4) #5/16-18 x 3/4" Button Head Cap Screw. Repeat for second leg.

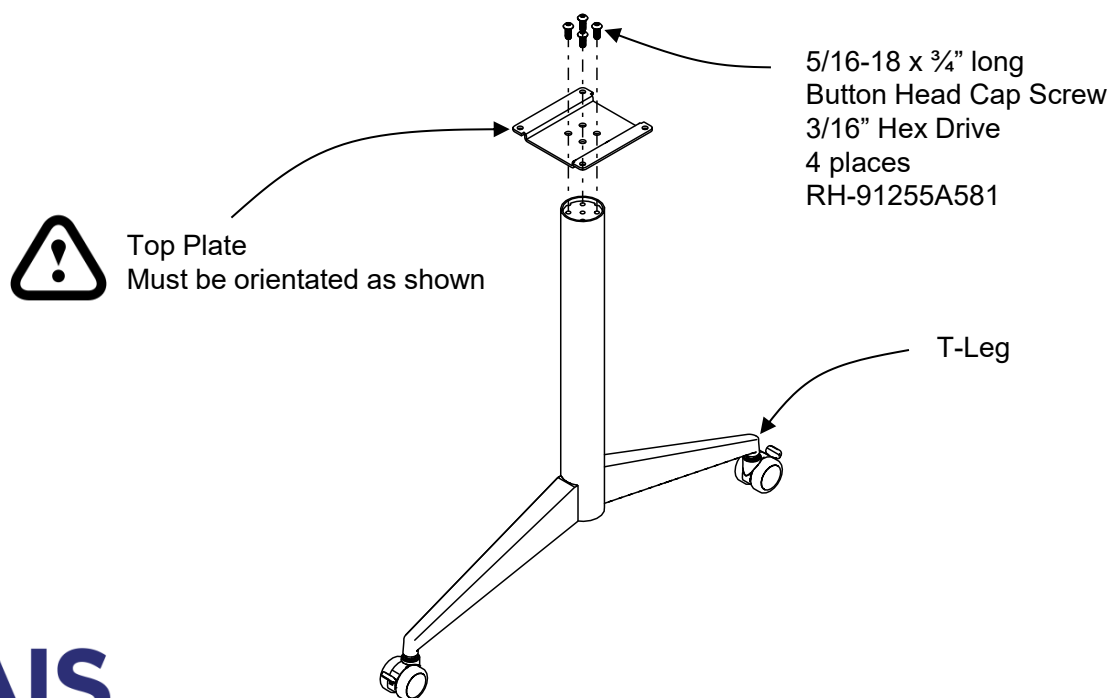


Flip Table Installation Instructions

STEP 3

Install T-Leg assembly to Flip Mechanism using (4) 1/4-20 x 5/8" Button Head Screws.

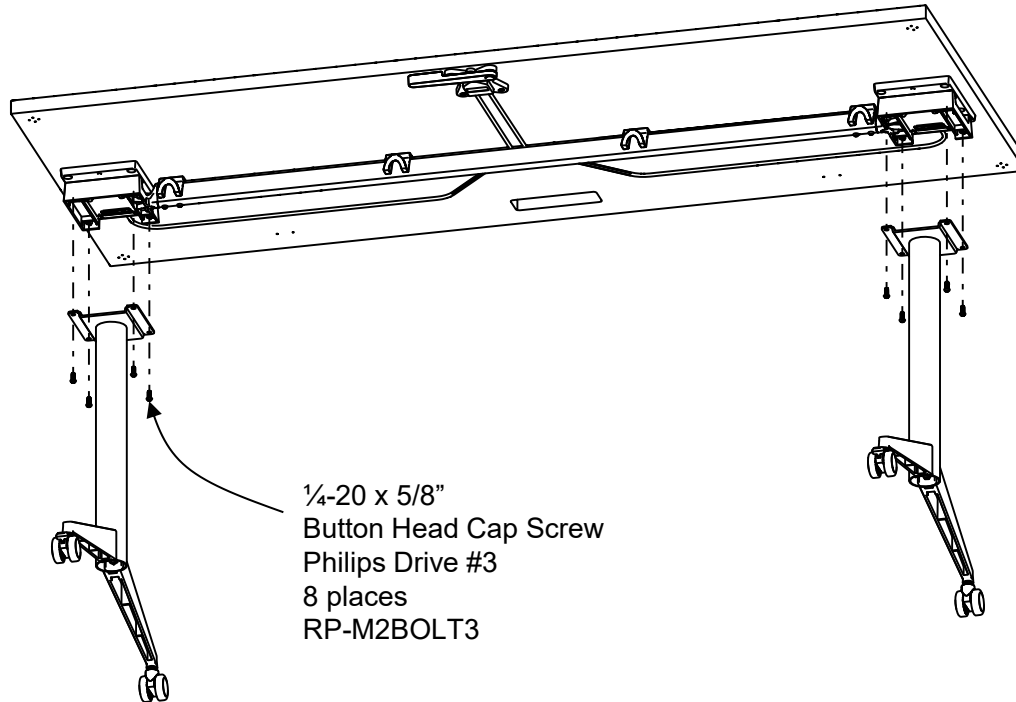

WARNING:

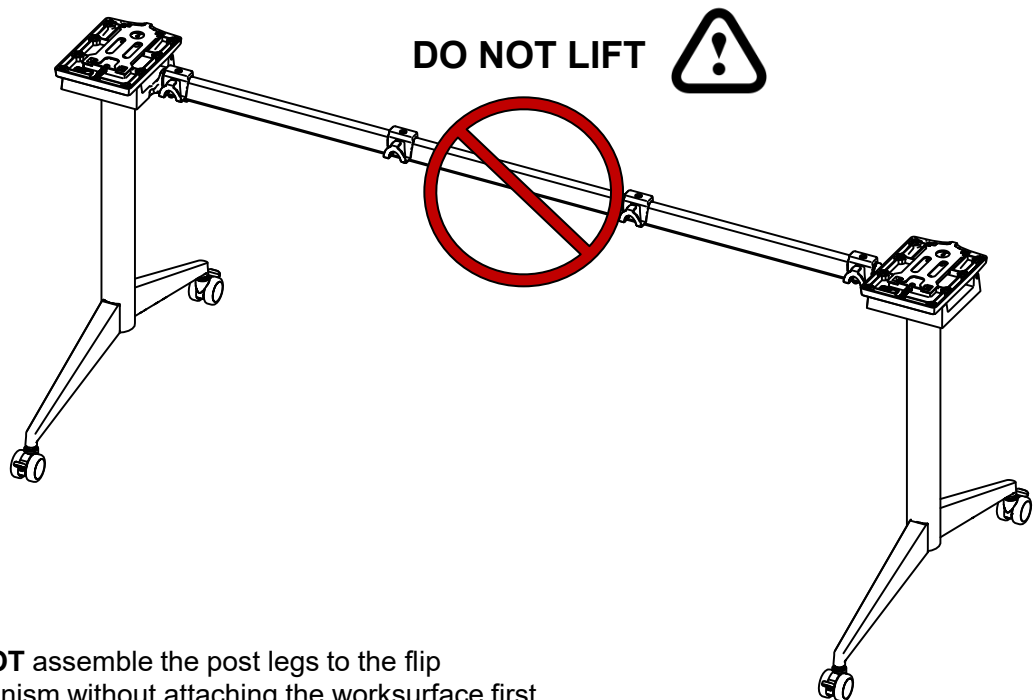


- **DO NOT** assemble the post legs to the flip mechanism without attaching the worksurface first.
- Lifting or handling in such a state may damage the mechanism and will void the warranty

Flip Table Installation Instructions

STEP 4 (skip this step if there is no modesty)



Centrally locate modesty to back side of worksurface.

Install hinges as shown.

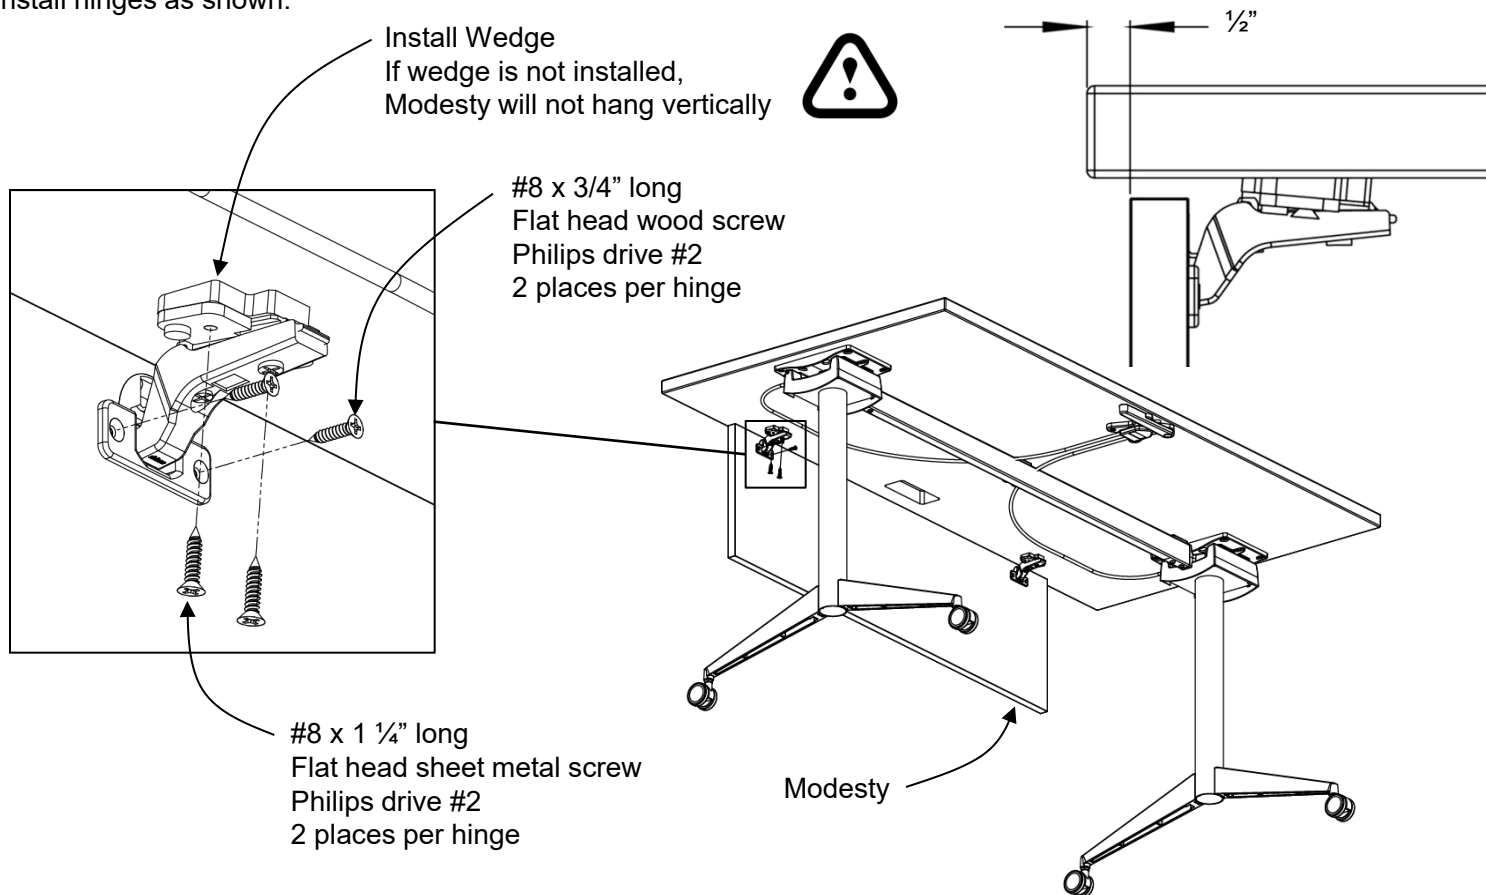

STEP 5



Ensure Flip Mechanism is properly working by using the handle assembly to lock the worksurface into an upright position and release to a lowered position.

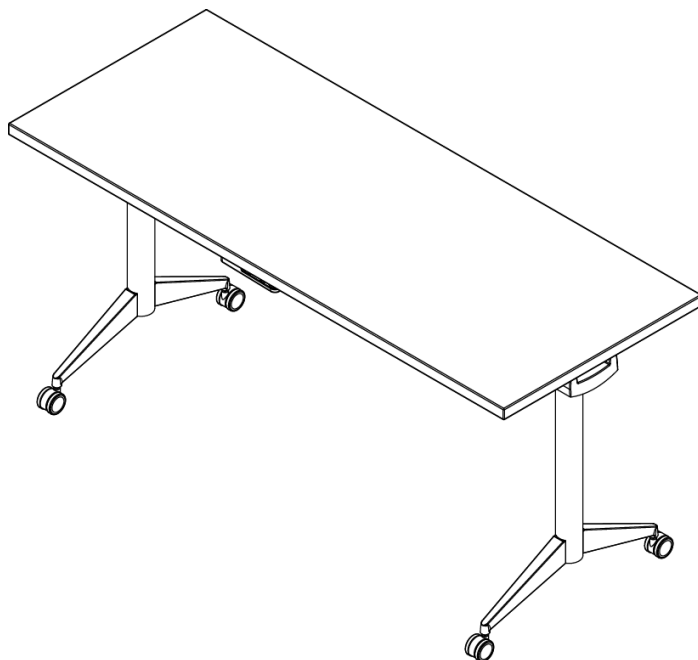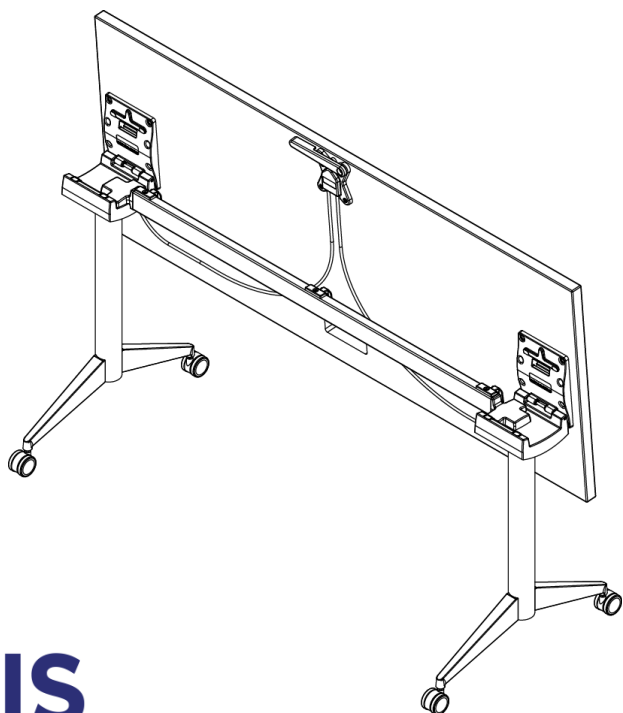

Flip Table Installation Instructions

COVE LG WITH DAISYLINK INSTALLATION

Components & Hardware

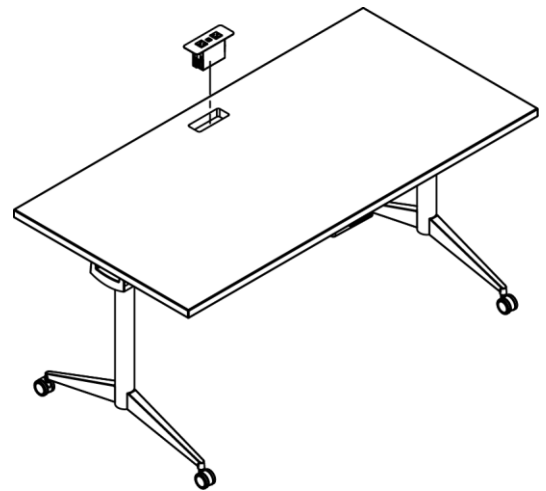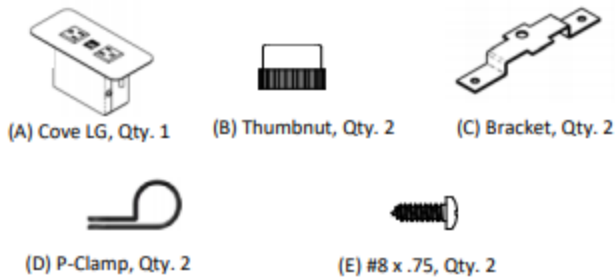

For use with: This product fits tables .25" – 1.5" thick.

Note: *Take care not to pierce finished surfaces.

Note: Use only Electri-Cable Assemblies System 42 Cables. ECA System 42 connectors have been evaluated to prevent inadvertent contact with live parts. Unused connector openings are not required to be capped; however a cap is available from the factory if desired.

Installation Instructions:

- 1- Determine the Cove LG's (A) mounting location and prepare the surface by cutting the mounting hole as shown.
 - 2- Insert the Cove LG through the cutout from above.
 - 3- Place the Brackets (C) and Thumbnut (B) on studs as shown and tighten the nuts until secure. Use caution not to over tighten.
 - 4- Optional – Screwing bracket to underside of surface provides additional mounting support (#8 wood screws – not provided). Insert screws through holes in brackets and secure to underside of work surface as needed*.
- Use of optional screws are recommended for 2.75" opening.
- 5- Connect cables to Cove LG as required.
 - 6- Use P-Clamps (D) and Screws (E) to route cables and attach to underside of work surface as needed.

