


# LB Lounge Disassembly Instructions

| Item # | Part #       | Description              |
|--------|--------------|--------------------------|
| 1      |              | Back Cushion             |
| 2      |              | Front Cushion            |
| 3      | RP-SMZPP102B | #10 x 2" Flat Head Screw |
| 4      | RWFS-GL51618 | 5/16-18 Glide            |
| 5      | WFS-LCF2X2   | 2 x 2 Foot               |
| 6      |              | #9 x 1" Pan Head Screw   |
| 7      | RH-DU325-I   | Anchor Pin               |
| 8      | RH-9056601-I | Cam Bushing              |

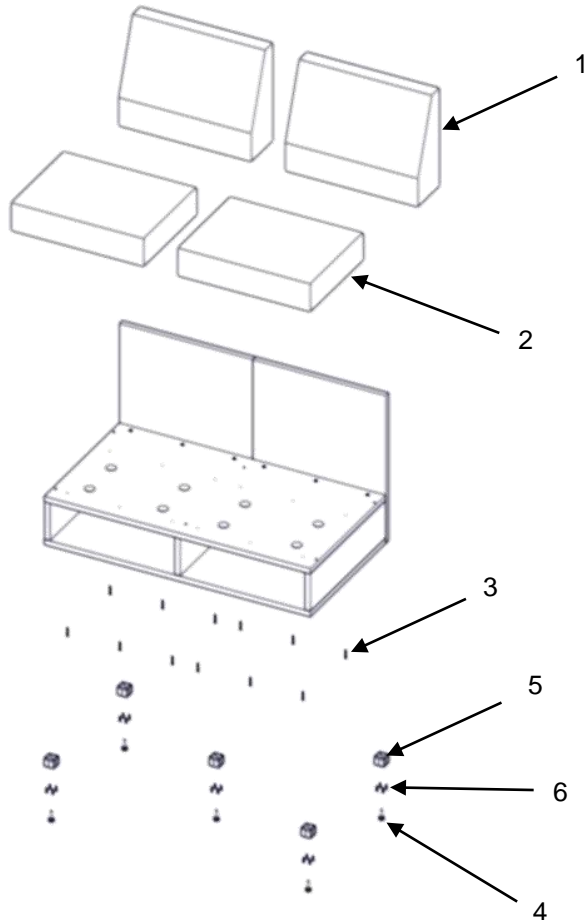

## Disassembly Instructions:

1. Remove cushions from unit using a #2 phillips drive.
2. Detach fabric from cushion and separate foam from the plywood base.
3. Remove glides and feet from base using a #2 phillips drive.
4. Disassemble base unit by removing all cams and pins using a #2 phillips drive.

