

# LB Lounge Disassembly Instructions

Item #	Part #	Description
1		Back Cushion
2		Front Cushion
3	RP-SMZPP102B	#10 x 2" Flat Head Screw
4	RWFS-GL51618	5/16-18 Glide
5	WFS-LCF2X2	2 x 2 Foot
6		#9 x 1" Pan Head Screw
7	RH-DU325-I	Anchor Pin
8	RH-9056601-I	Cam Bushing

## Disassembly Instructions:

1. Remove cushions from unit using a #2 phillips drive.
2. Detach fabric from cushion and separate foam from the cushion base.
3. Remove glides and feet from base using a #2 phillips drive.
4. Disassemble base unit by removing all cams and pins using a #2 phillips drive.

