

TV SERIES POWER INSTALLATION

For furniture power distribution units, series TV2, TV3, TV4, TV5, and TV6 (electrical rating: AC 120V/60Hz, 12A/ 15A, see product label for details)

CAUTION: To prevent the risk of fire and electric shock, please be sure to read all instructions before installing or using this unit.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – To reduce the risk of fire, electric shock, or injury to persons:

1. Use the unit for indoor only.
2. Do not use extension cord(s) to connect the unit.
3. Do not use receptacle for connecting devices over 12A.
4. Do not try to open the unit for any reason.

MOUNTING

SURFACE MOUNT

1. Put the TV Harness on the desired place and use four #6 x ½" screws to fasten the unit onto the wood surface. Use four #6 x 1-½" screws for TV5 and TV6.
2. Plug phone cord/ Ethernet cord to nearest phone jack/ Ethernet jack (for applicable models only).
3. Connect each end of coaxial cable to coaxial jack on the device/ jack which take coaxial cable as an input/output. (Ex. Connect one end of coaxial cable to the coaxial outlet on the wall and the other end to TV) (for applicable models only)
4. Connect RCA cable to compatible A/V devices (for applicable models only).
5. Plug power cord to nearest wall outlet. Make sure the wall outlet is properly grounded.

RECESS MOUNT (for TV2 and TV4 with face plate only)

1. Bore a 215 mm X 48 mm hole on the mounting surface for TV4 series, or 95 mm X 42 mm hole for TV2 series.
2. Take the unit and feed power supply cord, phone cord, coaxial cable, RCA cable through the hole.
3. Connect each end of coaxial cable to coaxial jack on the device/ jack which take coaxial cable as an input/output. (Ex. Connect one end of coaxial cable to the coaxial outlet on the wall and the other end to TV) (for applicable models only)
4. Connect RCA cable to compatible A/V devices. (for applicable models only)
5. Plug phone cord/ Ethernet cord to nearest phone jack/ Ethernet jack (for applicable models only).
6. Use two #6 x ½" screws to fasten the unit through face plate screw holes.
7. Plug power cord to nearest wall outlet. Make sure the wall outlet is properly grounded.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.