

Volker Cube and Nesting Table Disassembly Instructions

Item #	Part #	Description
1		Cube Base
2	RH-307141100	Caster
3	RP-PSS1-CA	#10 x 1" Pan Head Screw
4	RH-CGLIDE	Glide
5	RH-1420TI	Insert
6		Worksurface
7	RH-DU325-I	Anchor Pin
8	RH-9056601-I	Cam Bushing
9	RH-26228786	Double Anchor Pin

Volker Cube Disassembly Instructions:

1. Remove casters from Volker Cube base using a #2 phillips drive.
2. Detach fabric from cushion and separate foam from the plywood base.

Nesting Table Disassembly Instructions:

1. Remove glides and inserts from nesting table.
2. Disassemble worksurface top from the base by removing all cam bushings and anchor pins.

