



Freestanding Laminate Hutch



Step 1 - Measure the width of the desk surface Hutch is being mounted to. (72" or 60") Place mounting hardware holes as shown below. Install mounting hardware on desk surface using #8 wood screws with narrow and and stop to back.

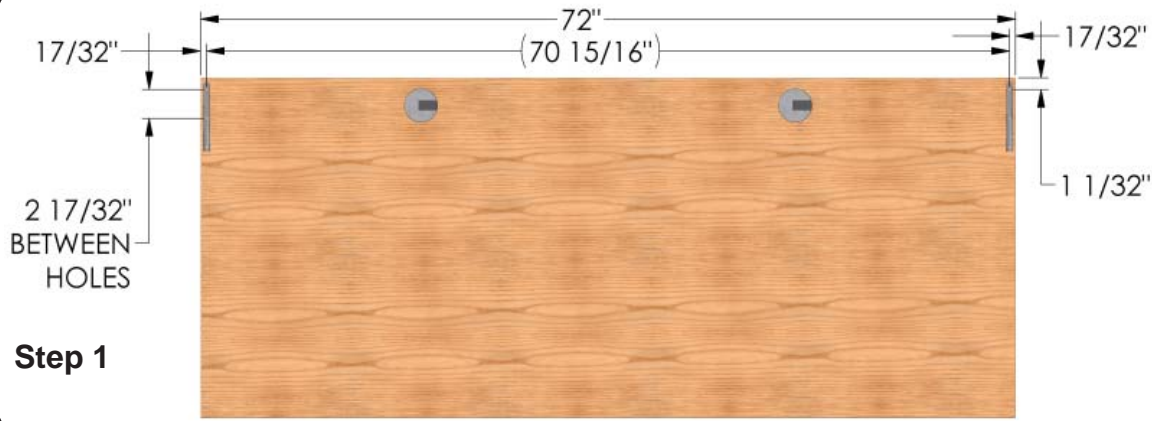

Step 2 - After mounting hardware is installed lift Hutch onto desk and center it in mounting area so mounting hardware on bottom verticals line up with mounting hardware on desk side to side. Slide Hutch into the mounting hardware and make sure Hutch stays even on the connectors. To install the tasklight use the pre-drilled holes in the bottom of the shelf to mount the tasklight per the tasklight instruction sheet. Be sure to snake tasklight cord through back hole in the Hutch.

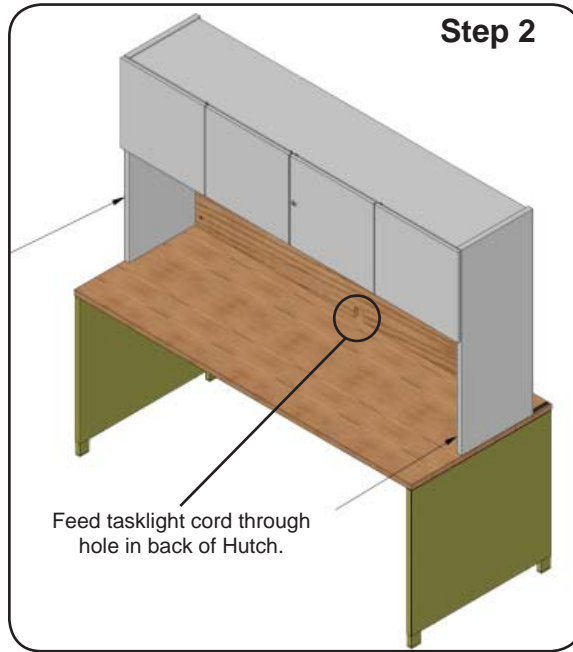

Step 3 - Slide tackboard into the back of Hutch at an angle and then slide bottom up to back of Hutch. Make sure tasklight cord is in slot between Hutch and tackboard.

