



Step 1 - Remove both hanger frame top caps.

Step 2 - From the side place postfiller body into the 90 degree corner. Hold post filler by installing hinges.



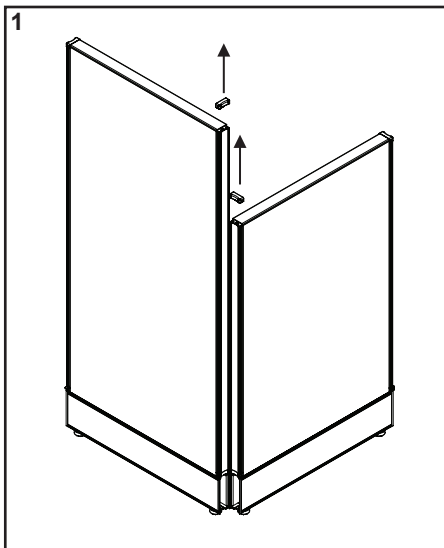



Step 3 - Install 90 degree shroud using the key slots of the bottom member raceway and (4) #6 hex nuts.

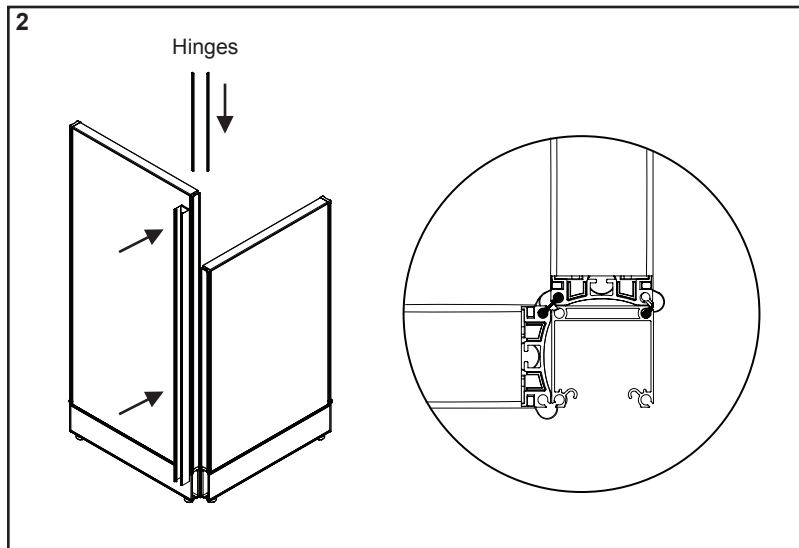

Step 4 - Install postfiller cover.


Step 5 - Re-Install hanger frame top caps. Install postfiller topcap.

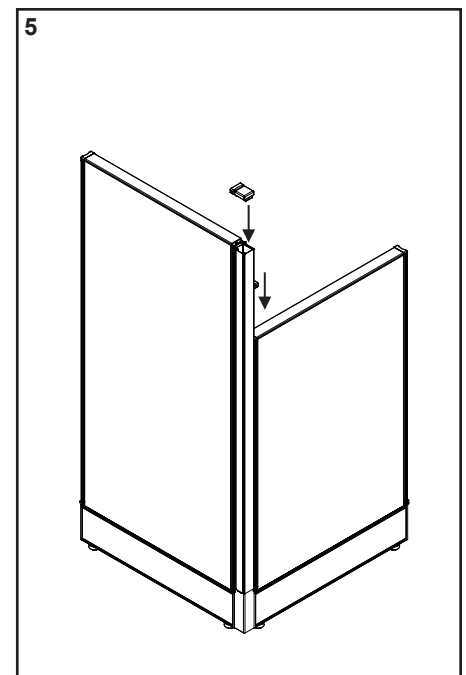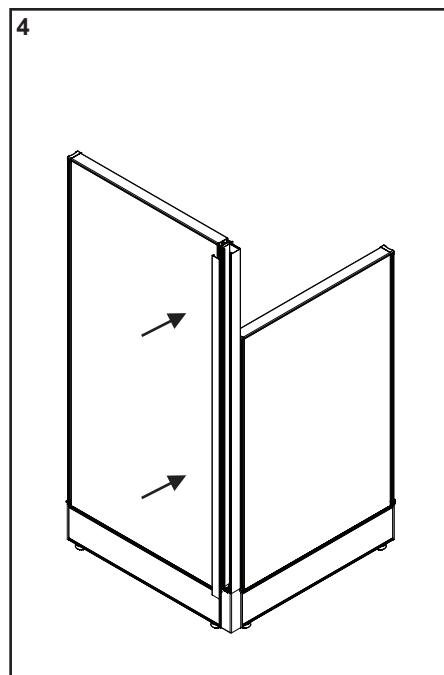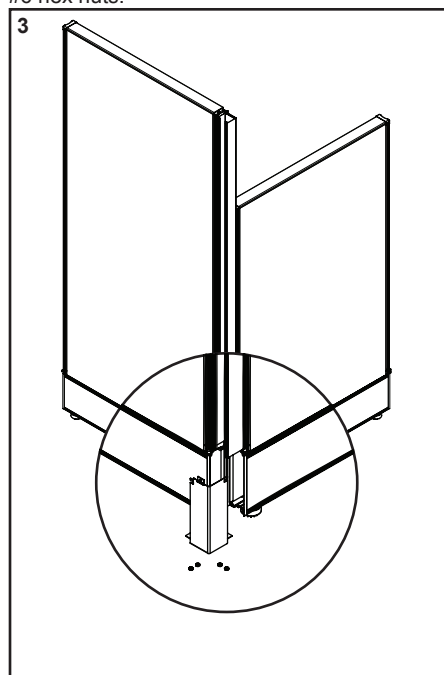

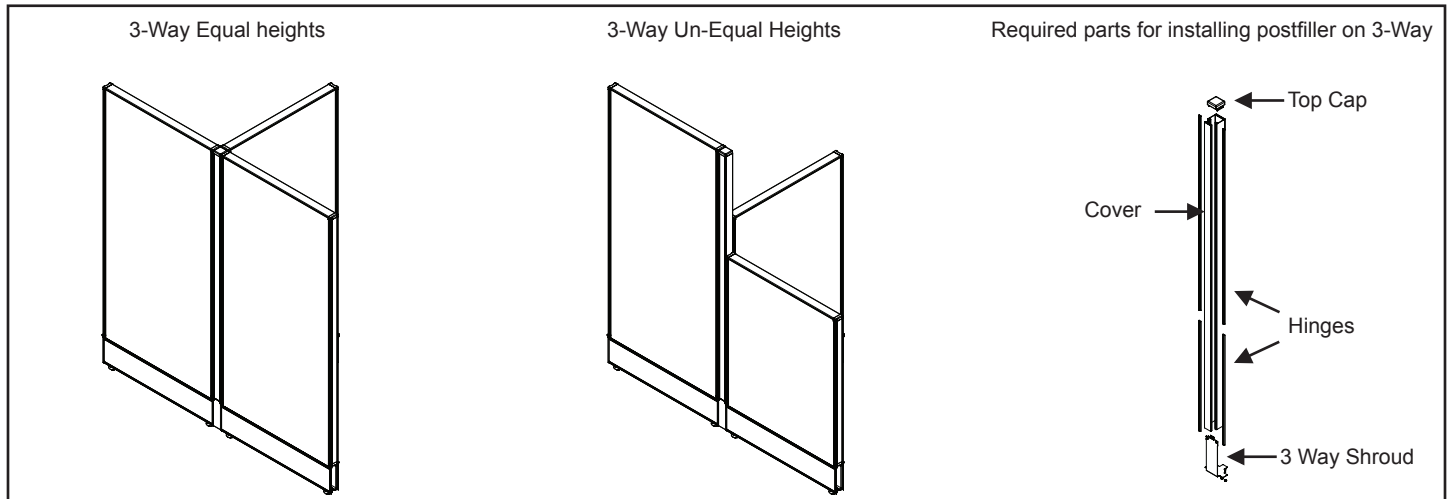


Step 1 - Remove both hanger frame top caps.

Step 2 - From the side place postfiller body into the opening. Hold post filler by installing hinges.



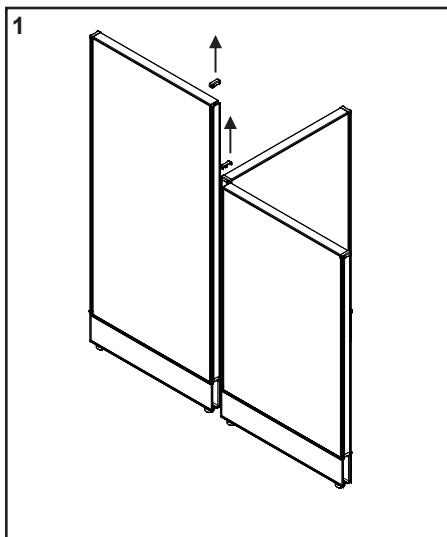


Step 3 - Install 3-way Shroud using the key slots of the bottom member raceway and (2) #6 hex nuts.

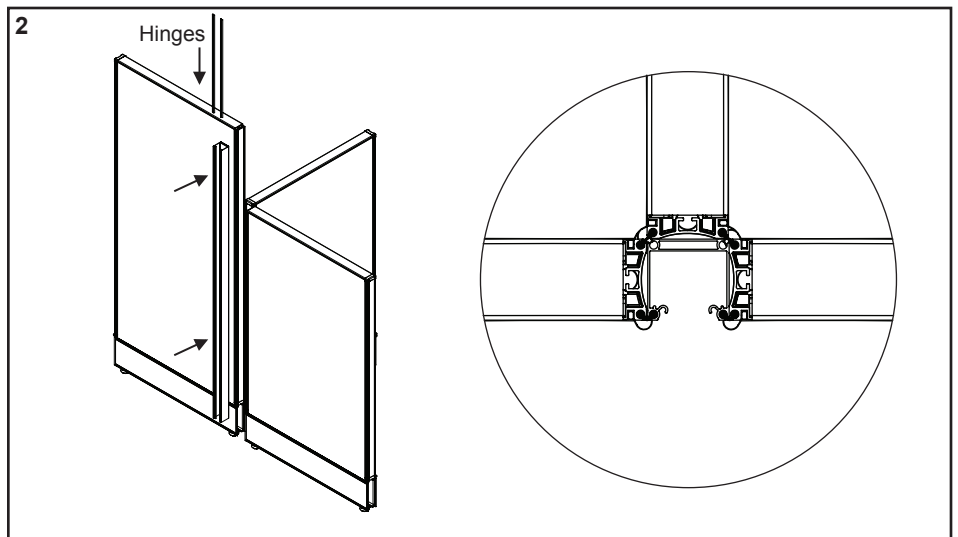


Step 4 - Install postfiller cover.

Step 5 - Re-install hanger frame topcaps. Install postfiller topcap.

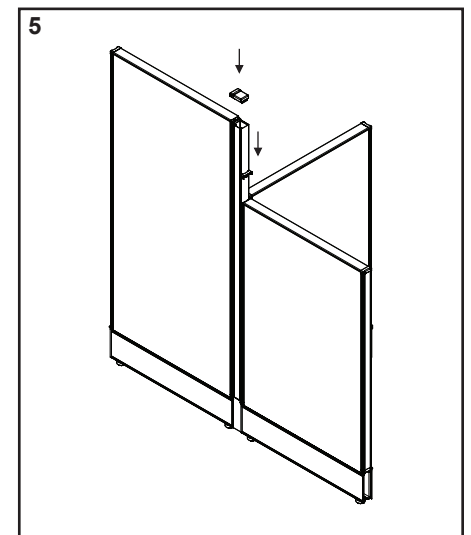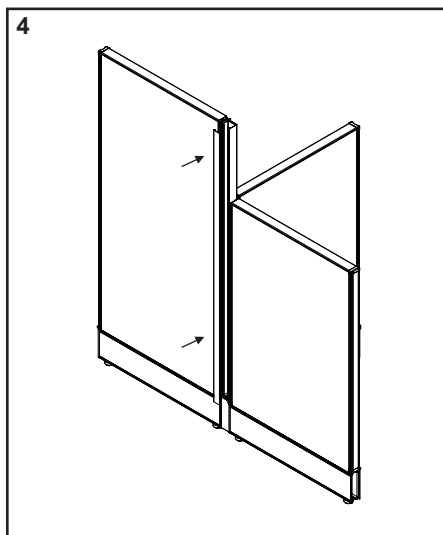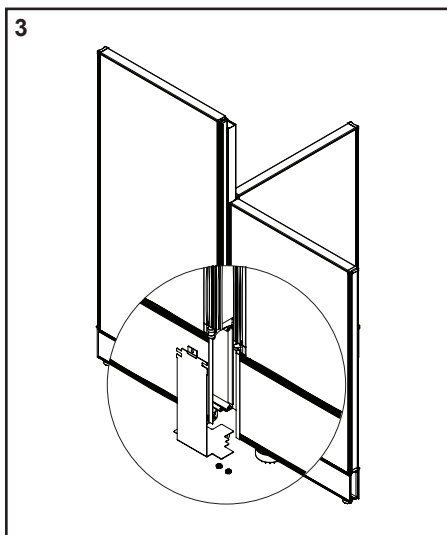

4-Way Equal Heights

Parts required.

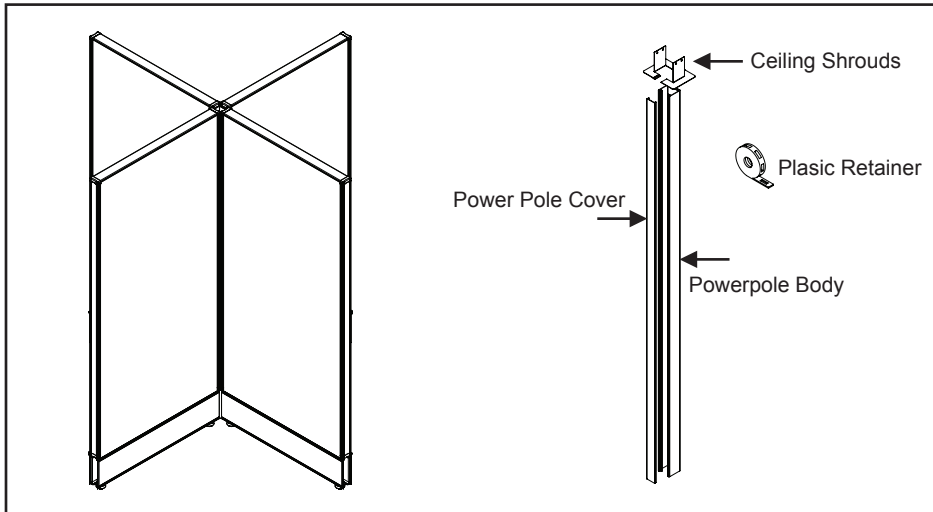

Step 1 - Install power pole body between top of the panels and ceiling.

Step 2 - Install power pole cover.

Step 3 - Install ceiling shrouds. Plastic retainers to ceiling grid. The pressure from the four panels will hold the pole. Pole must slide about 1" into the channel.

