

# Matrix Linear Trim Installation

Model# P-MXINSTRUCT09 Revised 2/16/11

NOTE: 2-way, 3-way, 4-way, Endcap and Hilo Die cast Topcaps are pre-assembled at factory. They are shown "exploded" for illustration only.

**STEP 1** - Fasten the Linear Top Tile Retainer (1) to Frame (3) using #8-32 x 1/2" Pan Head Thread Rolling Screws-Label "Type C" (2).



**STEP 2** - Install all ENDCAPS (5) and STRAIGHT HILOS (4) on frame ends by engaging clips into large rectangular holes on frame sides. NOTE - ENDCAPS AND STRAIGHT HILO VERTICALS HAVE RAISED CHANNEL ON BACK.




Endcap/Straight Hilo Profile

**STEP 3** - Install all CORNER HILOS (10) onto all connectors, by engaging clips into large rectangular holes on frame sides. NOTE - CORNER HILOS HAVE FLAT BACK.



Corner Hilo Profile

**STEP 4** - Install 180 Degree Connector Pin (11) between any topcaps at a straight/180 degree condition. Tap pin into first topcap, then tap topcaps together until flush.

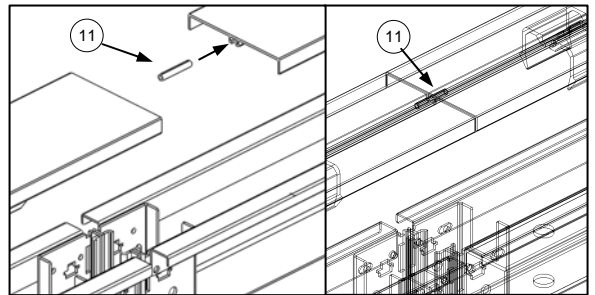

**STEP 5** - Press the Topcap Assembly (9) into place over Linear Top Tile Retainer (1). Topcap clips (8) will snap into retainers.

