
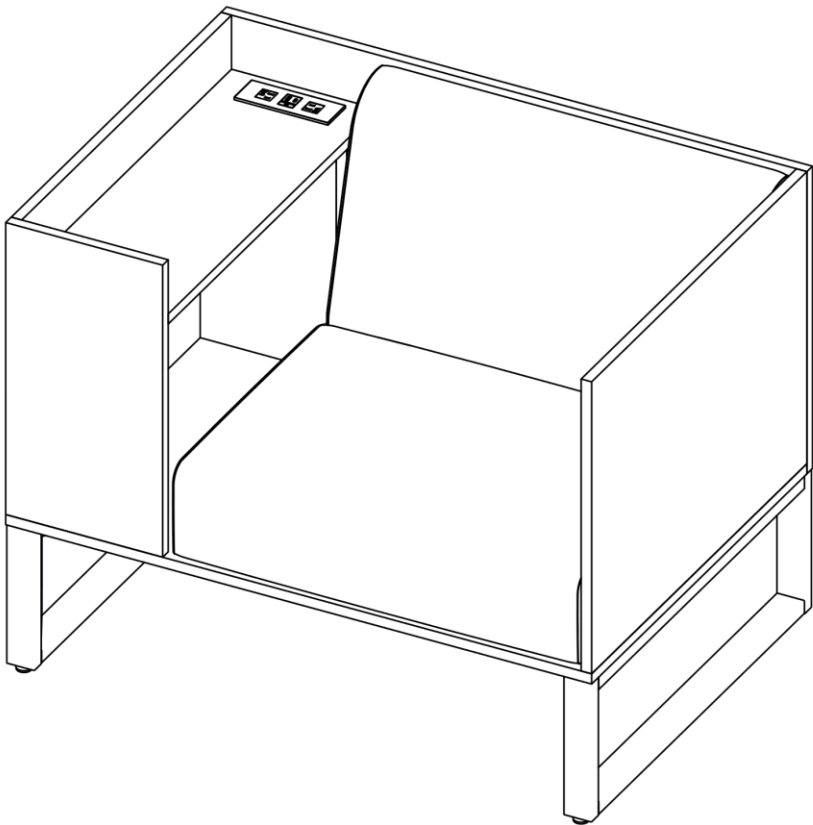
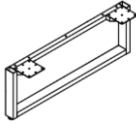




Date	Page No.	Description of change	Name
2/1/2022	1-8	Released	S. Powers
2/7/2022	4	Added mending plate for ganging units	S. Powers
5/16/2022	7-8	Changed screws from 7/8" to 3/4"	S. Powers
6/13/2025	9	Changed power unit to Domino	S. Powers



Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P1	WFS-OL1130FS-2	RC-SOL1130FS-2	Freestanding O-Leg 11"H x 30"W	
P2	WFS-GL51618	RWFS-GL51618-I	5/16-18 Glide	
P3	RH-QS0934	RH-QS0934	#9 X 3/4" Worksurface Screw	
P4	T-UCK3634	RWPS-HS36	U-Channel	
P5	RH-SMZFP10112	RH-SMZFP10112	#10 X 1 1/2" Flat Head Wood Screw	
P6	E-DOMINO	RE-DOMINOxx (xx = B, W or MS)	Power Unit	
P7	RH-90033A153	RH-90033A153	#6 x 5/8" Flat Head Screw	
P8	WFS-MEND	RWFS-MEND	Mending Plate	
P9	RH-WSFP1034	RH-WSFP1034	#10 x 3/4" Flat Head Screw	


Chatham Cove Installation Instructions

Step 1: Install glides into the bottom of each O-Leg.

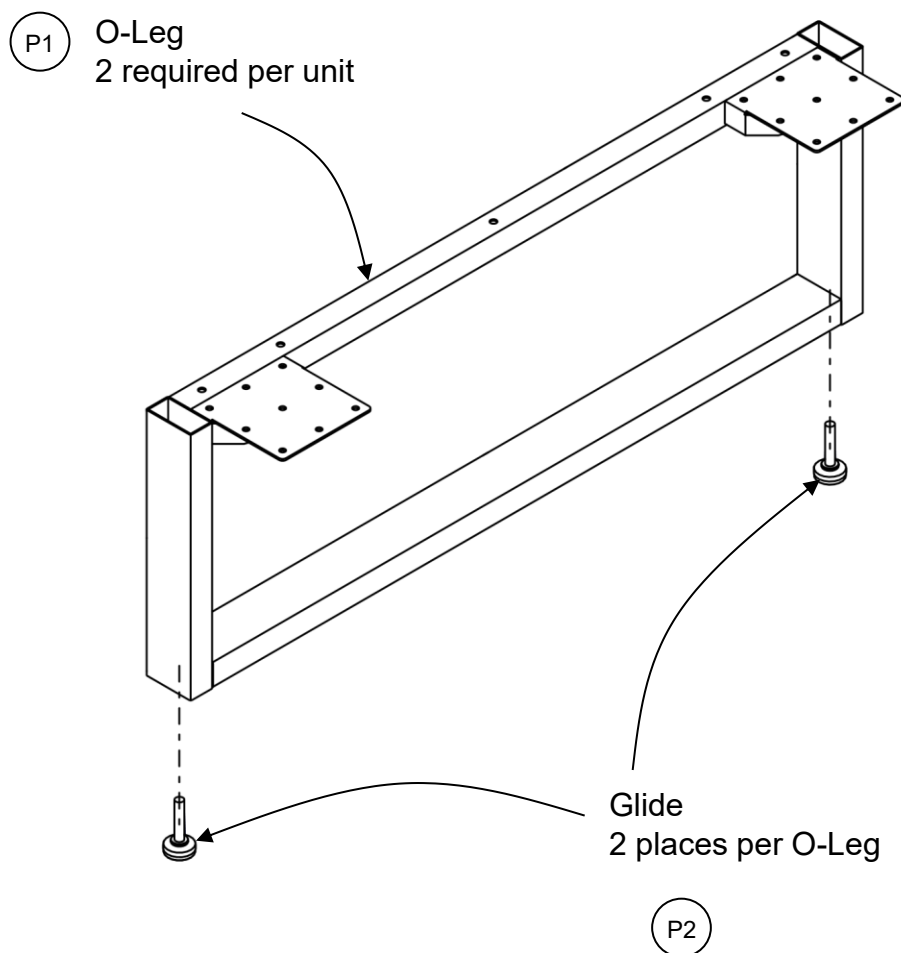

Chatham Cove Installation Instructions


Step 2 (optional): If ganging to Chatham Cove units together, align units flush and install mending plates using #10 x $\frac{3}{4}$ " screws.

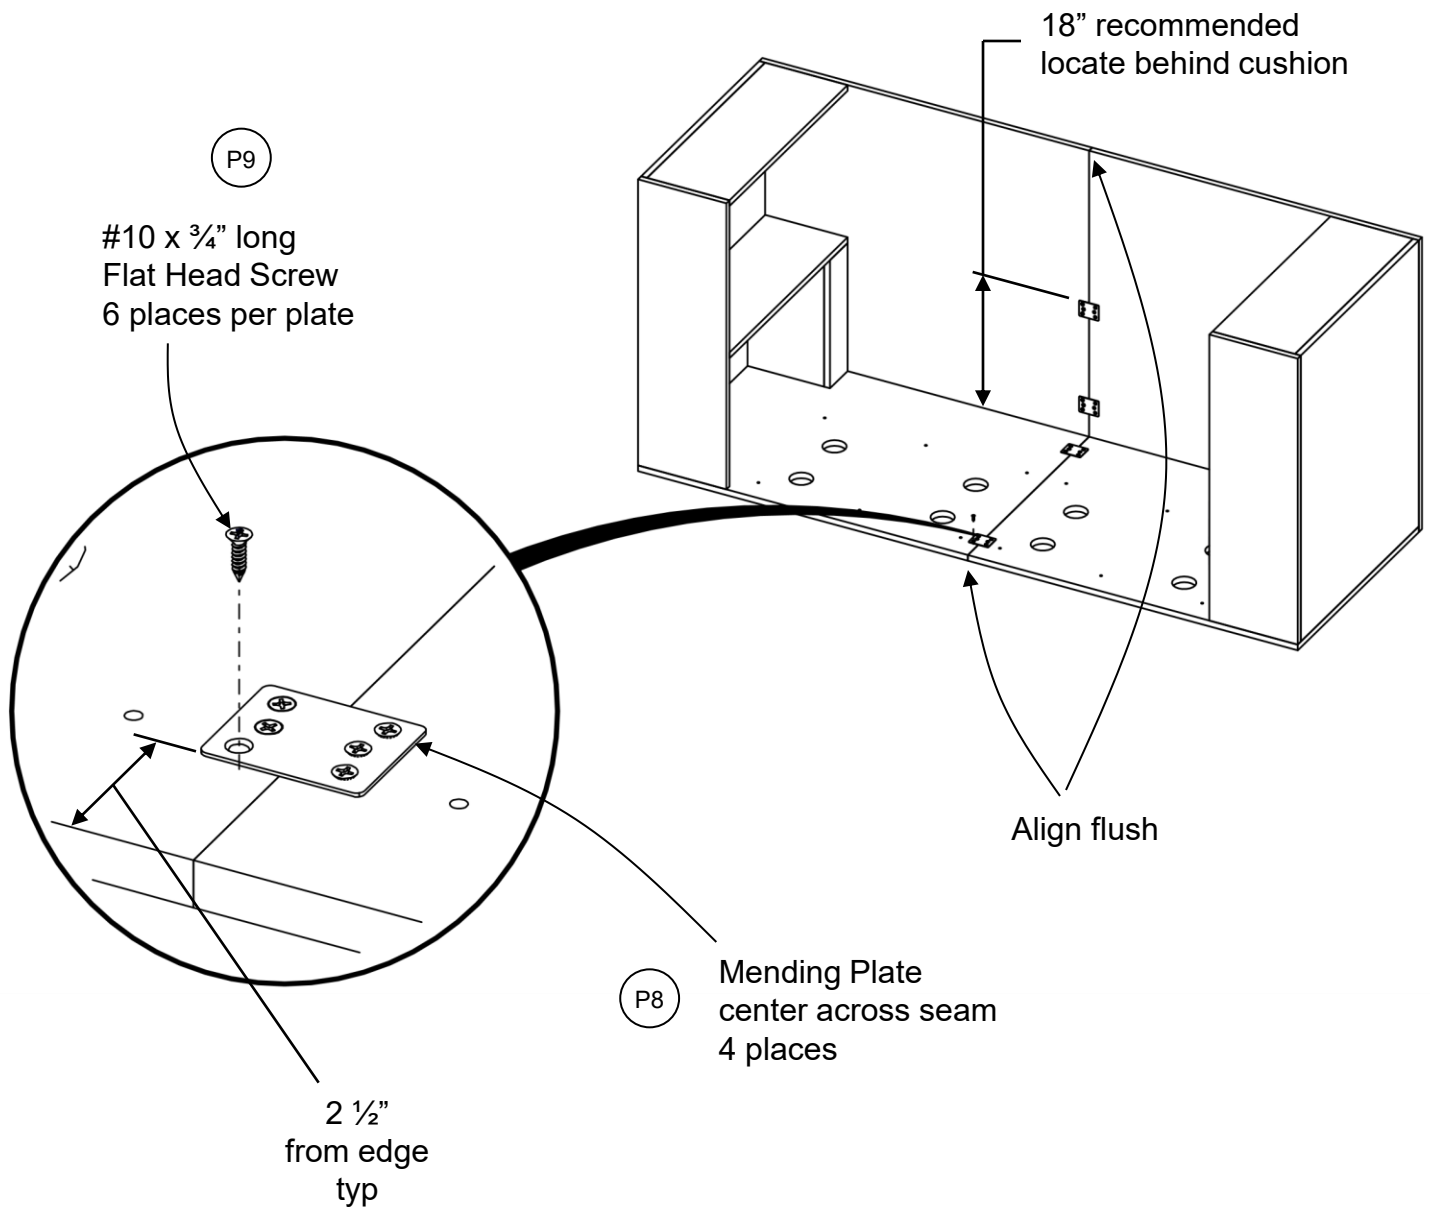


Chatham Cove Installation Instructions

Step 3: Install back cushion.


Velcro strips
Remove adhesive backing
and firmly press cushion
onto the back panel

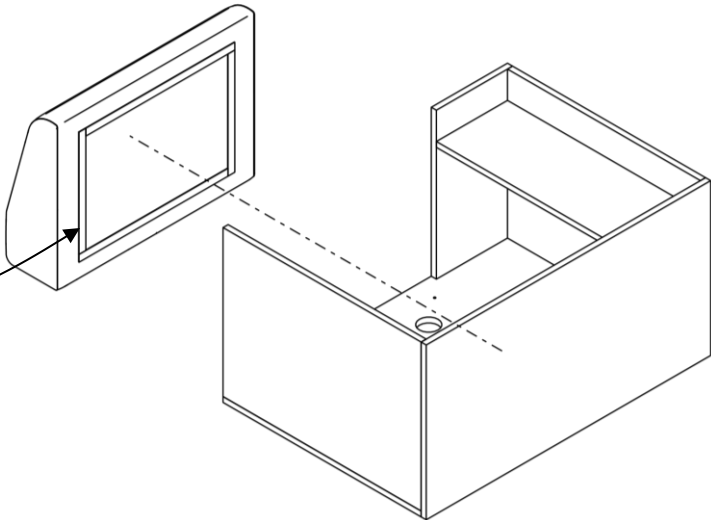


Cushion to be flush or
below the back panel

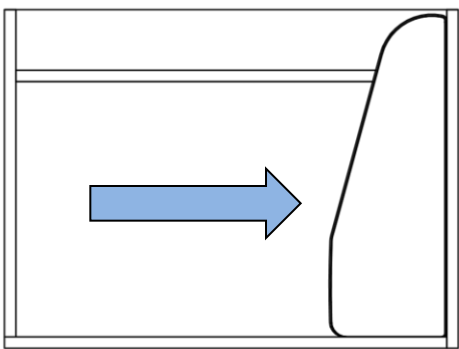

Units with open side
install cushions flush to
back panel

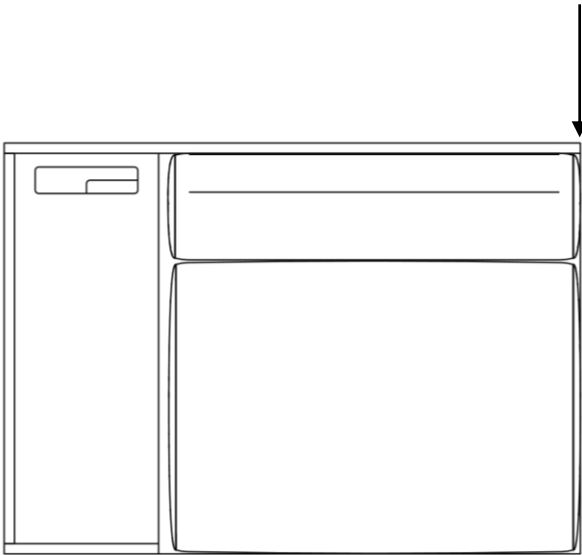


Units with closed side
install cushions flush to
side panel

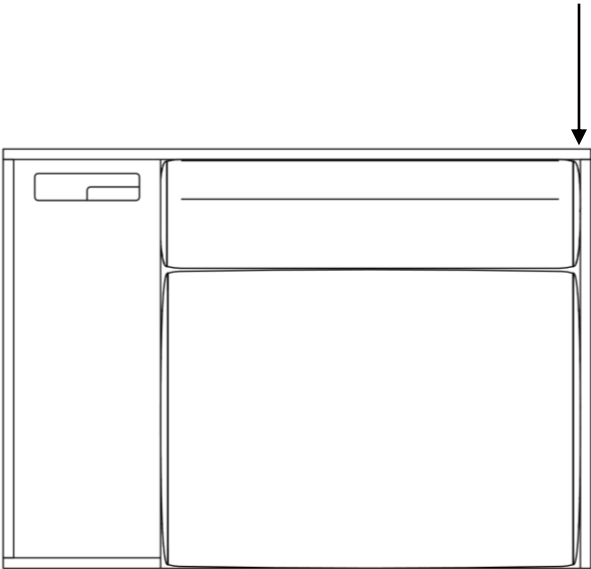


Chatham Cove Installation Instructions

Step 4: Install front cushion.

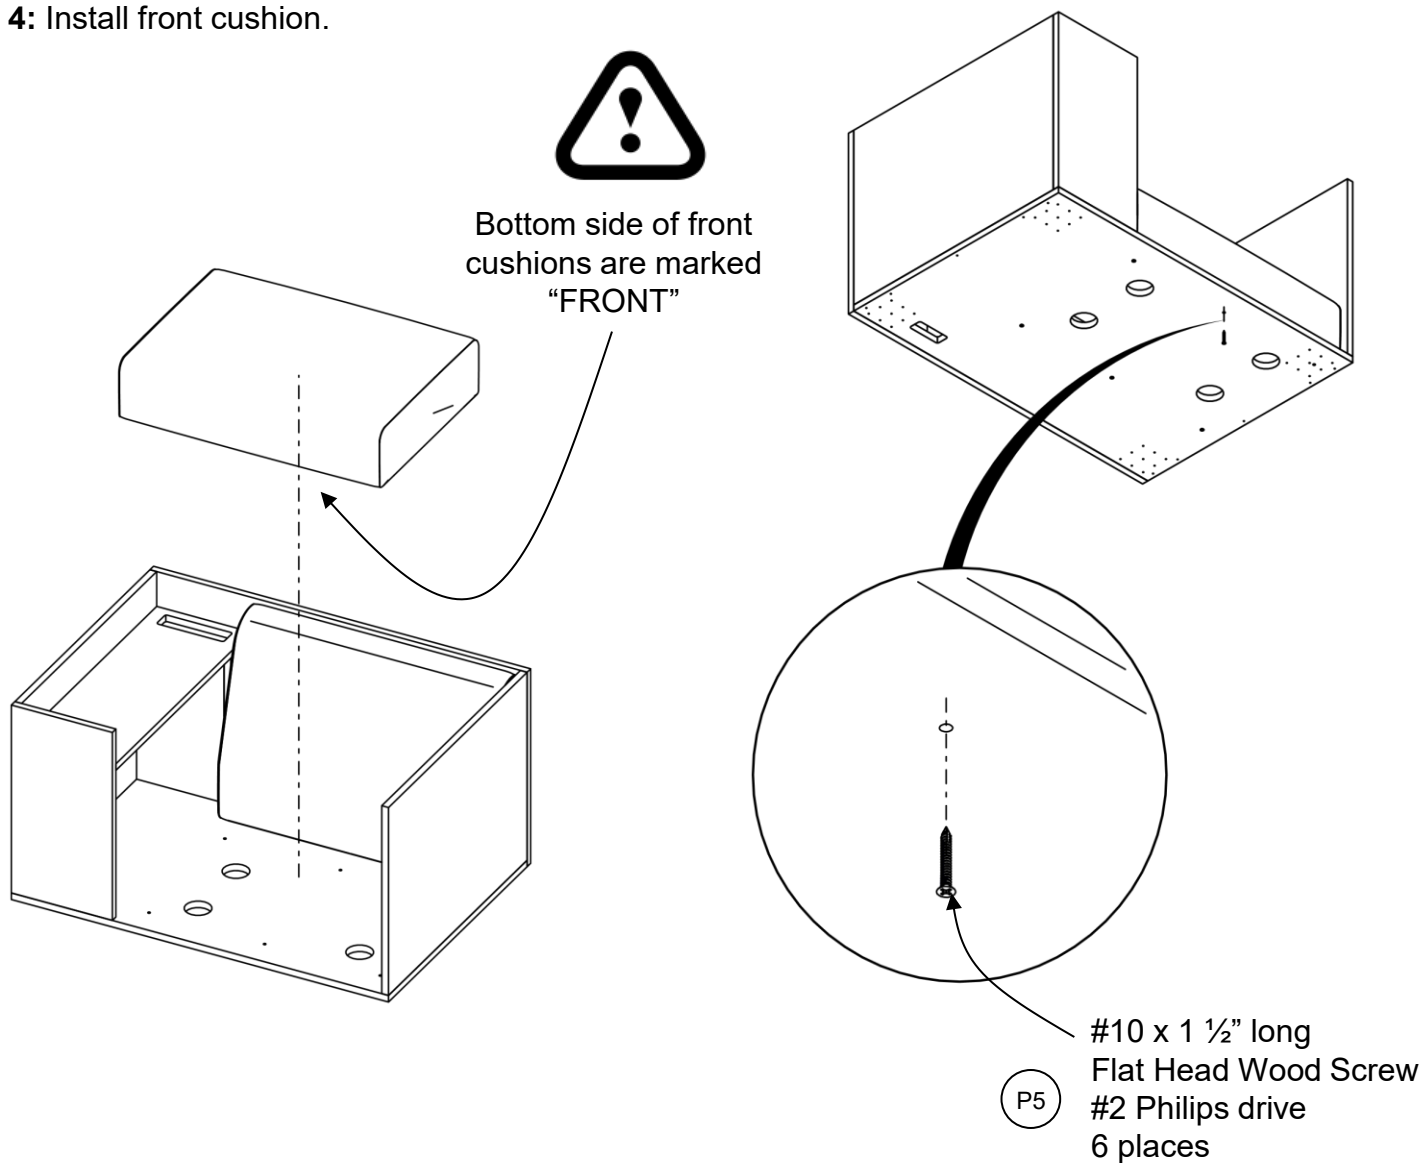



Push front cushion firmly against back cushion to eliminate any gaps. Ensure foam does not buckle or cause wrinkles.

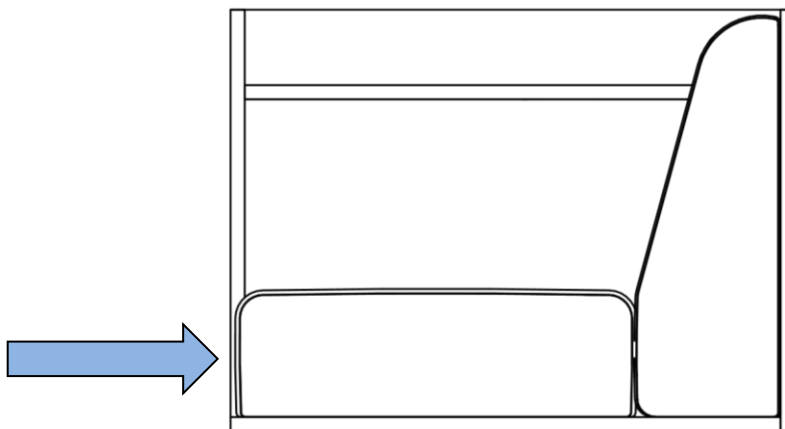


Chatham Cove Installation Instructions

Step 5: Align O-Legs to the Chatham Cove casegood and secure using #9 x 7/8" worksurface screws.

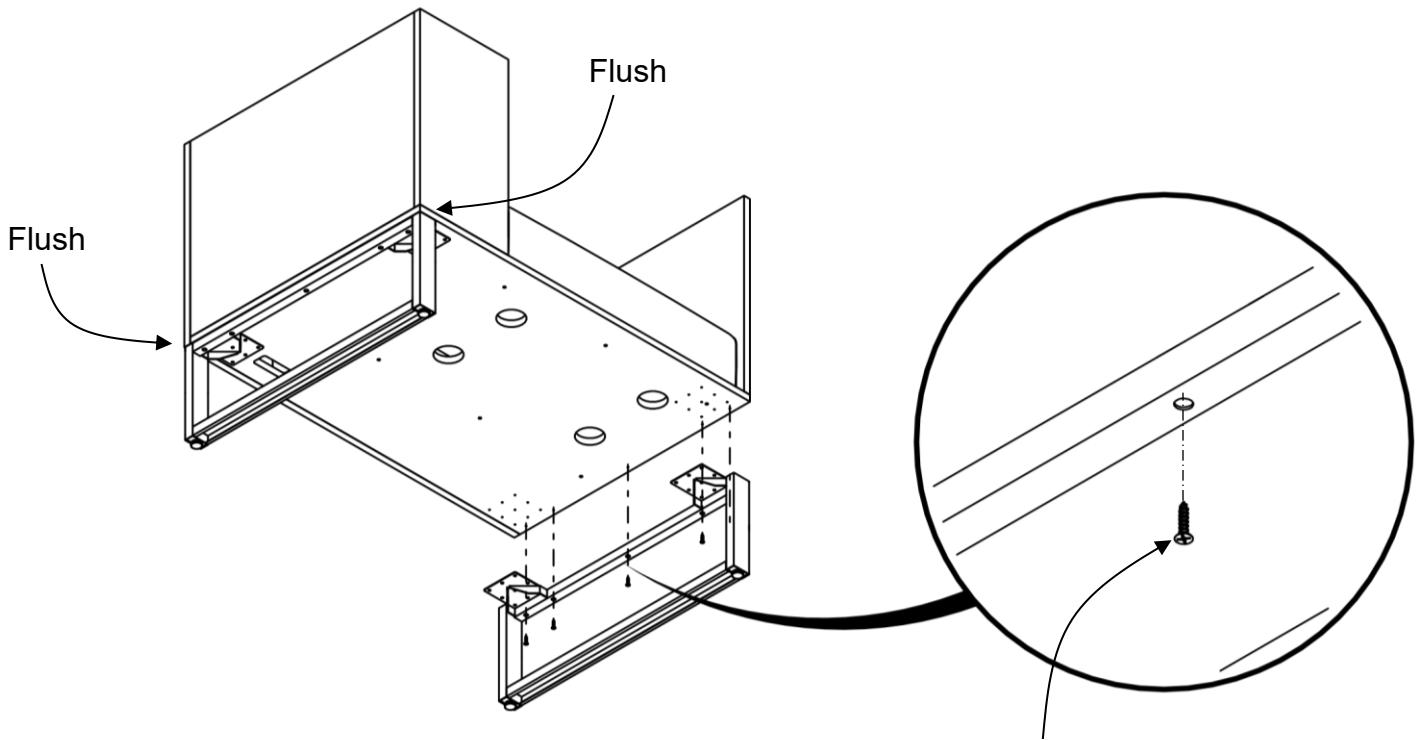

P9


#10 x 3/4" long
Flat Head Wood Screw
#2 Philips drive
5 places per O-leg

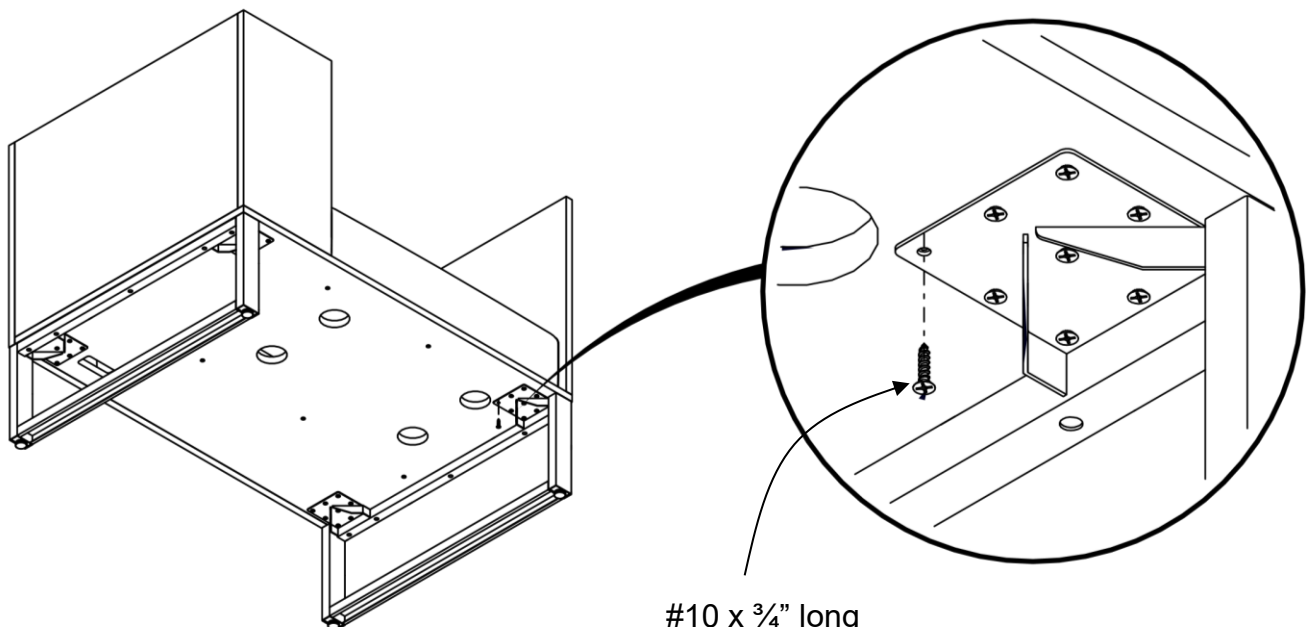

#10 x 3/4" long
Flat Head Wood Screw
#2 Philips drive
18 places per O-leg

Chatham Cove Installation Instructions

Step 6: Install U-Channel to the Chatham Cove casegood and secure using #9 x 7/8" worksurface screws.

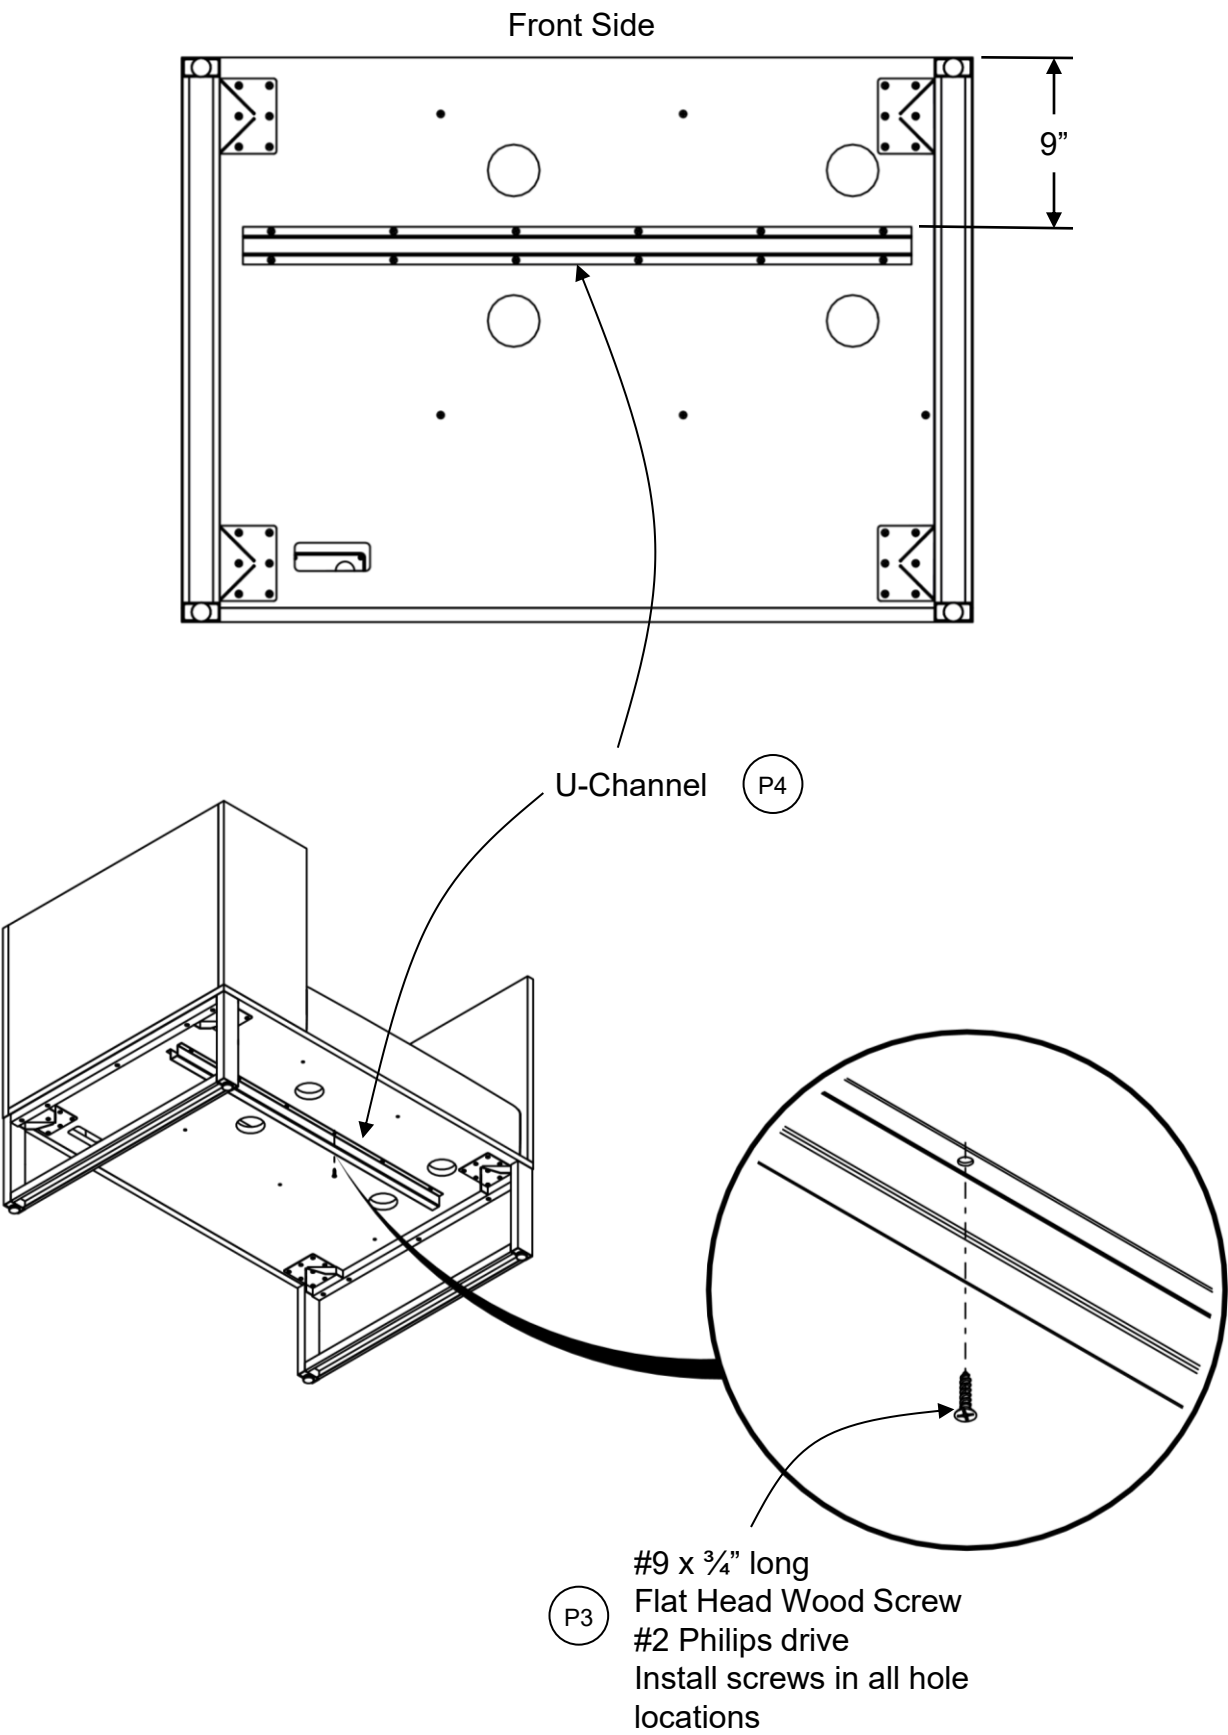

Chatham Cove Installation Instructions


Step 7 (optional): Install power unit.

Domino
Power Unit

P6

#6 x 5/8" long
Flat Head Screw
#2 Philips drive
2 places

P7

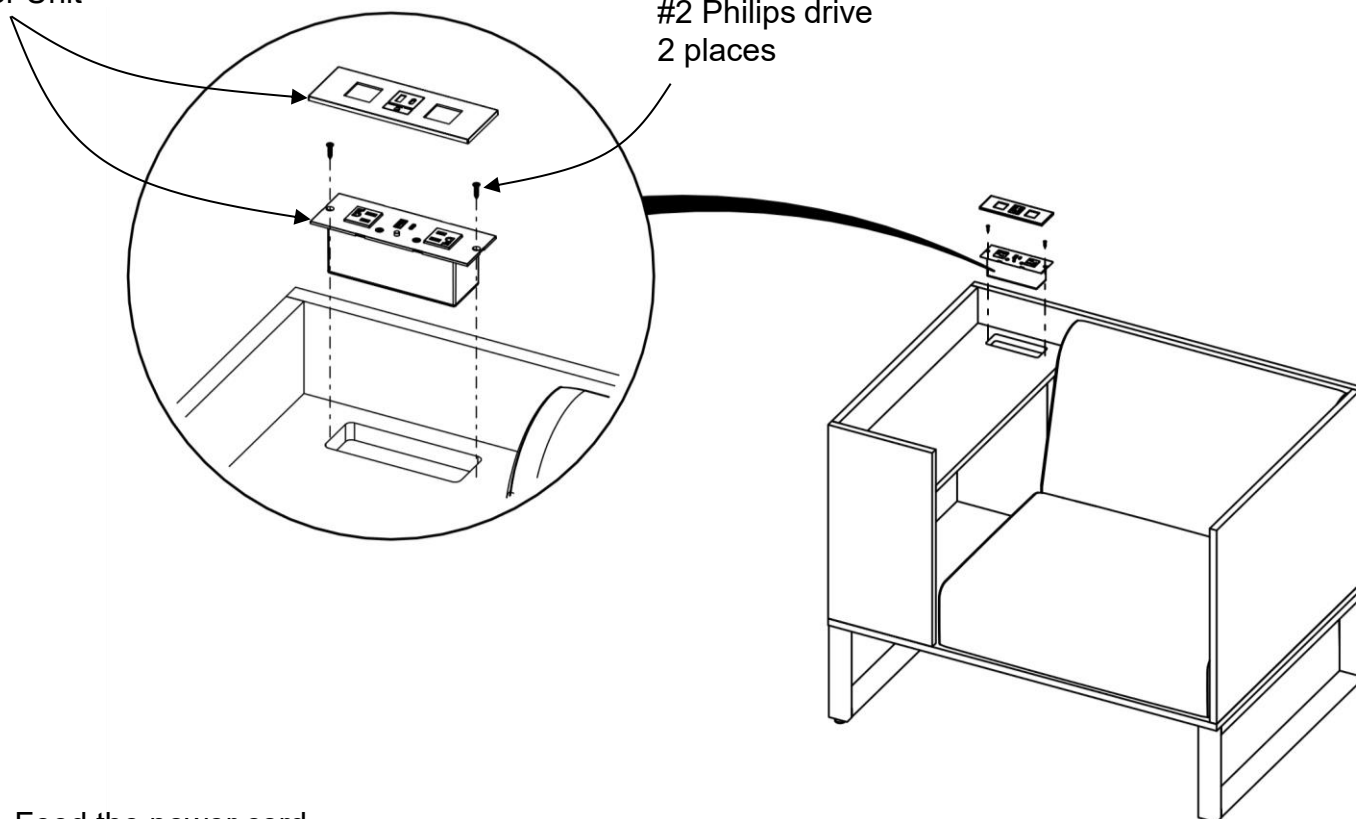

Feed the power cord
through the opening at
the bottom of the unit

