

STEP 2 = ALIGNMENT


Align slots in bracket with threaded holes in HOL


STEP 3 = BRACKET CONNECTION

Place brackets down on HOL as shown. Secure using (2x per bracket) 1/4-20 3/4"LG Black Bolt, and 7/8" Washer

TOOLS REQUIRED: POWER DRILL + PHILLIPS HEAD

AIS www.ais-inc.com							
	COLLECTION: LHKRLL A	IG	HOL				
	DRAWING NUM LHKRLL-A PART NUMBER -	2 OF 3	date 2/18/2023				
	DRAWN BY	CHECKED BY	SCALE 1:4		REV -		

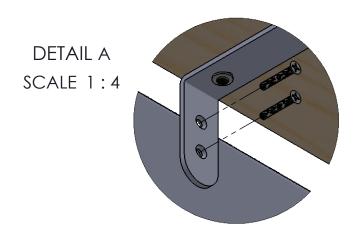

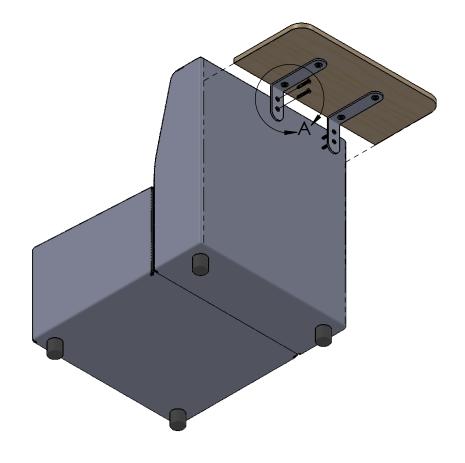

STEP 1 = CHAIR

Carefully unpackage chair and set on its legs

STEP 2 = ALIGNMENT

Align holes in bracket with holes on backside of chair

STEP 3 = BRACKET-CHAIR CONNECTION

Secure using (2x per bracket)5/16-18 x 2"LG Screw

AIS www.ais-inc.com									
COLLECTION:									
LHKRLL ASSEMBLY DRAWING CHAIR									
DRAWING NUM	1BER								
LHKRLL-A	3 OF 3		DATE						
PART NUMBER									
-			12/18/2023						
DRAWN BY	CHECKED BY	SCALE			REV				
()ND			1.12)	_				