

# Paxton

Task Chair (3400 Series)

---



Assembly Instructions

## INCLUDED PARTS




Left Arm/Leg x1



Right Arm/Leg x1



Cross Stretcher x1

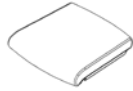

Seat x1



Seat Back x1



M6 x 16mm Bolts x2



M6 x 30mm Bolts x8




M6 x 20mm Bolts x4



Allen Wrench x1


## STEP 1

Take both left and right arms/legs and stand them up. Take the cross stretcher and place it in the center of both the side frames so that it lines up with the bolt holes on each. Using the allen wrench screw in the two M6 x 16mm bolts underneath, one on each side. Do not tighten screws yet.

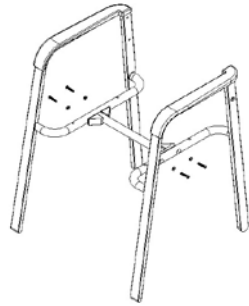

## STEP 2

Take the seat back and align it so that the pre-drilled bolt holes line up with the side frames pre-drilled bolt holes (see image for reference). Take the four M6 x 20mm bolts (2 on each side) using the allen wrench screw them in the pre-drilled holes. Do not tighten yet.

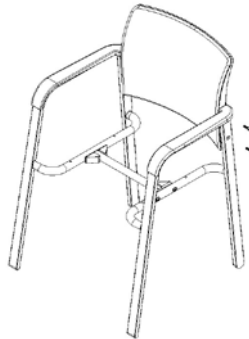

## STEP 3

The cross bar should be lined up with the pre-drilled bolt holes on the side frames. Take four of the M6 x 30mm bolts using the allen wrench screw in two on each side in the pre-drilled holes. Do not tighten yet.



## STEP 4

Place Chair on a level floor. Tighten all bolts. If the chair wobbles, loosen and relevel. Once relevelled, re-tighten screws (see Step 1, 2 and 3 images for reference).

## STEP 6

Sit back, relax and enjoy your new Paxton chair.

