



Calibrate Conference Tables

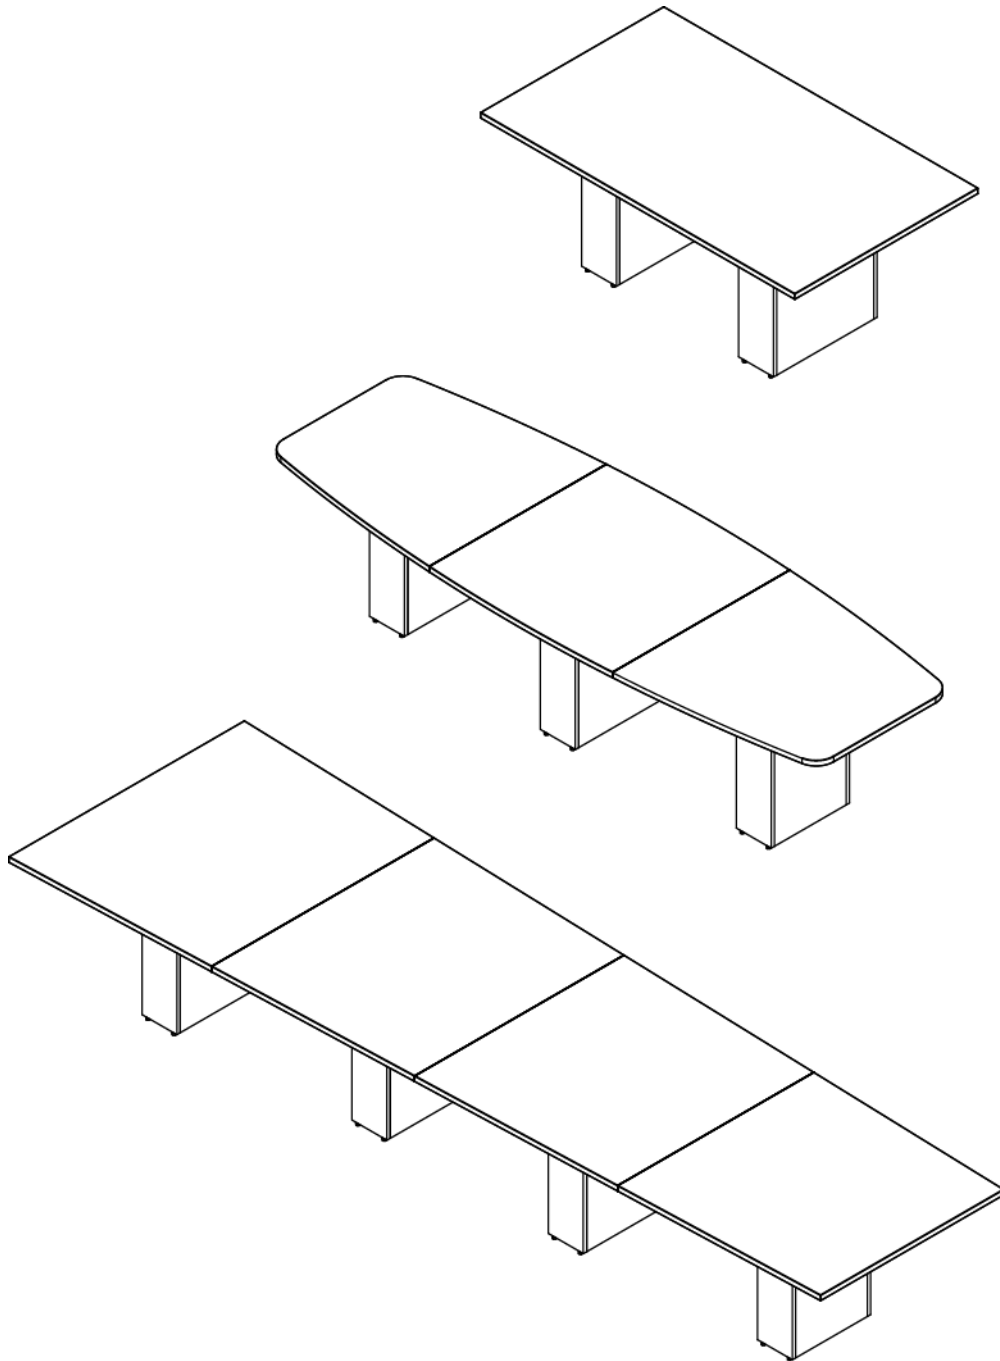


Date	Page No.	Description of change	Name
6/22/2018	1-10	Released	S. Powers
7/26/2018	10	Added flat plate installation	S. Powers
12/10/18	11	Added AIS Power Unit	S. Powers
4/10/19	4	Updated views to showing cable clearance	S. Powers
6/14/19	3	Added trough cap	S. Powers
8/27/19	4	Added #8 screw	S. Powers
01/21/20	4	New panel fasteners	P. Fortin
7/28/2020	10-11,13	Added 5 Base Tables. Updated Power	S. Powers
02/28/2025	5-11, 13	Changed 60D to 59D, Domino Power	S. Powers
03/19/2025	16-25	Added details for connecting power units	S. Powers
11/12/2025	20-21	Updated hardwired power installation	S. Powers


Calibrate Conference Tables

Trough Installation


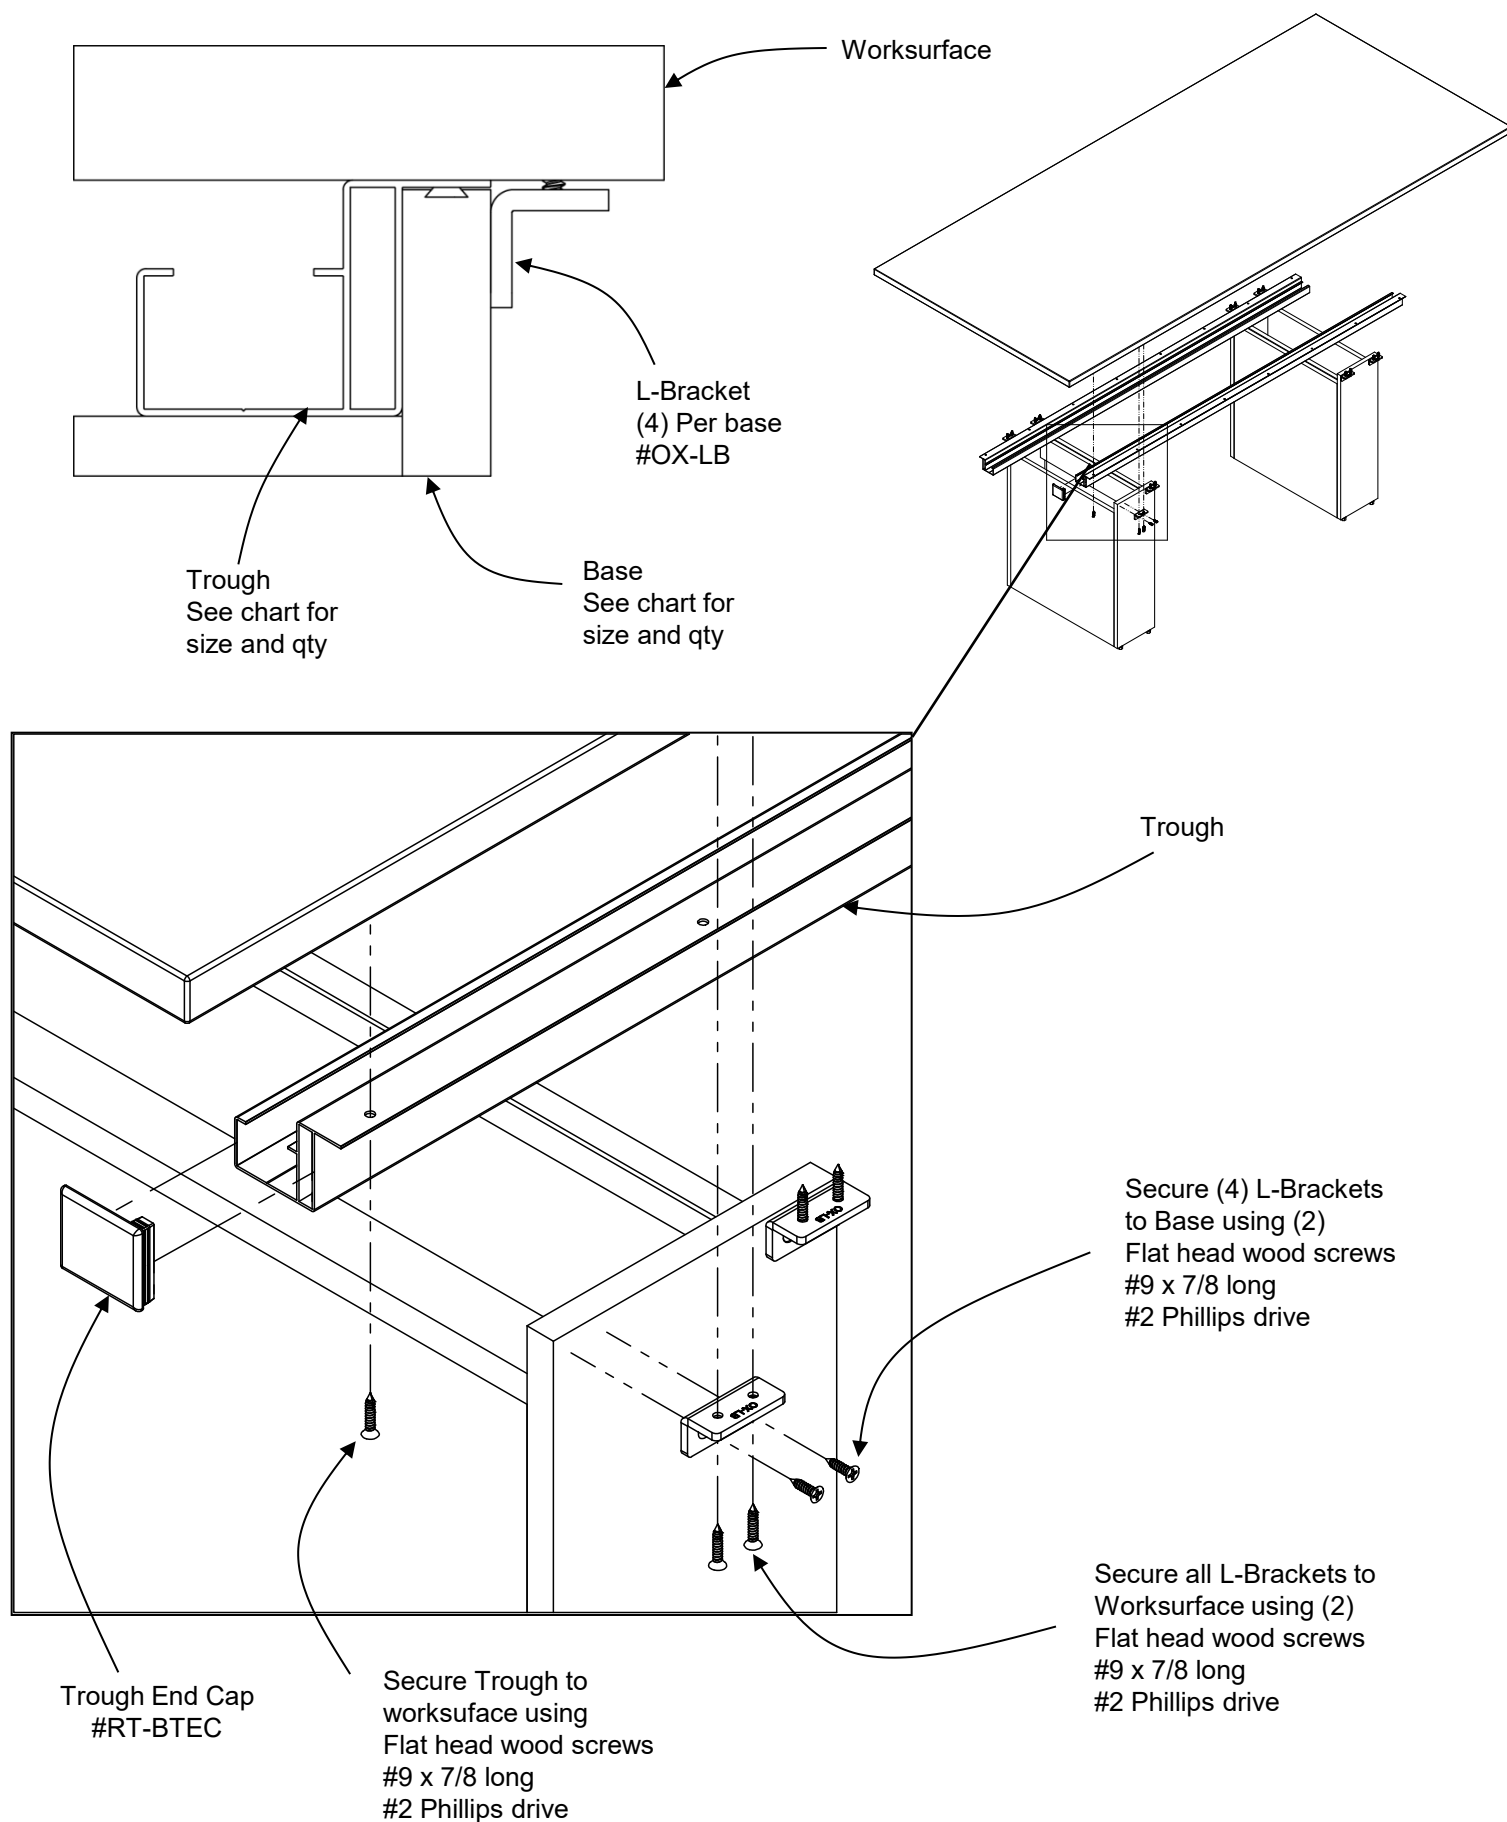


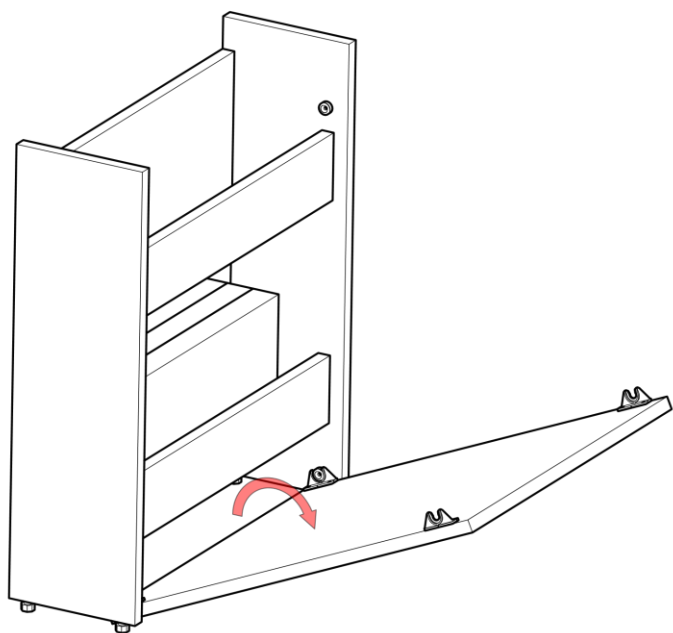

Pivot or remove panel as necessary.

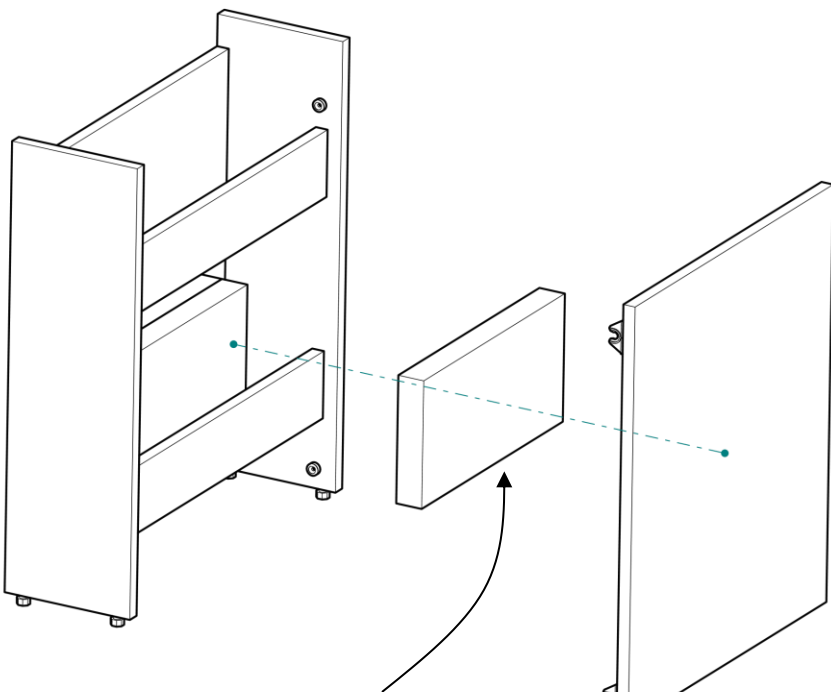

Stack Counterweights as required. See Chart.

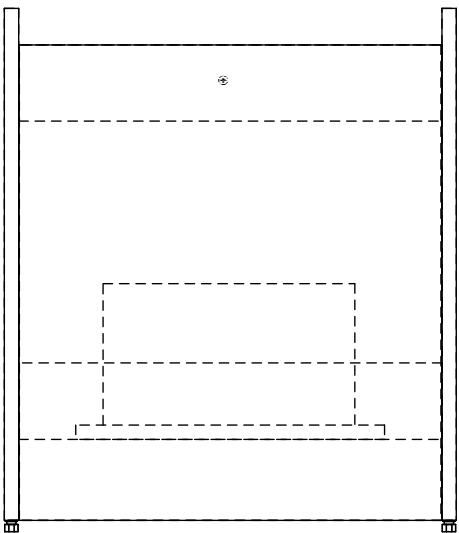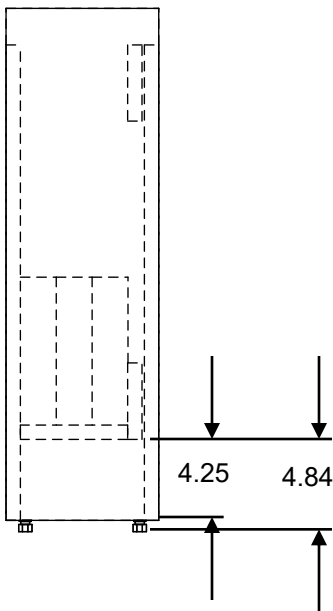

Calibrate Conference Tables

2 Base Tables

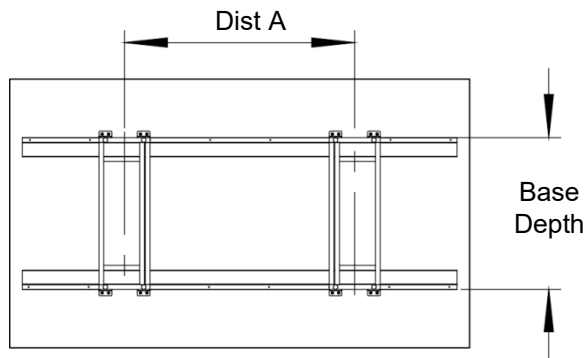


Image	Worksurface Size				Base Depth				Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4							
	42	42	42	72	24	24	na	na	2	36	0	2	44	na	na
	42	42	42	78	24	24	na	na	2	39	0	2	50	na	na
	42	42	42	84	24	24	na	na	2	42	0	2	56	na	na
	42	42	42	90	24	24	na	na	2	45	0	2	62	na	na
	42	42	42	96	24	24	na	na	2	48	0	2	68	na	na
	47	47	47	72	24	24	na	na	2	36	0	2	44	na	na
	47	47	47	78	24	24	na	na	2	39	4	2	50	na	na
	47	47	47	84	24	24	na	na	2	42	4	2	56	na	na
	47	47	47	90	24	24	na	na	2	45	4	2	62	na	na
	47	47	47	96	24	24	na	na	2	48	4	2	68	na	na
	54	54	54	72	30	30	na	na	2	36	0	2	44	na	na
	54	54	54	78	30	30	na	na	2	39	2	2	50	na	na
	54	54	54	84	30	30	na	na	2	42	2	2	56	na	na
	54	54	54	90	30	30	na	na	2	45	2	2	62	na	na
	54	54	54	96	30	30	na	na	2	48	2	2	68	na	na
	59	59	59	72	30	30	na	na	2	36	0	2	44	na	na
	59	59	59	78	30	30	na	na	2	39	6	2	50	na	na
	59	59	59	84	30	30	na	na	2	42	6	2	56	na	na
	59	59	59	90	30	30	na	na	2	45	6	2	62	na	na
	59	59	59	96	30	30	na	na	2	48	6	2	68	na	na
	30	42	30	72	24	24	na	na	2	36	0	2	44	na	na
	30	42	30	78	24	24	na	na	2	39	0	2	50	na	na
	30	42	30	84	24	24	na	na	2	42	0	2	56	na	na
	30	42	30	90	24	24	na	na	2	45	0	2	62	na	na
	30	42	30	96	24	24	na	na	2	48	0	2	68	na	na
	35	47	35	72	24	24	na	na	2	36	0	2	44	na	na
	35	47	35	78	24	24	na	na	2	39	4	2	50	na	na
	35	47	35	84	24	24	na	na	2	42	4	2	56	na	na
	35	47	35	90	24	24	na	na	2	45	4	2	62	na	na
	35	47	35	96	24	24	na	na	2	48	4	2	68	na	na
	42	54	42	72	30	30	na	na	2	36	0	2	44	na	na
	42	54	42	78	30	30	na	na	2	39	2	2	50	na	na
	42	54	42	84	30	30	na	na	2	42	2	2	56	na	na
	42	54	42	90	30	30	na	na	2	45	2	2	62	na	na
	42	54	42	96	30	30	na	na	2	48	2	2	68	na	na
	47	59	47	72	30	30	na	na	2	36	0	2	44	na	na
	47	59	47	78	30	30	na	na	2	39	6	2	50	na	na
	47	59	47	84	30	30	na	na	2	42	6	2	56	na	na
	47	59	47	90	30	30	na	na	2	45	6	2	62	na	na
	47	59	47	96	30	30	na	na	2	48	6	2	68	na	na
	42	48	54	72	18	24	na	na	2	36	2	2	44	na	na
	42	48	54	78	18	24	na	na	2	39	4	2	50	na	na
	42	48	54	84	18	24	na	na	2	42	4	2	56	na	na
	42	48	54	90	18	24	na	na	2	45	4	2	62	na	na
	42	48	54	96	18	24	na	na	2	48	4	2	68	na	na
	47	53	59	72	24	30	na	na	2	36	4	2	44	na	na
	47	53	59	78	24	30	na	na	2	39	4	2	50	na	na
	47	53	59	84	24	30	na	na	2	42	4	2	56	na	na
	47	53	59	90	24	30	na	na	2	45	4	2	62	na	na
	47	53	59	96	24	30	na	na	2	48	4	2	68	na	na

Calibrate Conference Tables

3 Base Tables

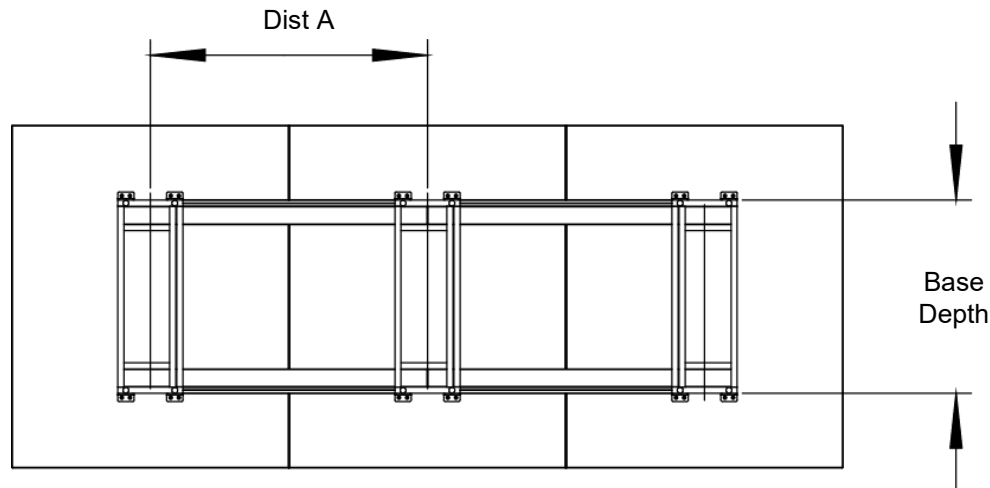




Image	Worksurface Size				Base Depth				Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4							
	42	42	42	102	24	24	24	na	3	34	0	4	37 15/16	n/a	n/a
	42	42	42	108	24	24	24	na	3	36	0	4	39 15/16	n/a	n/a
	42	42	42	114	24	24	24	na	3	38	0	4	42 15/16	n/a	n/a
	42	42	42	120	24	24	24	na	3	40	0	4	45 15/16	n/a	n/a
	42	42	42	126	24	24	24	na	3	42	0	4	48 15/16	n/a	n/a
	42	42	42	132	24	24	24	na	3	44	0	4	51 15/16	n/a	n/a
	42	42	42	138	24	24	24	na	3	46	0	4	54 15/16	n/a	n/a
	42	42	42	144	24	24	24	na	3	48	0	4	57 15/16	n/a	n/a
	47	47	47	102	24	24	24	na	3	34	0	4	37 15/16	n/a	n/a
	47	47	47	108	24	24	24	na	3	36	0	4	39 15/16	n/a	n/a
	47	47	47	114	24	24	24	na	3	38	0	4	42 15/16	n/a	n/a
	47	47	47	120	24	24	24	na	3	40	0	4	45 15/16	n/a	n/a
	47	47	47	126	24	24	24	na	3	42	0	4	48 15/16	n/a	n/a
	47	47	47	132	24	24	24	na	3	44	0	4	51 15/16	n/a	n/a
	47	47	47	138	24	24	24	na	3	46	0	4	54 15/16	n/a	n/a
	47	47	47	144	24	24	24	na	3	48	0	4	57 15/16	n/a	n/a
	54	54	54	102	30	30	30	na	3	34	0	4	37 15/16	n/a	n/a
	54	54	54	108	30	30	30	na	3	36	0	4	39 15/16	n/a	n/a
	54	54	54	114	30	30	30	na	3	38	0	4	42 15/16	n/a	n/a
	54	54	54	120	30	30	30	na	3	40	0	4	45 15/16	n/a	n/a
	54	54	54	126	30	30	30	na	3	42	0	4	48 15/16	n/a	n/a
	54	54	54	132	30	30	30	na	3	44	0	4	51 15/16	n/a	n/a
	54	54	54	138	30	30	30	na	3	46	0	4	54 15/16	n/a	n/a
	54	54	54	144	30	30	30	na	3	48	0	4	57 15/16	n/a	n/a
	59	59	59	102	30	30	30	na	3	34	6	4	37 15/16	n/a	n/a
	59	59	59	108	30	30	30	na	3	36	6	4	39 15/16	n/a	n/a
	59	59	59	114	30	30	30	na	3	38	6	4	42 15/16	n/a	n/a
	59	59	59	120	30	30	30	na	3	40	6	4	45 15/16	n/a	n/a
	59	59	59	126	30	30	30	na	3	42	6	4	48 15/16	n/a	n/a
	59	59	59	132	30	30	30	na	3	44	6	4	51 15/16	n/a	n/a
	59	59	59	138	30	30	30	na	3	46	6	4	54 15/16	n/a	n/a
	59	59	59	144	30	30	30	na	3	48	6	4	57 15/16	n/a	n/a

Calibrate Conference Tables

3 Base Tables Cont'd

Image	Worksurface Size				Base Depth				Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4							
	30	42	30	102	18	24	18	na	3	34	0	4	37 15/16	n/a	n/a
	30	42	30	108	18	24	18	na	3	36	0	4	39 15/16	n/a	n/a
	30	42	30	114	18	24	18	na	3	38	0	4	42 15/16	n/a	n/a
	30	42	30	120	18	24	18	na	3	40	0	4	45 15/16	n/a	n/a
	30	42	30	126	18	24	18	na	3	42	0	4	48 15/16	n/a	n/a
	30	42	30	132	18	24	18	na	3	44	0	4	51 15/16	n/a	n/a
	30	42	30	138	18	24	18	na	3	46	0	4	54 15/16	n/a	n/a
	30	42	30	144	18	24	18	na	3	48	0	4	57 15/16	n/a	n/a
	36	47	35	102	18	24	18	na	3	34	0	4	37 15/16	n/a	n/a
	35	47	35	108	18	24	18	na	3	36	0	4	39 15/16	n/a	n/a
	35	47	35	114	18	24	18	na	3	38	0	4	42 15/16	n/a	n/a
	35	47	35	120	18	24	18	na	3	40	0	4	45 15/16	n/a	n/a
	35	47	35	126	18	24	18	na	3	42	0	4	48 15/16	n/a	n/a
	35	47	35	132	18	24	18	na	3	44	0	4	51 15/16	n/a	n/a
	35	47	35	138	18	24	18	na	3	46	0	4	54 15/16	n/a	n/a
	35	47	35	144	18	24	18	na	3	48	0	4	57 15/16	n/a	n/a
	42	54	42	102	24	30	24	na	3	34	0	4	37 15/16	n/a	n/a
	42	54	42	108	24	30	24	na	3	36	0	4	39 15/16	n/a	n/a
	42	54	42	114	24	30	24	na	3	38	0	4	42 15/16	n/a	n/a
	42	54	42	120	24	30	24	na	3	40	0	4	45 15/16	n/a	n/a
	42	54	42	126	24	30	24	na	3	42	0	4	48 15/16	n/a	n/a
	42	54	42	132	24	30	24	na	3	44	0	4	51 15/16	n/a	n/a
	42	54	42	138	24	30	24	na	3	46	0	4	54 15/16	n/a	n/a
	42	54	42	144	24	30	24	na	3	48	0	4	57 15/16	n/a	n/a
	47	59	47	102	24	30	24	na	3	34	6	4	37 15/16	n/a	n/a
	47	59	47	108	24	30	24	na	3	36	6	4	39 15/16	n/a	n/a
	47	59	47	114	24	30	24	na	3	38	6	4	42 15/16	n/a	n/a
	47	59	47	120	24	30	24	na	3	40	6	4	45 15/16	n/a	n/a
	47	59	47	126	24	30	24	na	3	42	6	4	48 15/16	n/a	n/a
	47	59	47	132	24	30	24	na	3	44	6	4	51 15/16	n/a	n/a
	47	59	47	138	24	30	24	na	3	46	6	4	54 15/16	n/a	n/a
	47	59	47	144	24	30	24	na	3	48	6	4	57 15/16	n/a	n/a
	42	48	54	102	18	24	30	na	3	34	0	4	37 15/16	n/a	n/a
	42	48	54	108	18	24	30	na	3	36	0	4	39 15/16	n/a	n/a
	42	48	54	114	18	24	30	na	3	38	0	4	42 15/16	n/a	n/a
	42	48	54	120	18	24	30	na	3	40	0	4	45 15/16	n/a	n/a
	42	48	54	126	18	24	30	na	3	42	0	4	48 15/16	n/a	n/a
	42	48	54	132	18	24	30	na	3	44	0	4	51 15/16	n/a	n/a
	42	48	54	138	18	24	30	na	3	46	0	4	54 15/16	n/a	n/a
	42	48	54	144	18	24	30	na	3	48	0	4	57 15/16	n/a	n/a
	47	53	59	102	18	24	30	na	3	34	0	4	37 15/16	n/a	n/a
	47	53	59	108	18	24	30	na	3	36	0	4	39 15/16	n/a	n/a
	47	53	59	114	18	24	30	na	3	38	0	4	42 15/16	n/a	n/a
	47	53	59	120	18	24	30	na	3	40	0	4	45 15/16	n/a	n/a
	47	53	59	126	18	24	30	na	3	42	0	4	48 15/16	n/a	n/a
	47	53	59	132	18	24	30	na	3	44	0	4	51 15/16	n/a	n/a
	47	53	59	138	18	24	30	na	3	46	0	4	54 15/16	n/a	n/a
	47	53	59	144	18	24	30	na	3	48	0	4	57 15/16	n/a	n/a

Calibrate Conference Tables

4 Base Tables

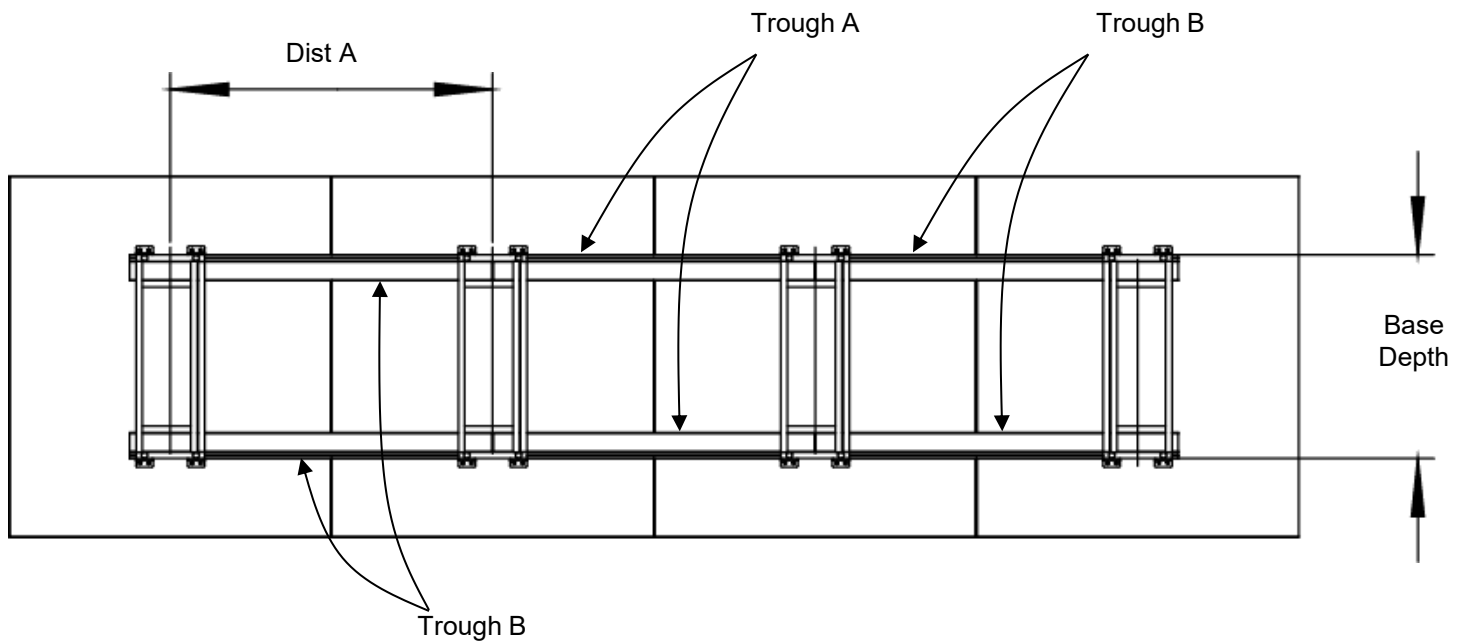



Image	Worksurface Size				Base Depth				Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4							
	42	42	42	150	24	24	24	24	4	37 1/2	0	2	37 3/8	4	42 3/16
	42	42	42	156	24	24	24	24	4	39	0	2	38 7/8	4	44 7/16
	42	42	42	162	24	24	24	24	4	40 1/2	0	2	40 3/8	4	46 11/16
	42	42	42	168	24	24	24	24	4	42	0	2	41 7/8	4	48 15/16
	42	42	42	174	24	24	24	24	4	43 1/2	0	2	43 3/8	4	51 3/16
	42	42	42	180	24	24	24	24	4	45	0	2	44 7/8	4	53 7/16
	42	42	42	186	24	24	24	24	4	46 1/2	0	2	46 3/8	4	55 11/16
	42	42	42	192	24	24	24	24	4	48	0	2	47 7/8	4	57 15/16
	47	47	47	150	24	24	24	24	4	37 1/2	0	2	37 3/8	4	42 3/16
	47	47	47	156	24	24	24	24	4	39	0	2	38 7/8	4	44 7/16
	47	47	47	162	24	24	24	24	4	40 1/2	0	2	40 3/8	4	46 11/16
	47	47	47	168	24	24	24	24	4	42	0	2	41 7/8	4	48 15/16
	47	47	47	174	24	24	24	24	4	43 1/2	0	2	43 3/8	4	51 3/16
	47	47	47	180	24	24	24	24	4	45	0	2	44 7/8	4	53 7/16
	47	47	47	186	24	24	24	24	4	46 1/2	0	2	46 3/8	4	55 11/16
	47	47	47	192	24	24	24	24	4	48	0	2	47 7/8	4	57 15/16
	54	54	54	150	30	30	30	30	4	37 1/2	0	2	37 3/8	4	42 3/16
	54	54	54	156	30	30	30	30	4	39	0	2	38 7/8	4	44 7/16
	54	54	54	162	30	30	30	30	4	40 1/2	0	2	40 3/8	4	46 11/16
	54	54	54	168	30	30	30	30	4	42	0	2	41 7/8	4	48 15/16
	54	54	54	174	30	30	30	30	4	43 1/2	0	2	43 3/8	4	51 3/16
	54	54	54	180	30	30	30	30	4	45	0	2	44 7/8	4	53 7/16
	54	54	54	186	30	30	30	30	4	46 1/2	0	2	46 3/8	4	55 11/16
	54	54	54	192	30	30	30	30	4	48	0	2	47 7/8	4	57 15/16
	59	59	59	150	30	30	30	30	4	37 1/2	12	2	37 3/8	4	42 3/16
	59	59	59	156	30	30	30	30	4	39	12	2	38 7/8	4	44 7/16
	59	59	59	162	30	30	30	30	4	40 1/2	12	2	40 3/8	4	46 11/16
	59	59	59	168	30	30	30	30	4	42	12	2	41 7/8	4	48 15/16
	59	59	59	174	30	30	30	30	4	43 1/2	12	2	43 3/8	4	51 3/16
	59	59	59	180	30	30	30	30	4	45	12	2	44 7/8	4	53 7/16
	59	59	59	186	30	30	30	30	4	46 1/2	12	2	46 3/8	4	55 11/16
	59	59	59	192	30	30	30	30	4	48	12	2	47 7/8	4	57 15/16

Calibrate Conference Tables

4 Base Tables Cont'd

Image	Worksurface Size				Base Depth				Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4							
	30	42	30	150	18	24	24	18	4	37 1/2	0	2	37 3/8	4	42 3/16
	30	42	30	156	18	24	24	18	4	39	0	2	38 7/8	4	44 7/16
	30	42	30	162	18	24	24	18	4	40 1/2	0	2	40 3/8	4	46 11/16
	30	42	30	168	18	24	24	18	4	42	0	2	41 7/8	4	48 15/16
	30	42	30	174	18	24	24	18	4	43 1/2	0	2	43 3/8	4	51 3/16
	30	42	30	180	18	24	24	18	4	45	0	2	44 7/8	4	53 7/16
	30	42	30	186	18	24	24	18	4	46 1/2	0	2	46 3/8	4	55 11/16
	30	42	30	192	18	24	24	18	4	48	0	2	47 7/8	4	57 15/16
	35	47	35	150	18	24	24	18	4	37 1/2	0	2	37 3/8	4	42 3/16
	35	47	35	156	18	24	24	18	4	39	0	2	38 7/8	4	44 7/16
	35	47	35	162	18	24	24	18	4	40 1/2	0	2	40 3/8	4	46 11/16
	35	47	35	168	18	24	24	18	4	42	0	2	41 7/8	4	48 15/16
	35	47	35	174	18	24	24	18	4	43 1/2	0	2	43 3/8	4	51 3/16
	35	47	35	180	18	24	24	18	4	45	0	2	44 7/8	4	53 7/16
	35	47	35	186	18	24	24	18	4	46 1/2	0	2	46 3/8	4	55 11/16
	35	47	35	192	18	24	24	18	4	48	0	2	47 7/8	4	57 15/16
	42	54	42	150	24	30	30	24	4	37 1/2	0	2	37 3/8	4	42 3/16
	42	54	42	156	24	30	30	24	4	39	0	2	38 7/8	4	44 7/16
	42	54	42	162	24	30	30	24	4	40 1/2	0	2	40 3/8	4	46 11/16
	42	54	42	168	24	30	30	24	4	42	0	2	41 7/8	4	48 15/16
	42	54	42	174	24	30	30	24	4	43 1/2	0	2	43 3/8	4	51 3/16
	42	54	42	180	24	30	30	24	4	45	0	2	44 7/8	4	53 7/16
	42	54	42	186	24	30	30	24	4	46 1/2	0	2	46 3/8	4	55 11/16
	42	54	42	192	24	30	30	24	4	48	0	2	47 7/8	4	57 15/16
	47	59	47	150	24	30	30	24	4	37 1/2	12	2	37 3/8	4	42 3/16
	47	59	47	156	24	30	30	24	4	39	12	2	38 7/8	4	44 7/16
	47	59	47	162	24	30	30	24	4	40 1/2	12	2	40 3/8	4	46 11/16
	47	59	47	168	24	30	30	24	4	42	12	2	41 7/8	4	48 15/16
	47	59	47	174	24	30	30	24	4	43 1/2	12	2	43 3/8	4	51 3/16
	47	59	47	180	24	30	30	24	4	45	12	2	44 7/8	4	53 7/16
	47	59	47	186	24	30	30	24	4	46 1/2	12	2	46 3/8	4	55 11/16
	47	59	47	192	24	30	30	24	4	48	12	2	47 7/8	4	57 15/16
	42	48	54	150	18	24	24	30	4	37 1/2	0	2	37 3/8	4	42 3/16
	42	48	54	156	18	24	24	30	4	39	0	2	38 7/8	4	44 7/16
	42	48	54	162	18	24	24	30	4	40 1/2	0	2	40 3/8	4	46 11/16
	42	48	54	168	18	24	24	30	4	42	0	2	41 7/8	4	48 15/16
	42	48	54	174	18	24	24	30	4	43 1/2	0	2	43 3/8	4	51 3/16
	42	48	54	180	18	24	24	30	4	45	0	2	44 7/8	4	53 7/16
	42	48	54	186	18	24	24	30	4	46 1/2	0	2	46 3/8	4	55 11/16
	42	48	54	192	18	24	24	30	4	48	0	2	47 7/8	4	57 15/16
	47	53	59	150	18	24	24	30	4	37 1/2	0	2	37 3/8	4	42 3/16
	47	53	59	156	18	24	24	30	4	39	0	2	38 7/8	4	44 7/16
	47	53	59	162	18	24	24	30	4	40 1/2	0	2	40 3/8	4	46 11/16
	47	53	59	168	18	24	24	30	4	42	0	2	41 7/8	4	48 15/16
	47	53	59	174	18	24	24	30	4	43 1/2	0	2	43 3/8	4	51 3/16
	47	53	59	180	18	24	24	30	4	45	0	2	44 7/8	4	53 7/16
	47	53	59	186	18	24	24	30	4	46 1/2	0	2	46 3/8	4	55 11/16
	47	53	59	192	18	24	24	30	4	48	0	2	47 7/8	4	57 15/16

Calibrate Conference Tables

5 Base Tables

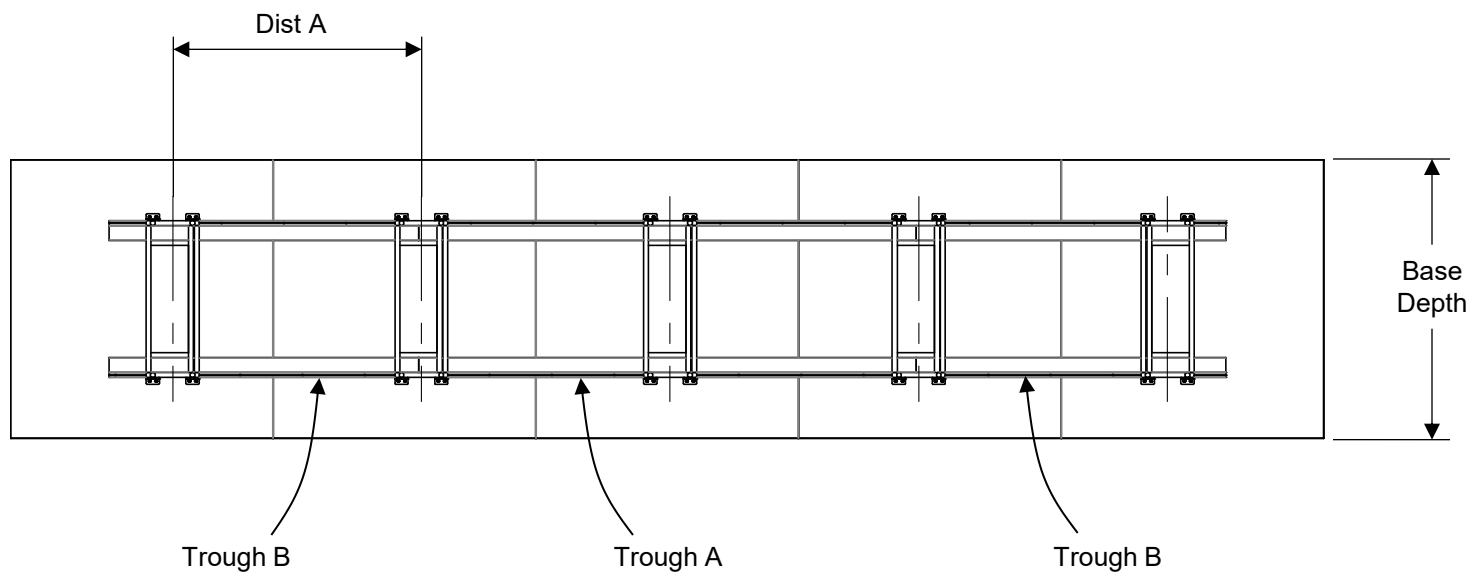


Image	Worksurface Size				Base Depth					Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4	Base 5							
	42	42	42	198	24	24	24	24	24	5	37 1/2	0	2	75	4	46.6875
	42	42	42	204	24	24	24	24	24	5	39	0	2	78	4	48.9375
	42	42	42	210	24	24	24	24	24	5	40 1/2	0	2	81	4	50
	42	42	42	216	24	24	24	24	24	5	42	0	2	84	4	51.9378
	42	42	42	222	24	24	24	24	24	5	43 1/2	0	2	87	4	53.4375
	42	42	42	228	24	24	24	24	24	5	45	0	2	90	4	54.9375
	42	42	42	234	24	24	24	24	24	5	46 1/2	0	2	93	4	56
	42	42	42	240	24	24	24	24	24	5	48	0	2	96	4	57.9375
	47	47	47	198	24	24	24	24	24	5	49 1/2	0	2	75	4	46.6875
	47	47	47	204	24	24	24	24	24	5	51	0	2	78	4	48.9375
	47	47	47	210	24	24	24	24	24	5	52 1/2	0	2	81	4	50
	47	47	47	216	24	24	24	24	24	5	54	0	2	84	4	51.9378
	47	47	47	222	24	24	24	24	24	5	55 1/2	0	2	87	4	53.4375
	47	47	47	228	24	24	24	24	24	5	57	0	2	90	4	54.9375
	47	47	47	234	24	24	24	24	24	5	58 1/2	0	2	93	4	56
	47	47	47	240	24	24	24	24	24	5	60	0	2	96	4	57.9375
	54	54	54	198	30	30	30	30	30	5	61 1/2	0	2	75	4	46.6875
	54	54	54	204	30	30	30	30	30	5	63	0	2	78	4	48.9375
	54	54	54	210	30	30	30	30	30	5	64 1/2	0	2	81	4	50
	54	54	54	216	30	30	30	30	30	5	66	0	2	84	4	51.9378
	54	54	54	222	30	30	30	30	30	5	67 1/2	0	2	87	4	53.4375
	54	54	54	228	30	30	30	30	30	5	69	0	2	90	4	54.9375
	54	54	54	234	30	30	30	30	30	5	70 1/2	0	2	93	4	56
	54	54	54	240	30	30	30	30	30	5	72	0	2	96	4	57.9375
	59	59	59	198	30	30	30	30	30	5	73 1/2	0	2	75	4	46.6875
	59	59	59	204	30	30	30	30	30	5	75	0	2	78	4	48.9375
	59	59	59	210	30	30	30	30	30	5	76 1/2	0	2	81	4	50
	59	59	59	216	30	30	30	30	30	5	78	0	2	84	4	51.9378
	59	59	59	222	30	30	30	30	30	5	79 1/2	0	2	87	4	53.4375
	59	59	59	228	30	30	30	30	30	5	81	0	2	90	4	54.9375
	59	59	59	234	30	30	30	30	30	5	82 1/2	0	2	93	4	56
	59	59	59	240	30	30	30	30	30	5	84	0	2	96	4	57.9375


Calibrate Conference Tables

5 Base Tables Cont'd


Image	Worksurface Size				Base Depth					Base Qty	Dist A	Total # of Counter weights	Trough Support A QTY	Trough Support A Length	Trough Support B QTY	Trough Support B Length
	Depth 1	Depth Mid	Depth 2	Width 1	Base 1	Base 2	Base 3	Base 4	Base 5							
	30	42	30	198	18	24	24	24	18	5	37 1/2	0	2	75	4	46.6875
	30	42	30	204	18	24	24	24	18	5	39	0	2	78	4	48.9375
	30	42	30	210	18	24	24	24	18	5	40 1/2	0	2	81	4	50
	30	42	30	216	18	24	24	24	18	5	42	0	2	84	4	51.9378
	30	42	30	222	18	24	24	24	18	5	43 1/2	0	2	87	4	53.4375
	30	42	30	228	18	24	24	24	18	5	45	0	2	90	4	54.9375
	30	42	30	234	18	24	24	24	18	5	46 1/2	0	2	93	4	56
	30	42	30	240	18	24	24	24	18	5	48	0	2	96	4	57.9375
	35	47	35	198	18	24	24	24	18	5	49 1/2	0	2	75	4	46.6875
	35	47	35	204	18	24	24	24	18	5	51	0	2	78	4	48.9375
	35	47	35	210	18	24	24	24	18	5	52 1/2	0	2	81	4	50
	35	47	35	216	18	24	24	24	18	5	54	0	2	84	4	51.9378
	35	47	35	222	18	24	24	24	18	5	55 1/2	0	2	87	4	53.4375
	35	47	35	228	18	24	24	24	18	5	57	0	2	90	4	54.9375
	35	47	35	234	18	24	24	24	18	5	58 1/2	0	2	93	4	56
	35	47	35	240	18	24	24	24	18	5	60	0	2	96	4	57.9375
	42	54	42	198	24	30	30	30	24	5	61 1/2	0	2	75	4	46.6875
	42	54	42	204	24	30	30	30	24	5	63	0	2	78	4	48.9375
	42	54	42	210	24	30	30	30	24	5	64 1/2	0	2	81	4	50
	42	54	42	216	24	30	30	30	24	5	66	0	2	84	4	51.9378
	42	54	42	222	24	30	30	30	24	5	67 1/2	0	2	87	4	53.4375
	42	54	42	228	24	30	30	30	24	5	69	0	2	90	4	54.9375
	42	54	42	234	24	30	30	30	24	5	70 1/2	0	2	93	4	56
	42	54	42	240	24	30	30	30	24	5	72	0	2	96	4	57.9375
	47	59	47	198	24	30	30	30	24	5	73 1/2	0	2	75	4	46.6875
	47	59	47	204	24	30	30	30	24	5	75	0	2	78	4	48.9375
	47	59	47	210	24	30	30	30	24	5	76 1/2	0	2	81	4	50
	47	59	47	216	24	30	30	30	24	5	78	0	2	84	4	51.9378
	47	59	47	222	24	30	30	30	24	5	79 1/2	0	2	87	4	53.4375
	47	59	47	228	24	30	30	30	24	5	81	0	2	90	4	54.9375
	47	59	47	234	24	30	30	30	24	5	82 1/2	0	2	93	4	56
	47	59	47	240	24	30	30	30	24	5	84	0	2	96	4	57.9375
	42	48	54	198	18	24	24	30	30	5	37 1/2	0	2	75	4	46.6875
	42	48	54	204	18	24	24	30	30	5	39	0	2	78	4	48.9375
	42	48	54	210	18	24	24	30	30	5	40 1/2	0	2	81	4	50
	42	48	54	216	18	24	24	30	30	5	42	0	2	84	4	51.9378
	42	48	54	222	18	24	24	30	30	5	43 1/2	0	2	87	4	53.4375
	42	48	54	228	18	24	24	30	30	5	45	0	2	90	4	54.9375
	42	48	54	234	18	24	24	30	30	5	46 1/2	0	2	93	4	56
	42	48	54	240	18	24	24	30	30	5	48	0	2	96	4	57.9375
	47	53	59	198	18	24	24	30	30	5	49 1/2	0	2	75	4	46.6875
	47	53	59	204	18	24	24	30	30	5	51	0	2	78	4	48.9375
	47	53	59	210	18	24	24	30	30	5	52 1/2	0	2	81	4	50
	47	53	59	216	18	24	24	30	30	5	54	0	2	84	4	51.9378
	47	53	59	222	18	24	24	30	30	5	55 1/2	0	2	87	4	53.4375
	47	53	59	228	18	24	24	30	30	5	57	0	2	90	4	54.9375
	47	53	59	234	18	24	24	30	30	5	58 1/2	0	2	93	4	56
	47	53	59	240	18	24	24	30	30	5	60	0	2	96	4	57.9375

Calibrate Conference Tables


Flat Plate

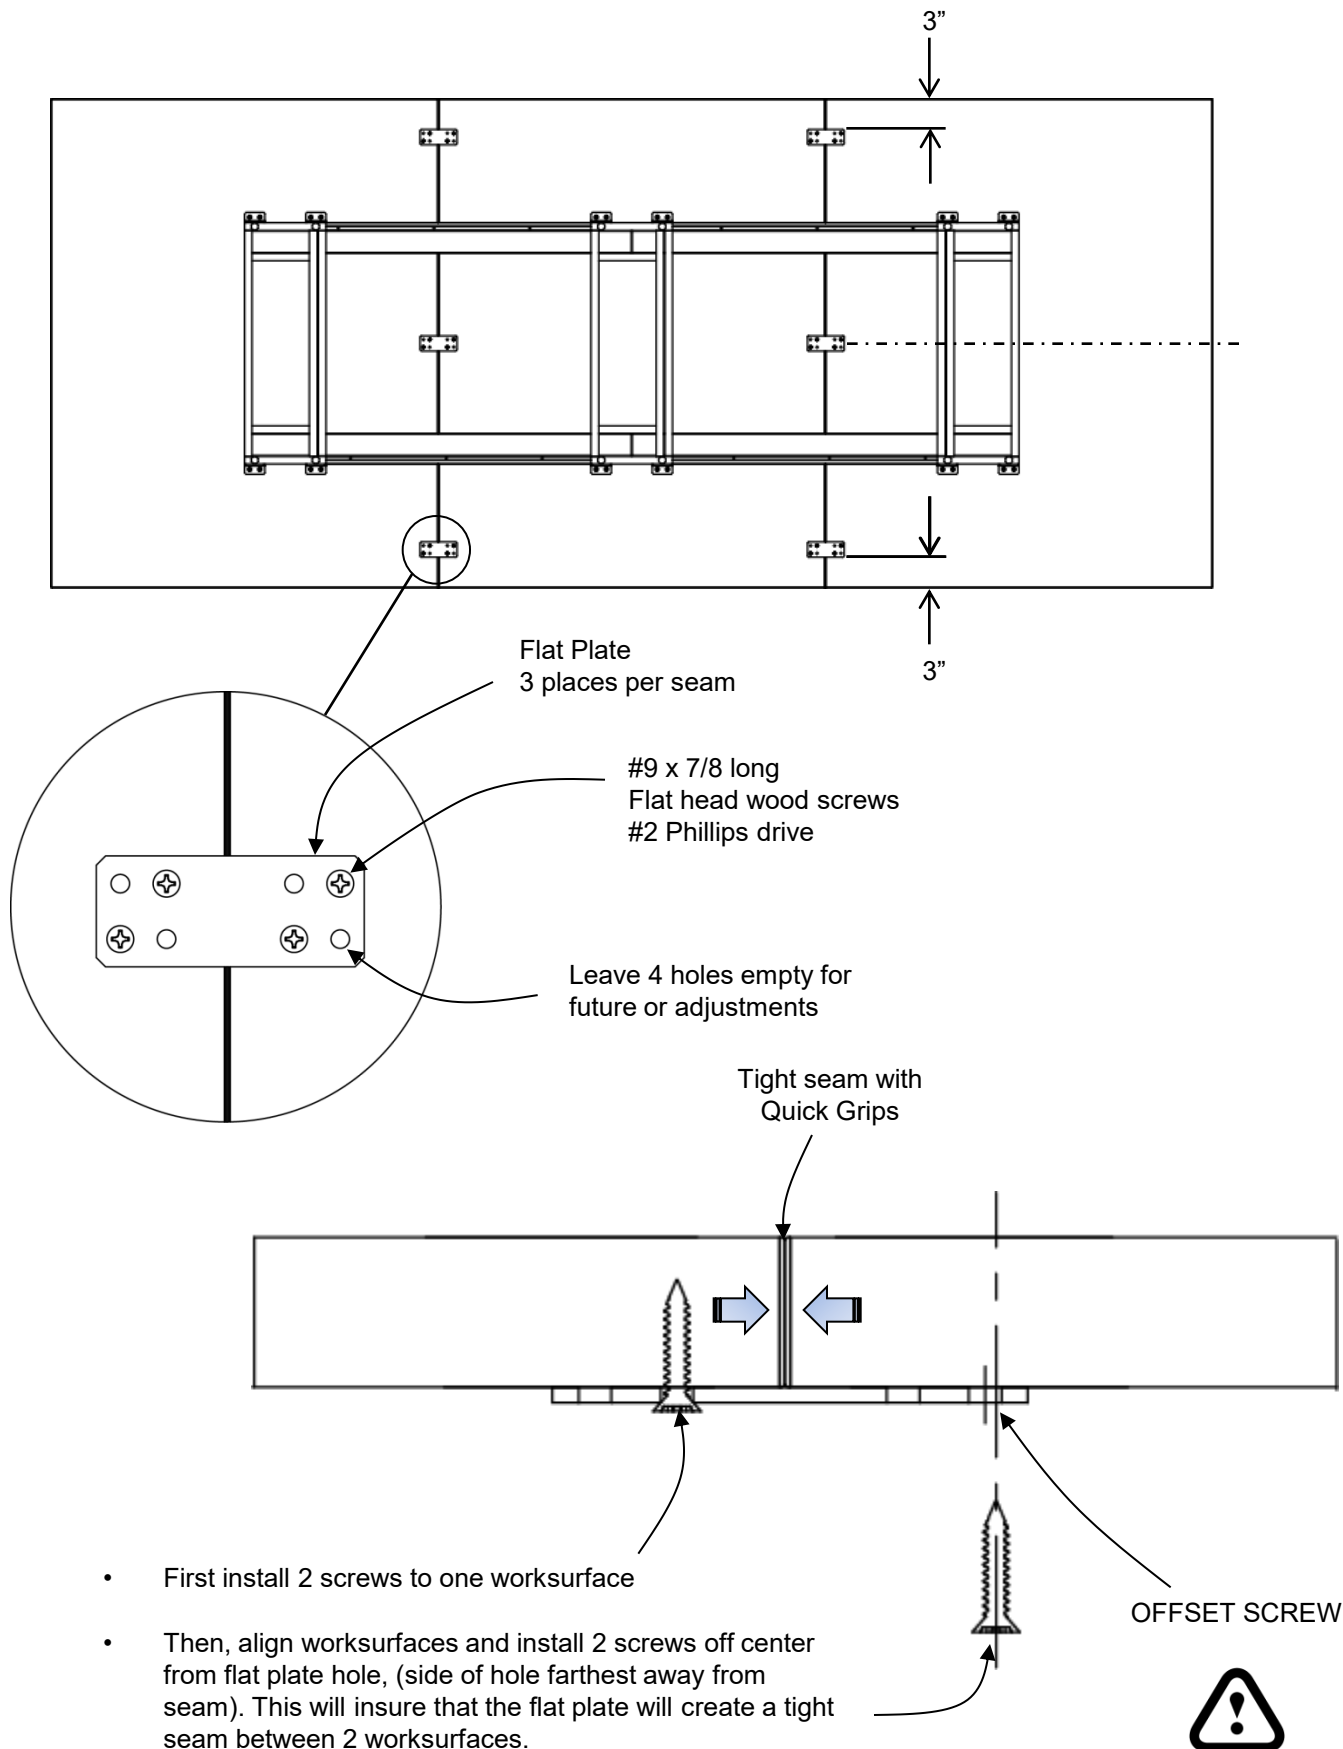

1. Install the Power Unit into the Box.

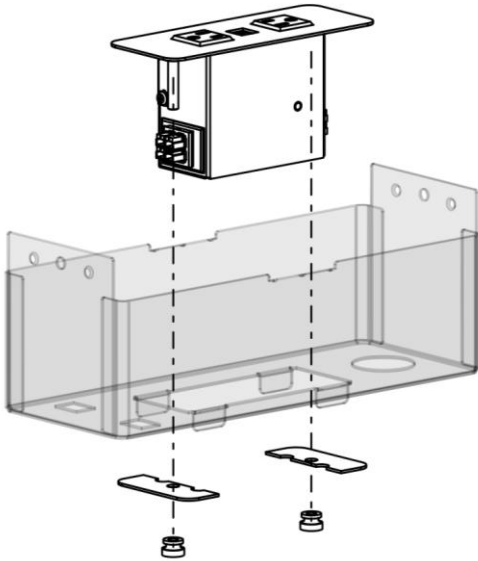


2. Install the Box into the worksurface.

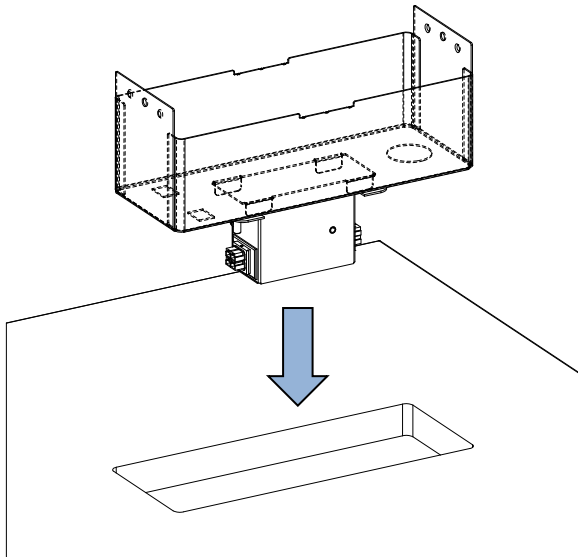


3a. Secure the Box to the worksurface using (4) #6 x 1" long flat head wood screw.


3b. Break tabs off box.

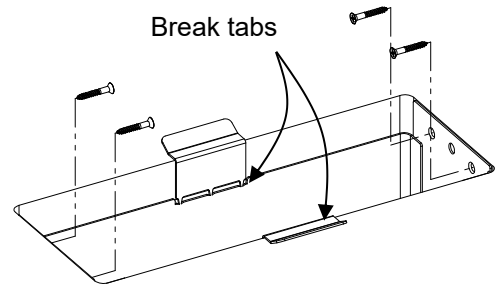


4. Install Cover. Confirm preferred orientation with client prior to installing.

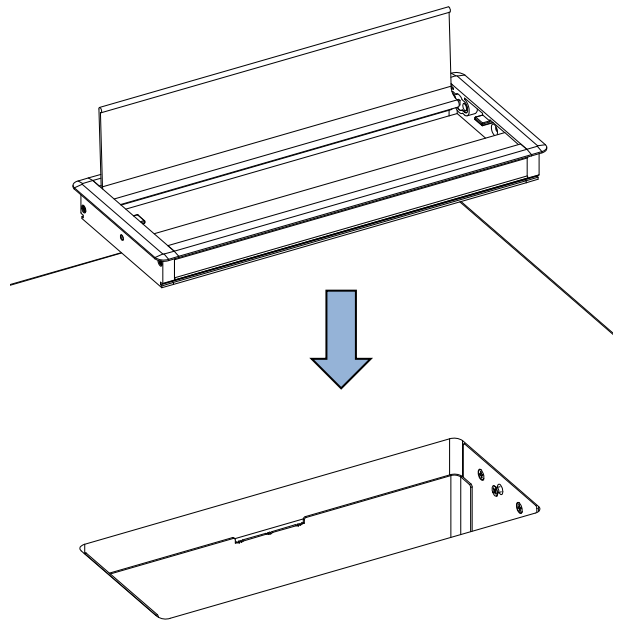


5. Secure Cover using (2) #6 x 1" long flat head wood screws

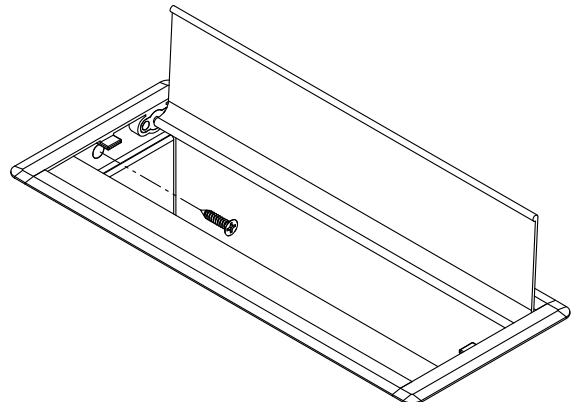


1. Install the Power Unit into the Box using (2) M3 x 12mm flat head screws.

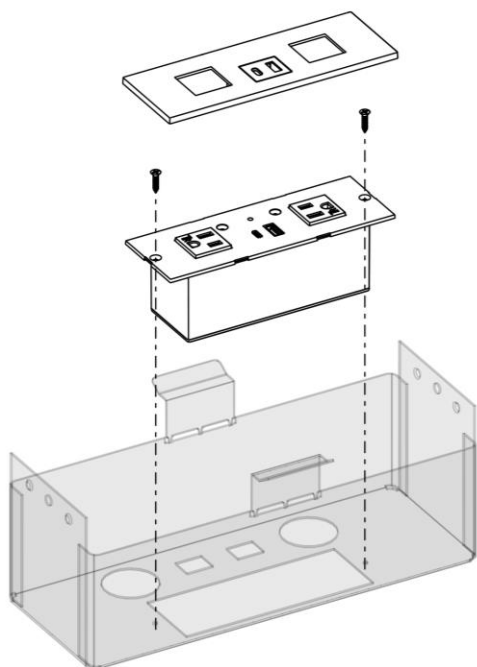


2. Install the Box into the worksurface.

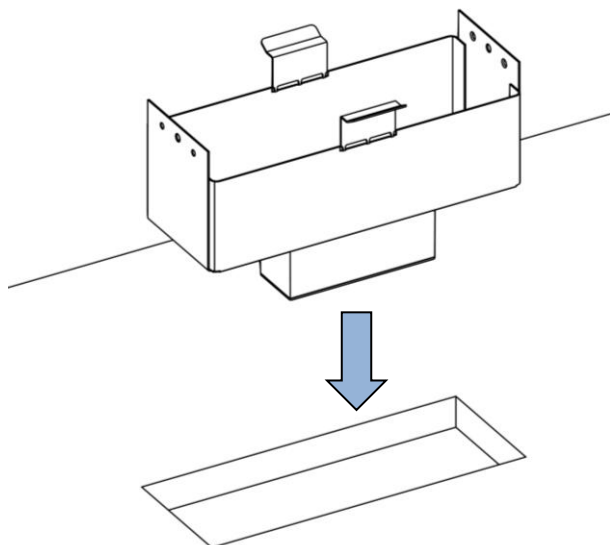


- 3a. Secure the Box to the worksurface using (4) #6 x 1" long flat head wood screw.
- 3b. Break tabs off box.

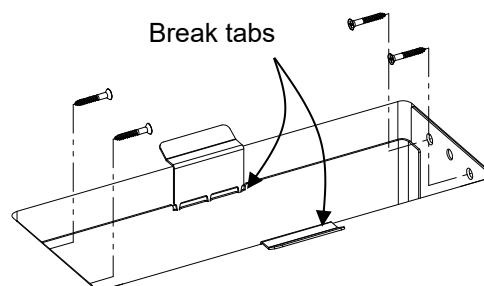


4. Install Cover. Confirm preferred orientation with client prior to installing.

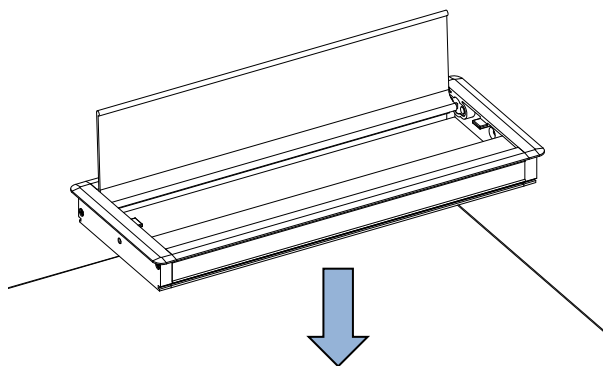


5. Secure Cover using (2) #6 x 5/8" long flat head wood screws

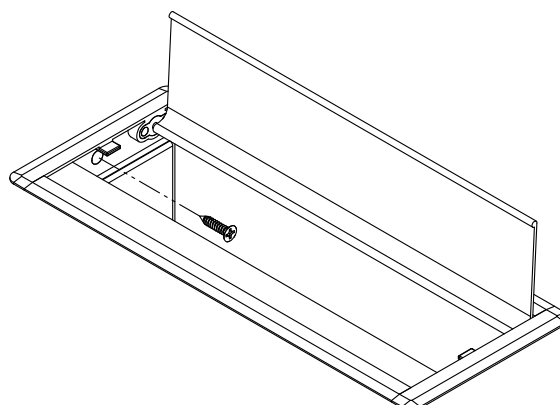

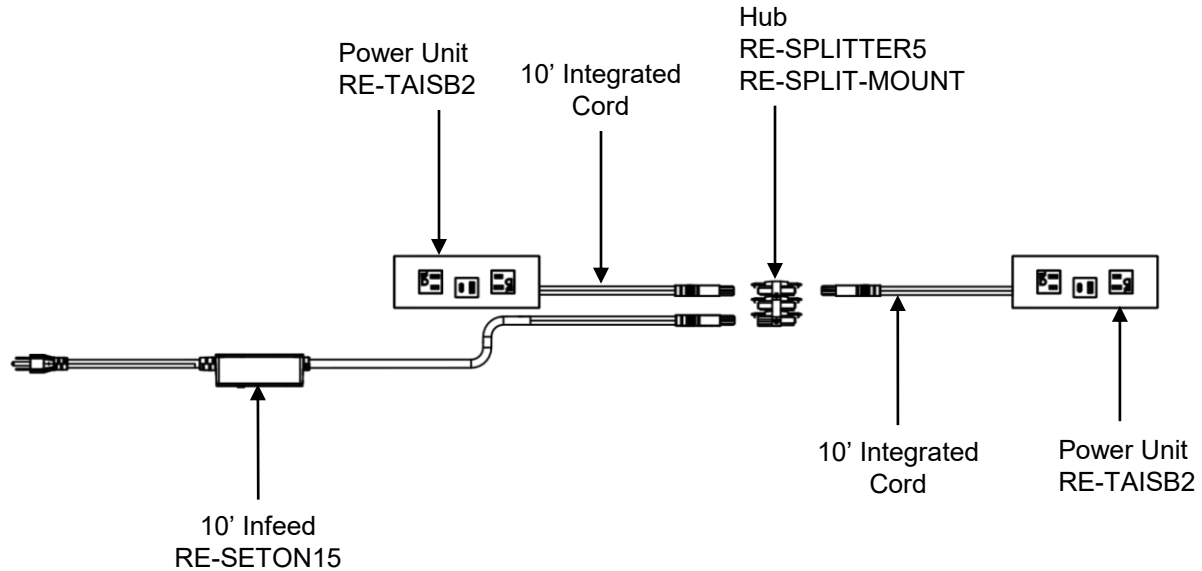


Disconnecting Domino jumpers and infeed:



- Make sure to unplug the power cord from the power source before disconnecting the jumpers and infeed.
- To disengage a Domino Power unit jumper or infeed, use a screwdriver to lift prongs up.

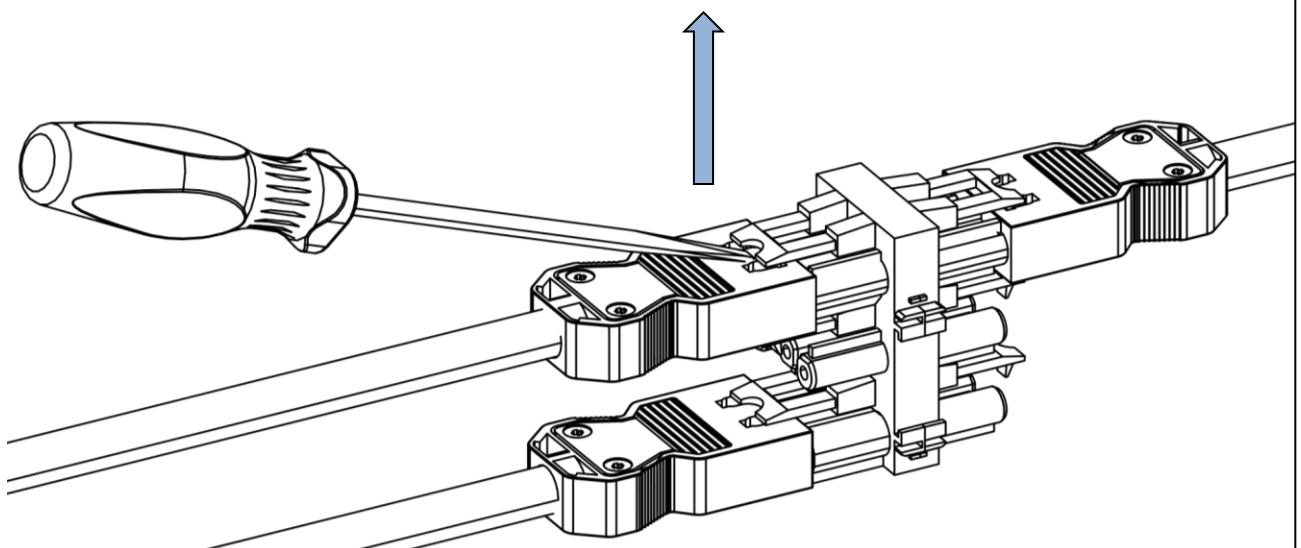


2 Base Table – 1 Power Units
Plug-in Daisy Chain

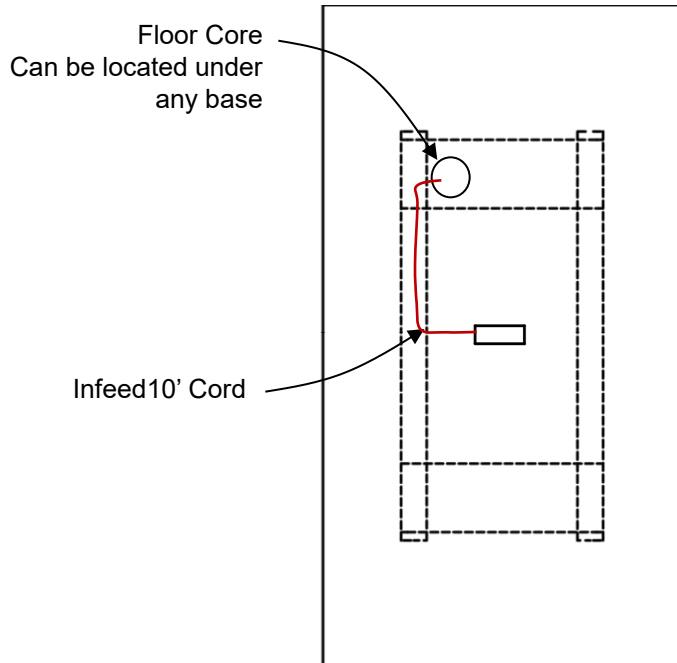



2 Base Table – 2 Power Units
Plug-in Daisy Chain

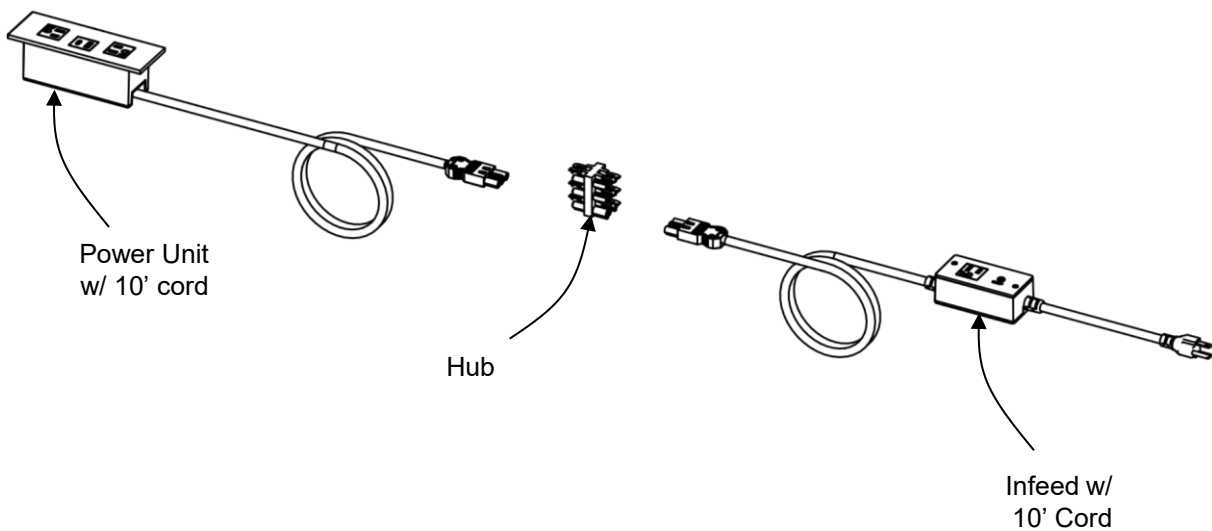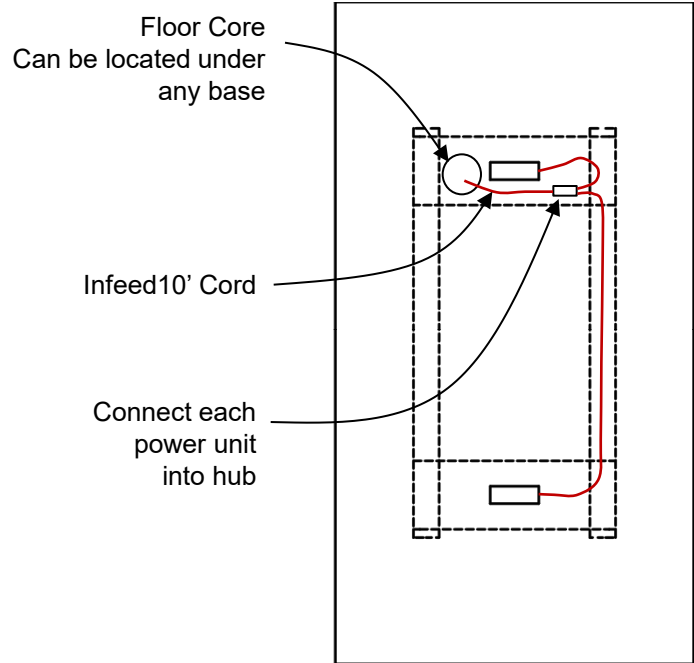

3 Base Table – 2 Power Units
Plug-in Daisy Chain

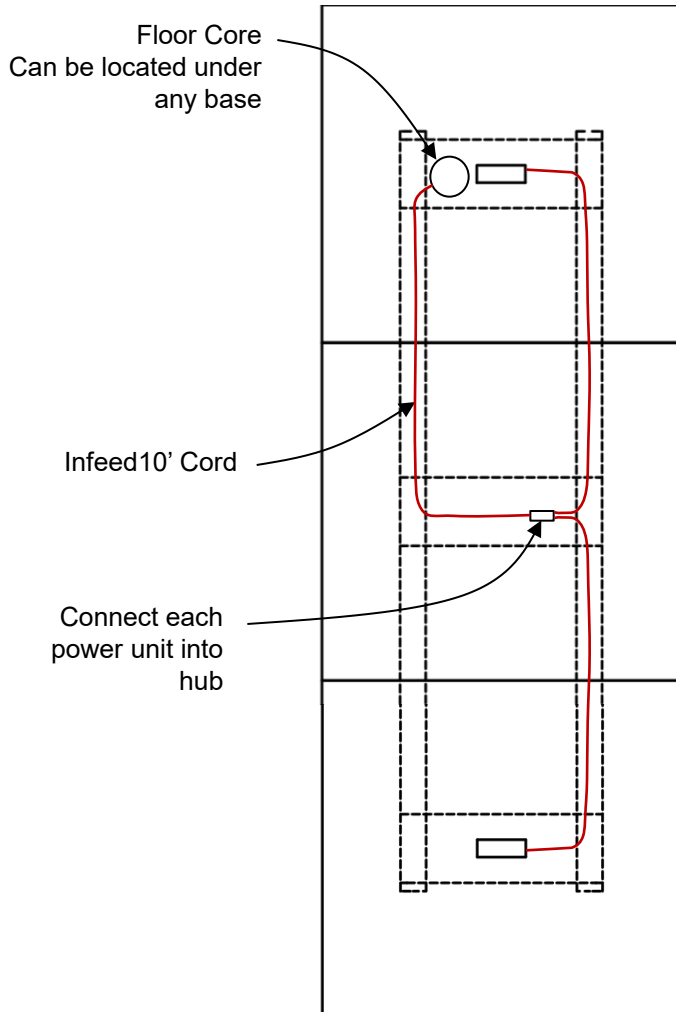


3 Base Table – 3 Power Units
Plug-in Daisy Chain

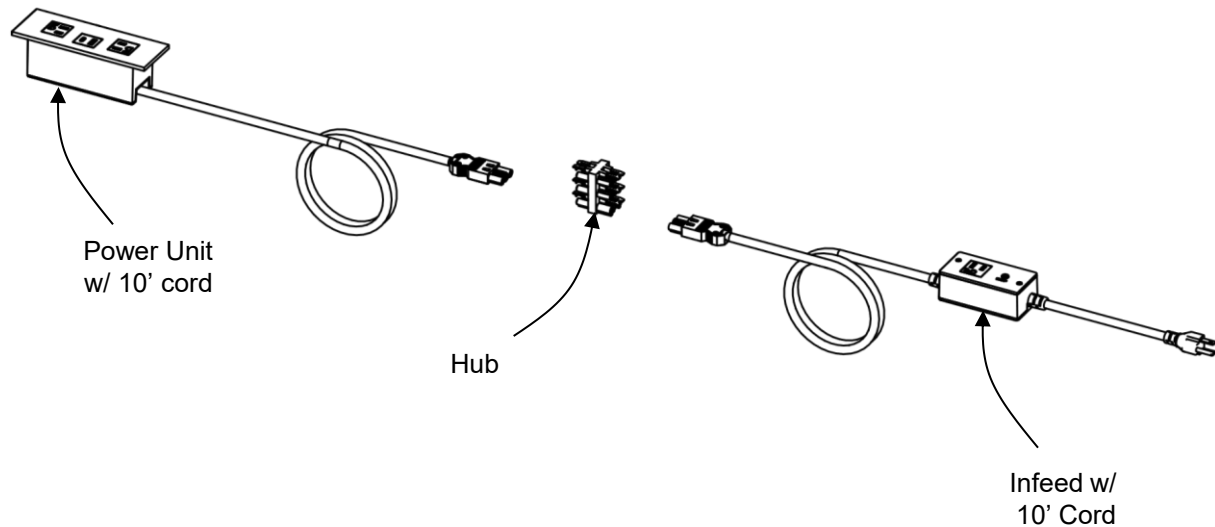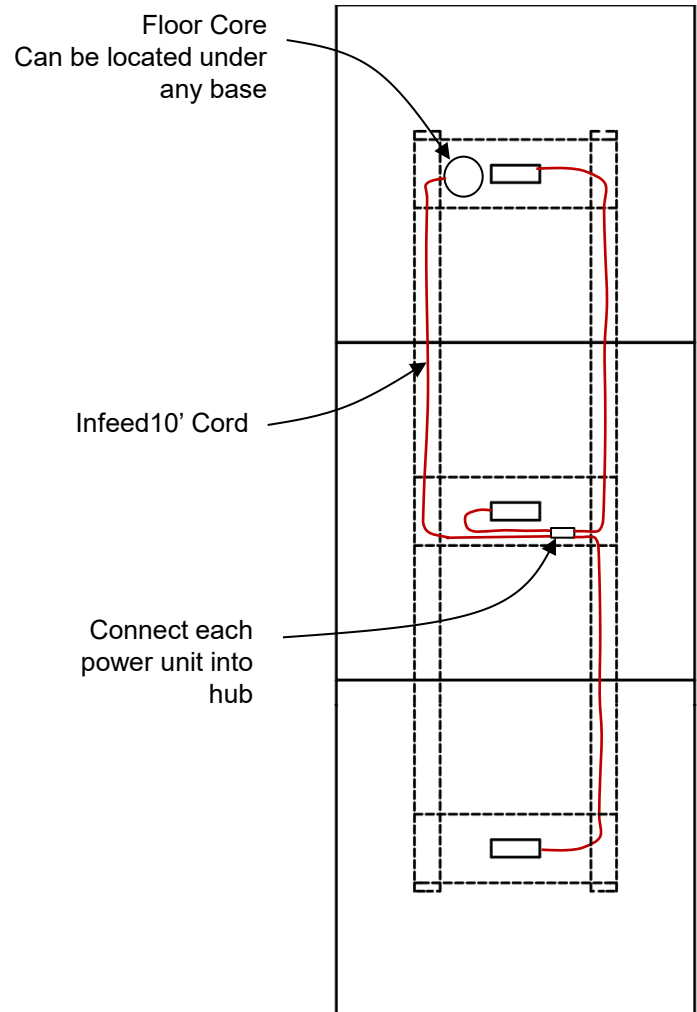



Calibrate Conference Tables

Plug-in Daisy Chain Power Units



4 Base Table – 2 Power Units
Plug-in Daisy Chain

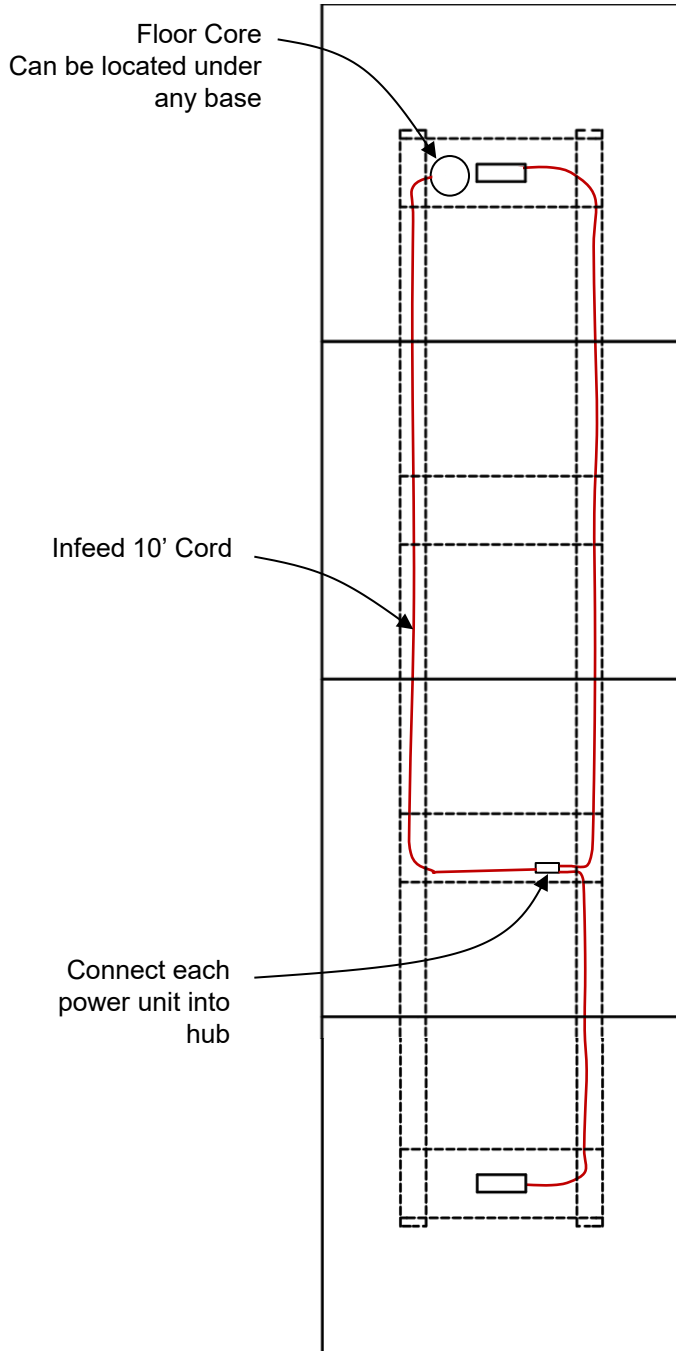

4 Base Table – 4 Power Units
Plug-in Daisy Chain



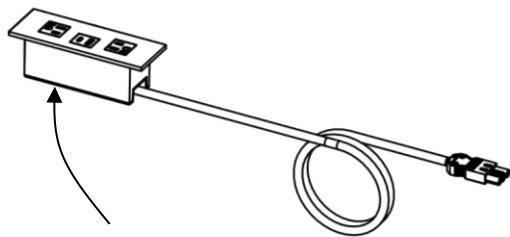
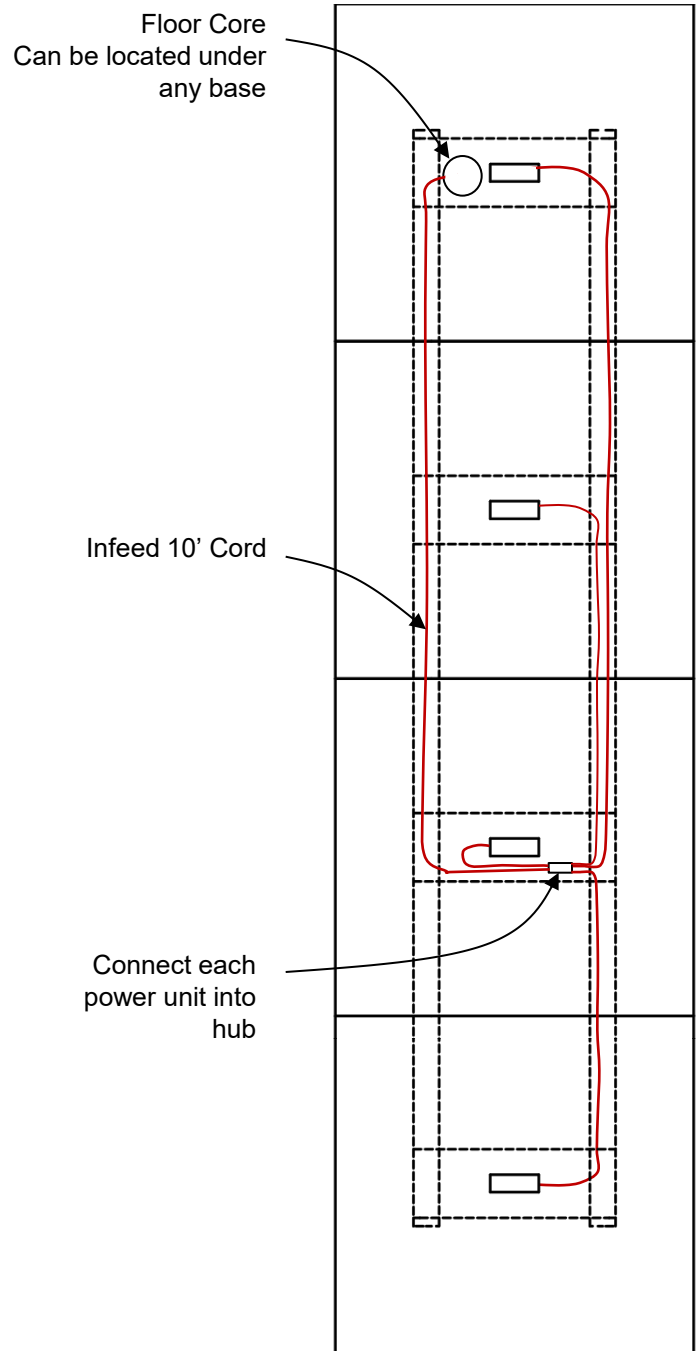


Power Unit
w/ 10' cord

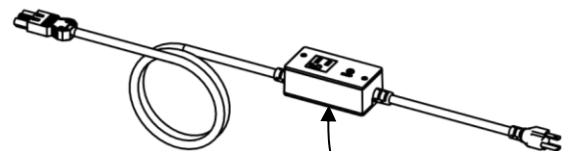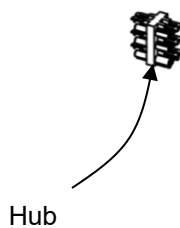


Infeed w/
10' Cord

5 Base Table – 5 Power Units
Plug-in Daisy Chain

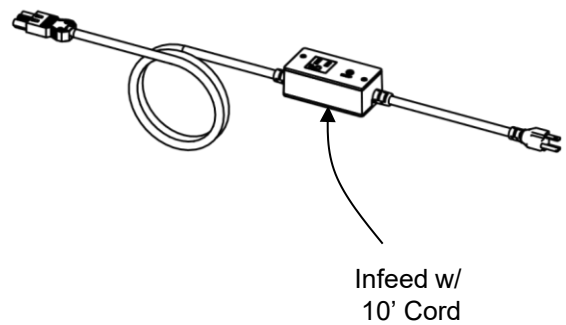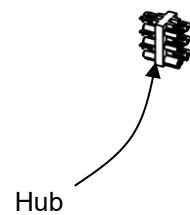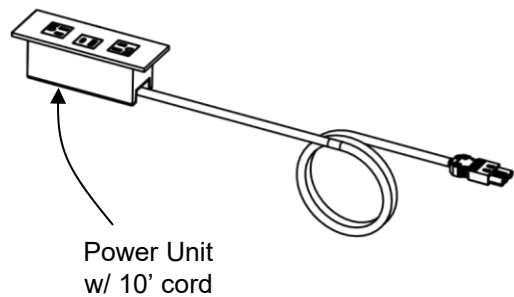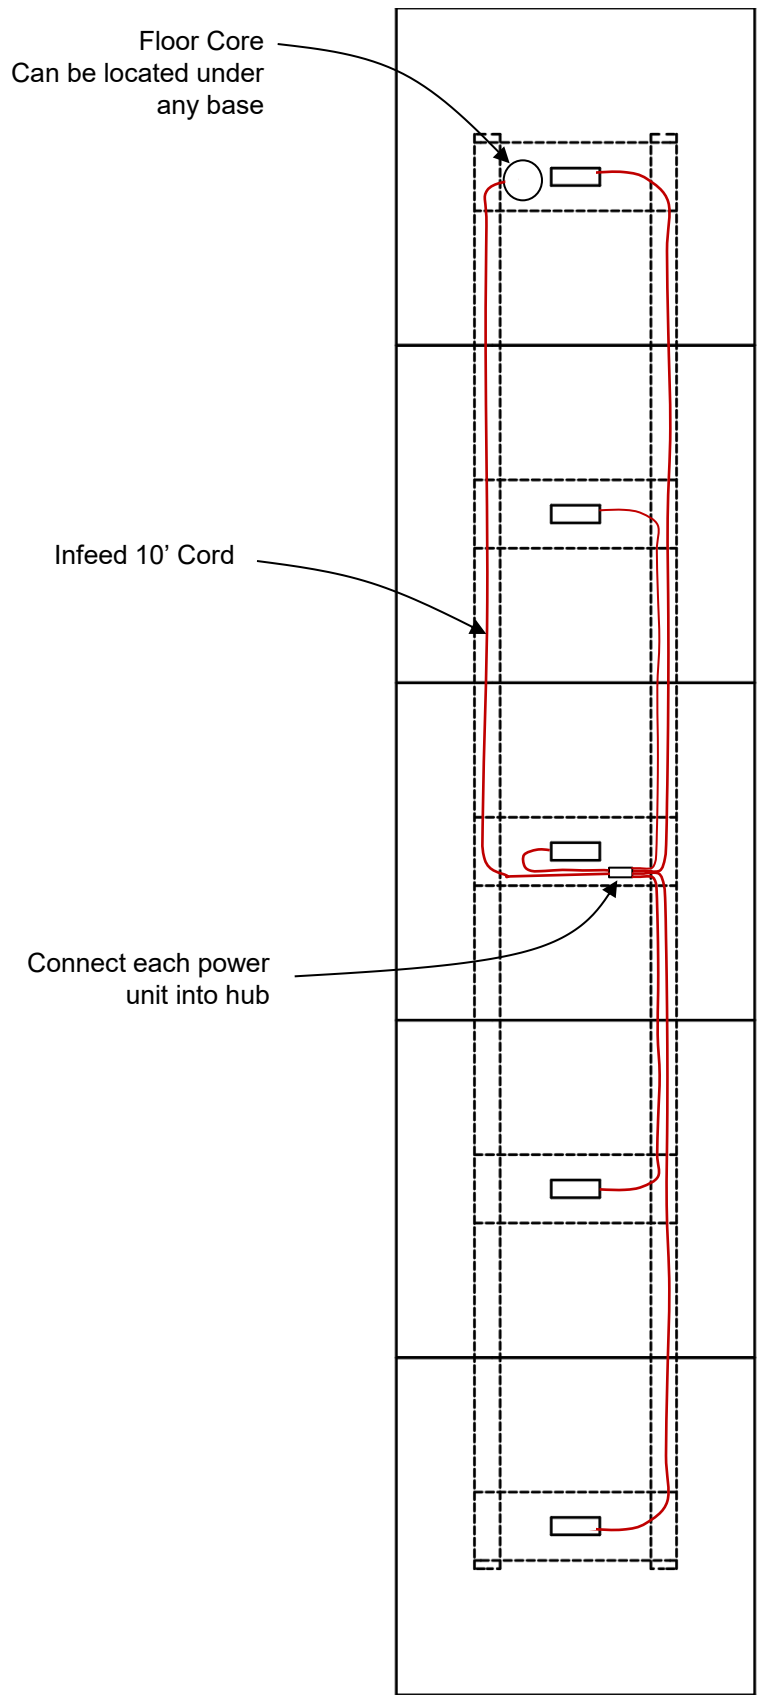


1 Power Unit
Hardwired

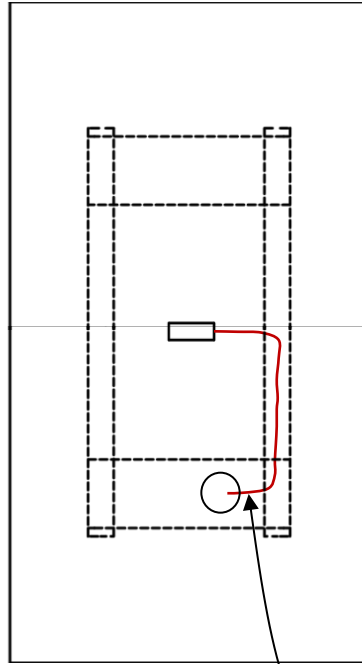


Infeed 9' Cord
Floor core must be 9' from
power unit.


Power Unit

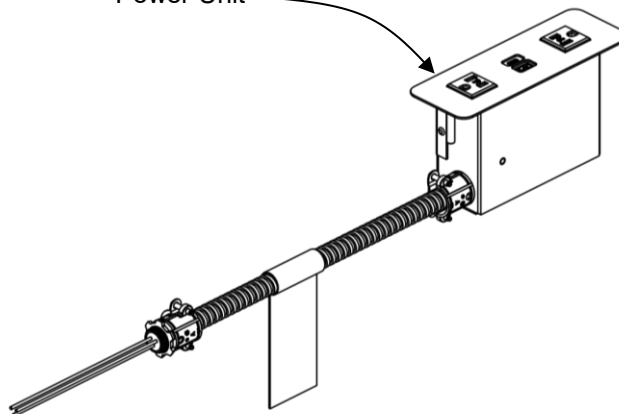

Two or more power modules may require a junction box  or other termination, as supplied by electrician, in compliance with local codes.

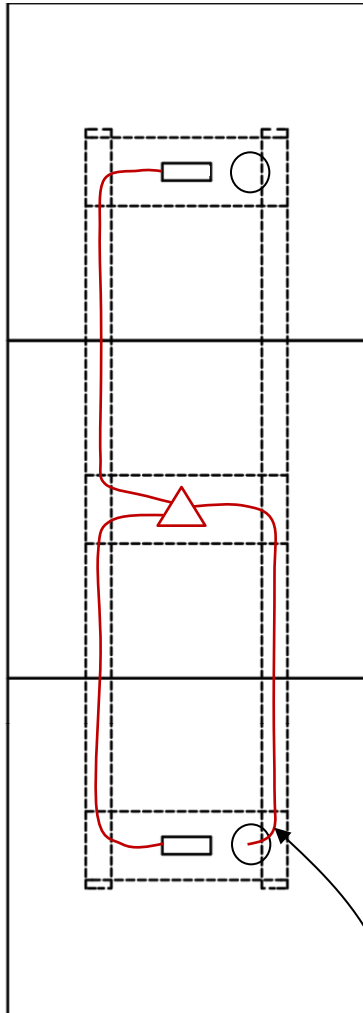

Infeed 9' Cord
Floor core must be 9' from
last power unit.

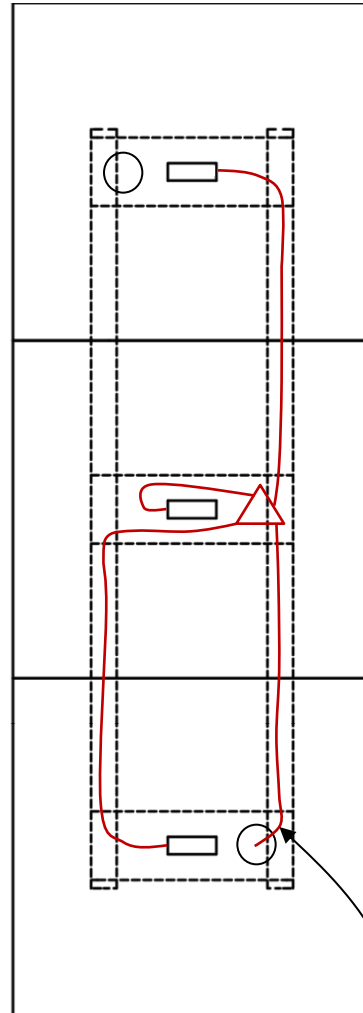

Infeed 9' Cord
Floor core must be 9' from
last power unit.

Power Unit

