



Collaborative Tables Installation Instructions

Date	Page No.	Description of change	Name
06/22/2022	1-13	Released	S. Powers
01/17/2023	8	Redesign of Tower Base	S. Powers
04/29/2025	13 -14	Update Power Units	P. Day


Table of Contents	
Installation Process	Page
D-Top or Key Top with Disc Base	4 - 6
Cabinet Leg	7
Tower Base	8
T-Leg	9 - 11
Wall Mount Kit	12
Power Unit	13 - 14

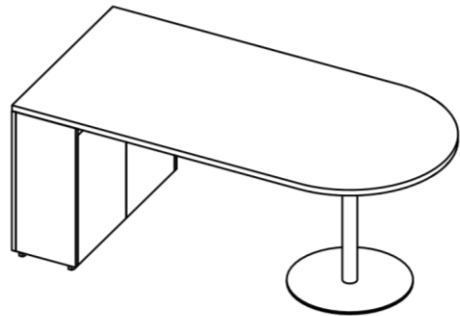


Cabinet Leg

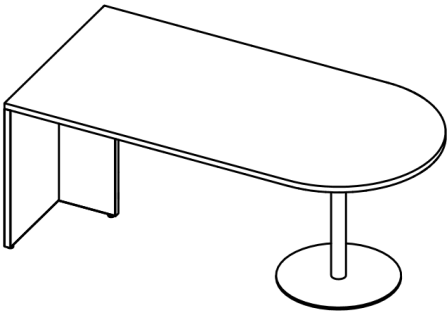

T-Leg





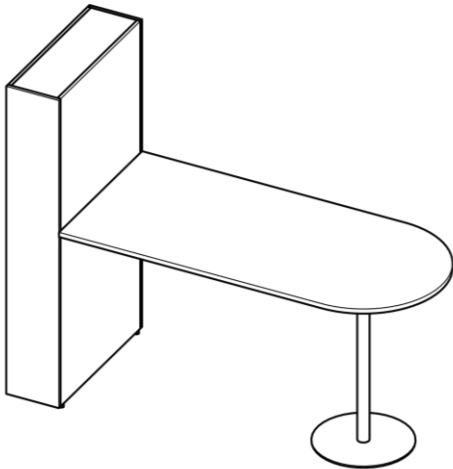


Tower Base


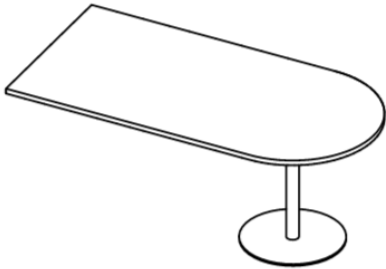


Wall Mount

Collaborative Tables Installation Instructions

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P1	T-DBSTxx xx = 29 or 42	RT-DBSTxx-P xx = 29 or 42	Post Leg 29H or 42H x 60mm Dia	
P2	WFS-DB21	RWFS-DB21	Disc Base 21"	
P3	RH-SHF51618-1	RH-SHF51618-1	Flat Head Hex Screw 5/16-18 X 1" long	
P4	WFS-UTP	RWFS-UTP-I	Top Plate 8"x8"	
P5	RH-QS0978	RH-QS0978	Flat Head Wood Screw #9 X 7/8" long	
P6	RH-95495K728-B	RH-95495K728-I	Foot Pad	
P7	T-UCKxx xx= 36-72 (increments of 6)	RWPS-HSxx xx= 36-72 (increments of 6")	U-Channel (Worksurface Stiffener)	
P8	RH-90252A239	RH-90252A239	#10 X 1 1/2" Flat Head Wood Screw	
P9	OX-LB2	OX-LB2	5 1/2" L-Bracket	
P10	RH-DU325-I	RH-DU325-I	Anchor Pin	


Collaborative Tables Installation Instructions

Item	Replacement Part number	Circle Sheet Part Number	Description	Image
P11	RH-0079485-I	RH-007948-I	Cam Bushing	
P12	WFS-IN5118B	RWFS-IN5118B	5/16-18 Glide Insert	
P13	WFS-GL51618	RWFS-GL51618	5/16-18 Glide	
P14	O-LB	OX-LB	2" L-Bracket	
P15	RH-01580111	RH-01580111	#10 x 2" Flat Head Screw	


Collaborative Tables Installation Instructions

Disc Base

Step 1: Connect the disc base to the post leg using (4) #5/16-18 x 1" long flat head screws.

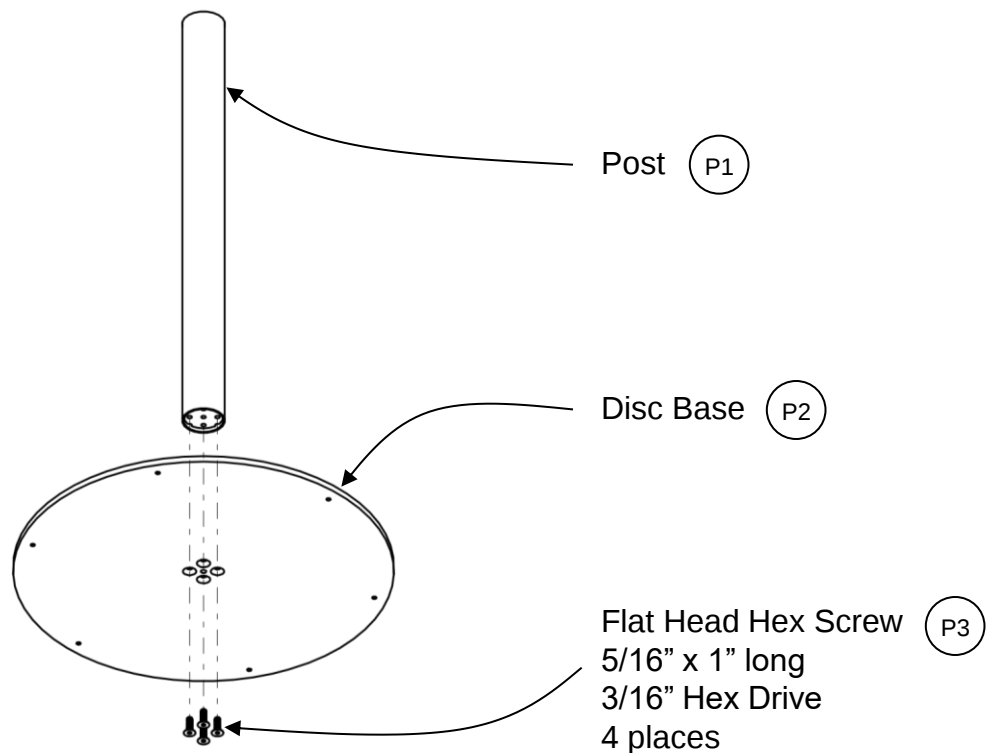


Step 2: Connect the top plate to the post leg using (4) #5/16-18 x 1" long flat head screws.

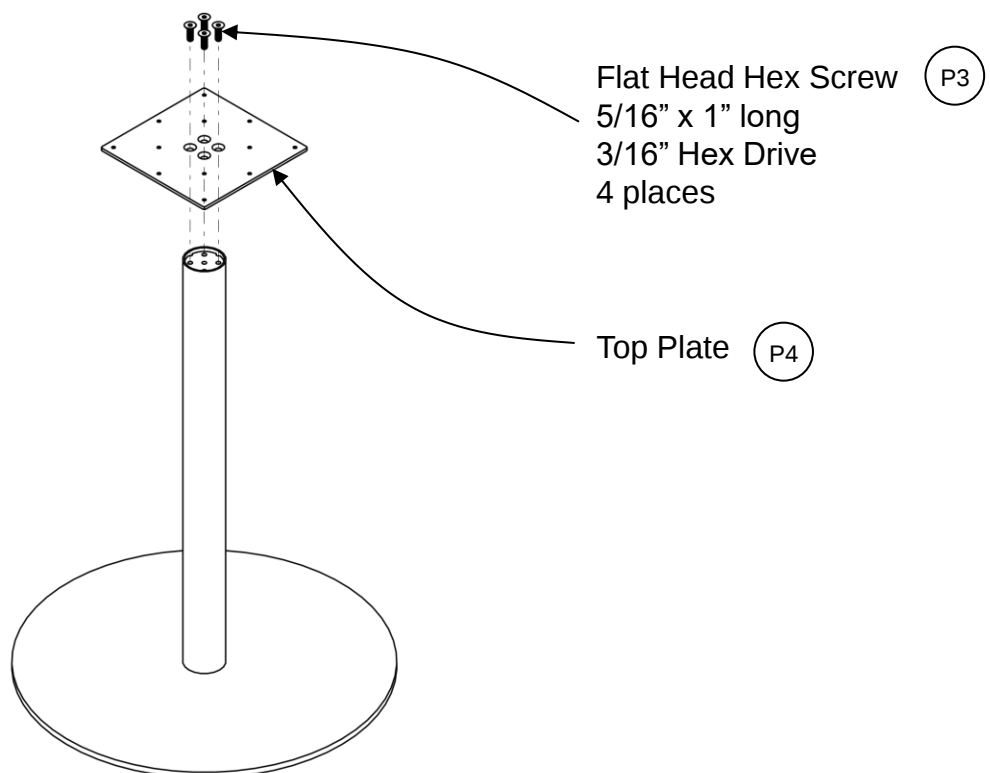

Collaborative Tables Installation Instructions


Disc Base

Step 3: Attach the worksurface to the top plate using #9 x 7/8" wood screws.

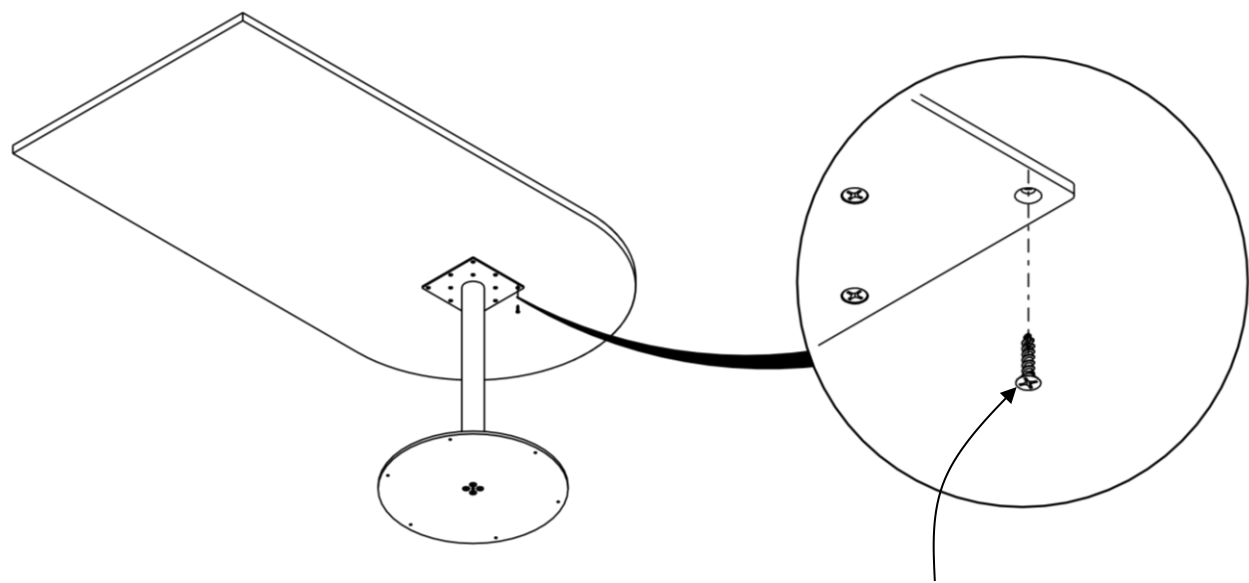


(P5) #9 X 7/8" long
Flat Head Screw
Philips Drive #2
12 places

Center disc base
on radius

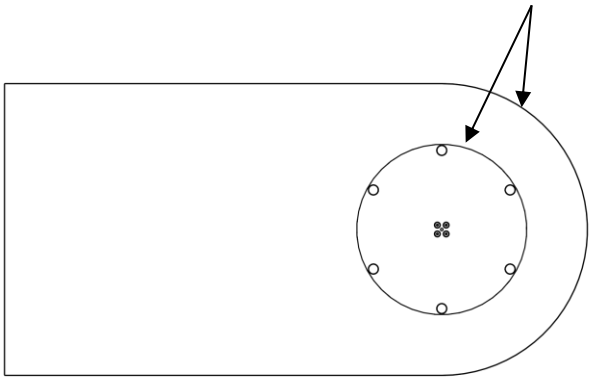

D-Top

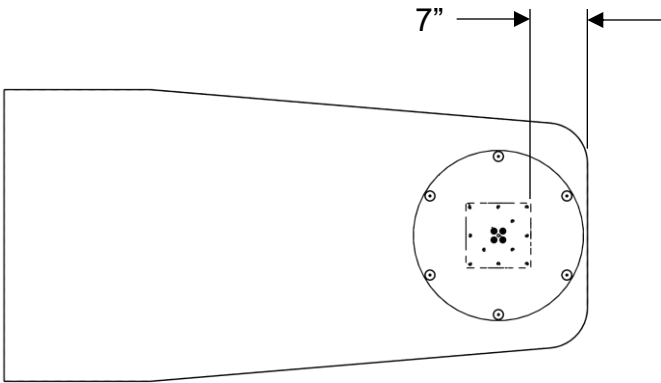


Key Top


Collaborative Tables Installation Instructions

Disc Base

Step 5: Apply (6) adhesive bumpers to the bottom of the disc base.

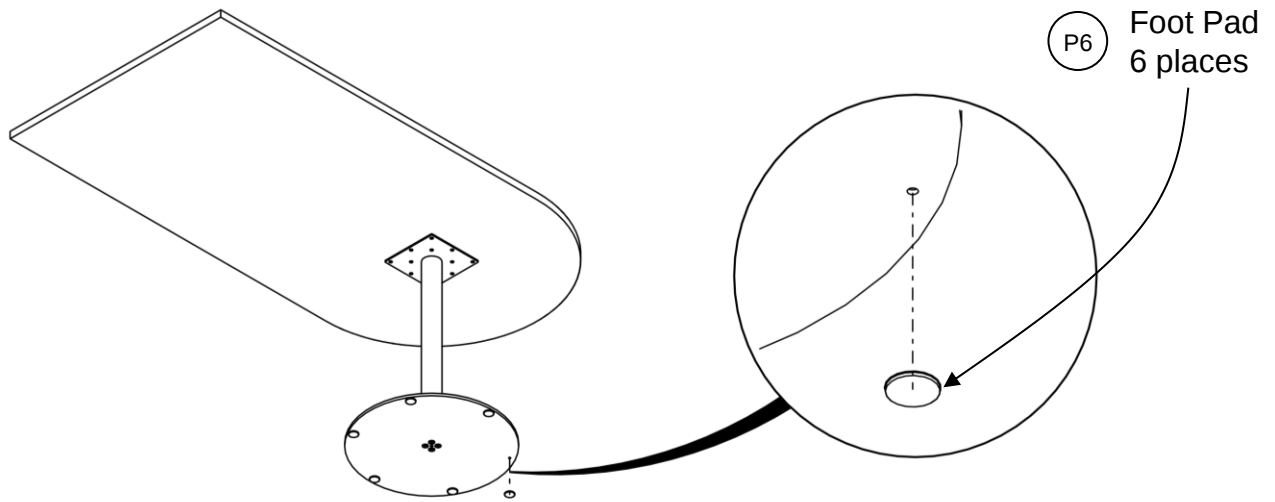

Step 4: Attach U-channels (if required) under the worksurface using #9 x 7/8" wood screws.

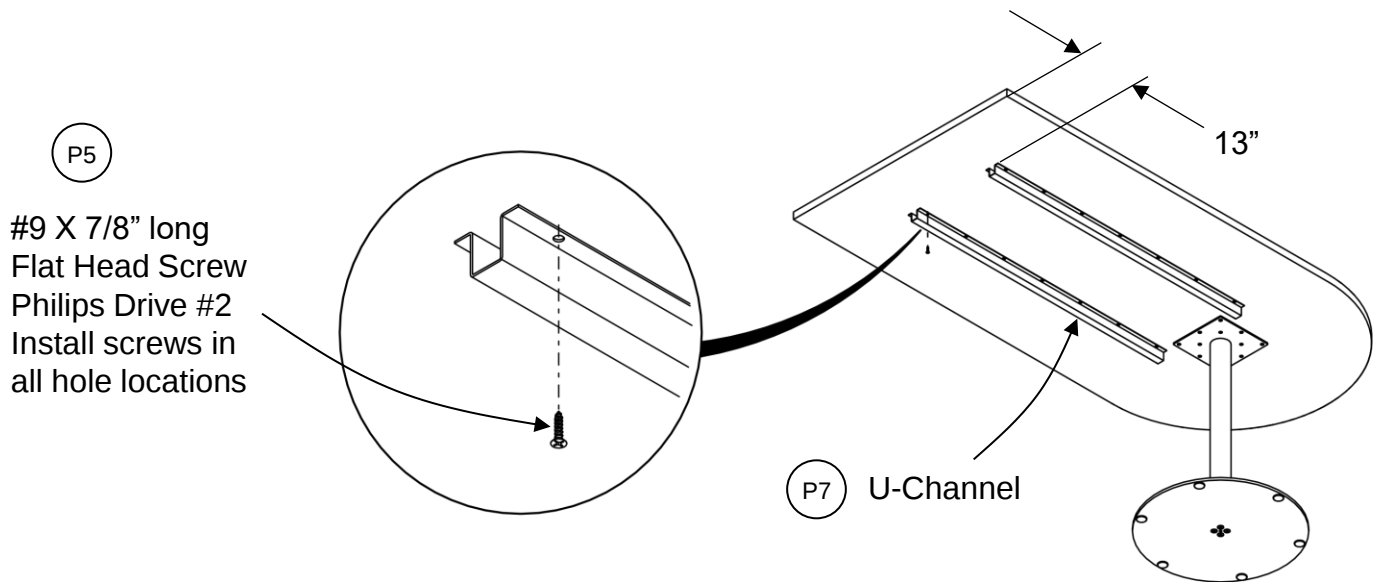


D-Top Surface		
Depth	Width	U-Channel Qty
36	48 - 60	0
	66 - 84	2
42	48 - 66	0
	72 - 84	2
48	48 - 66	0
	42 - 84	2

Key Top Surface		
Depth	Width	U-Channel Qty
36	48 - 60	0
	66 - 84	2
42	48 - 60	0
	66 - 84	2
48	48 - 60	0
	66 - 84	2


Collaborative Tables Installation Instructions

Cabinet Leg

Step 1: Align worksurface flush to cabinet.

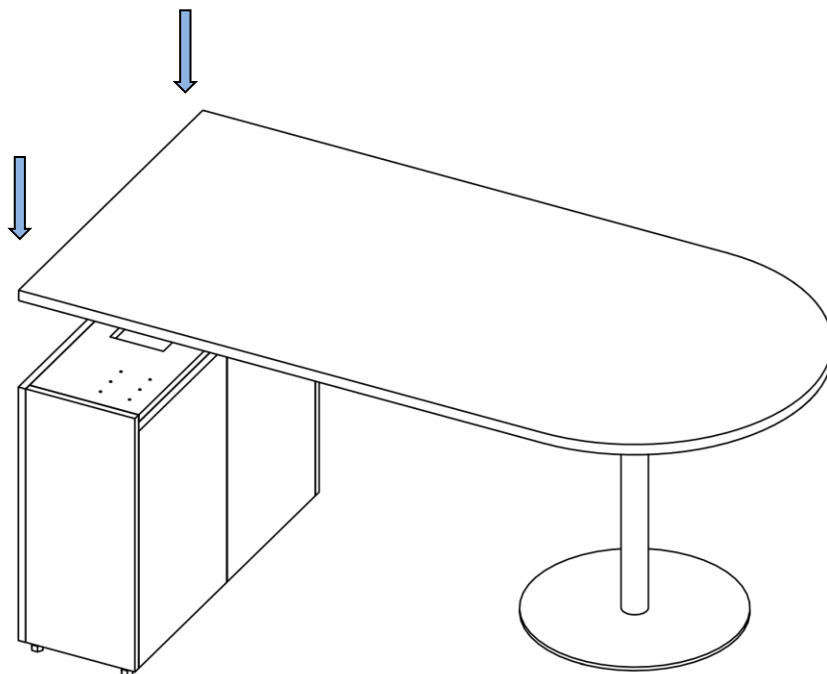


Step 2: Open cabinet to access inside unit. Secure worksurface to cabinet using (12) #10 x 1 ½" screws.

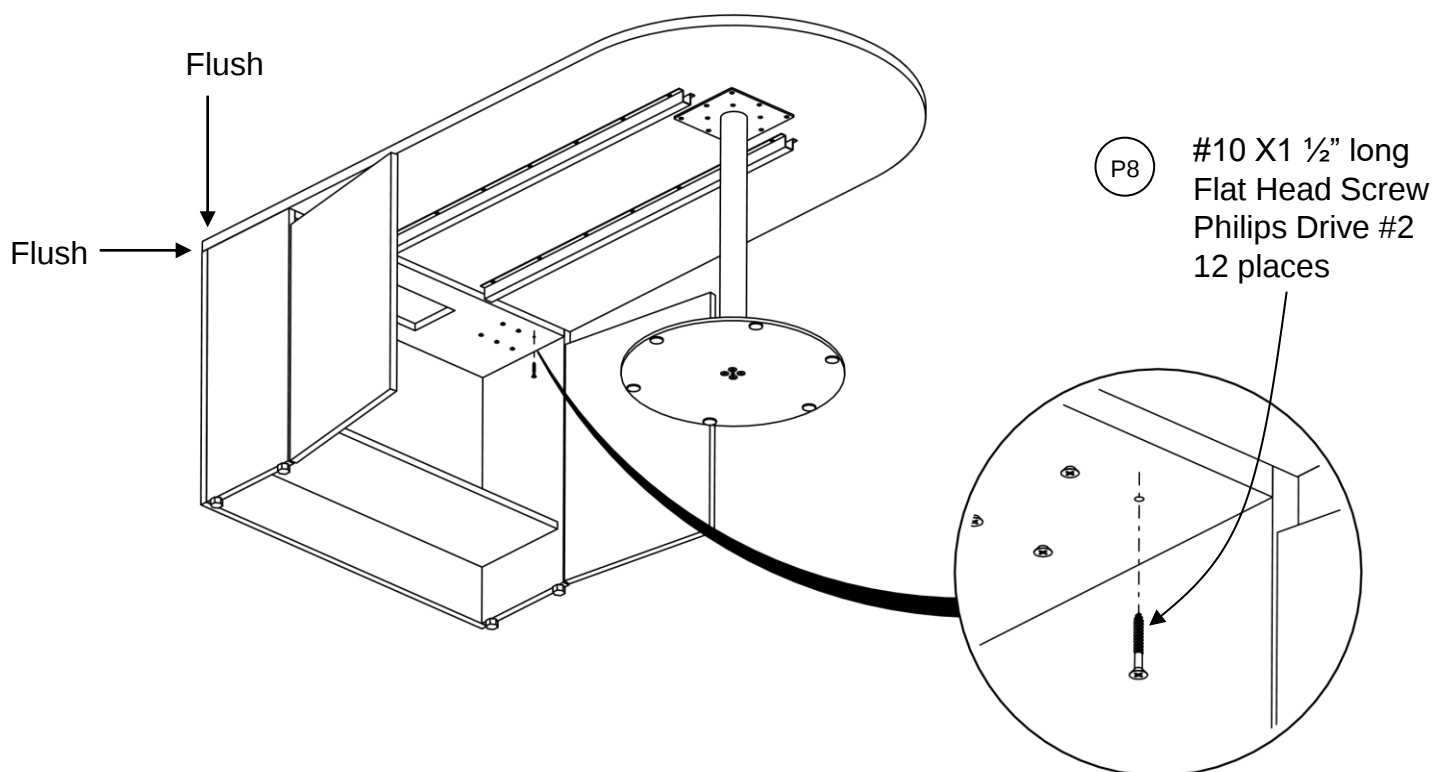


Collaborative Tables Installation Instructions

Tower Base

Step 1: Install (3) L-brackets to tower base using #10 x 2" screws.

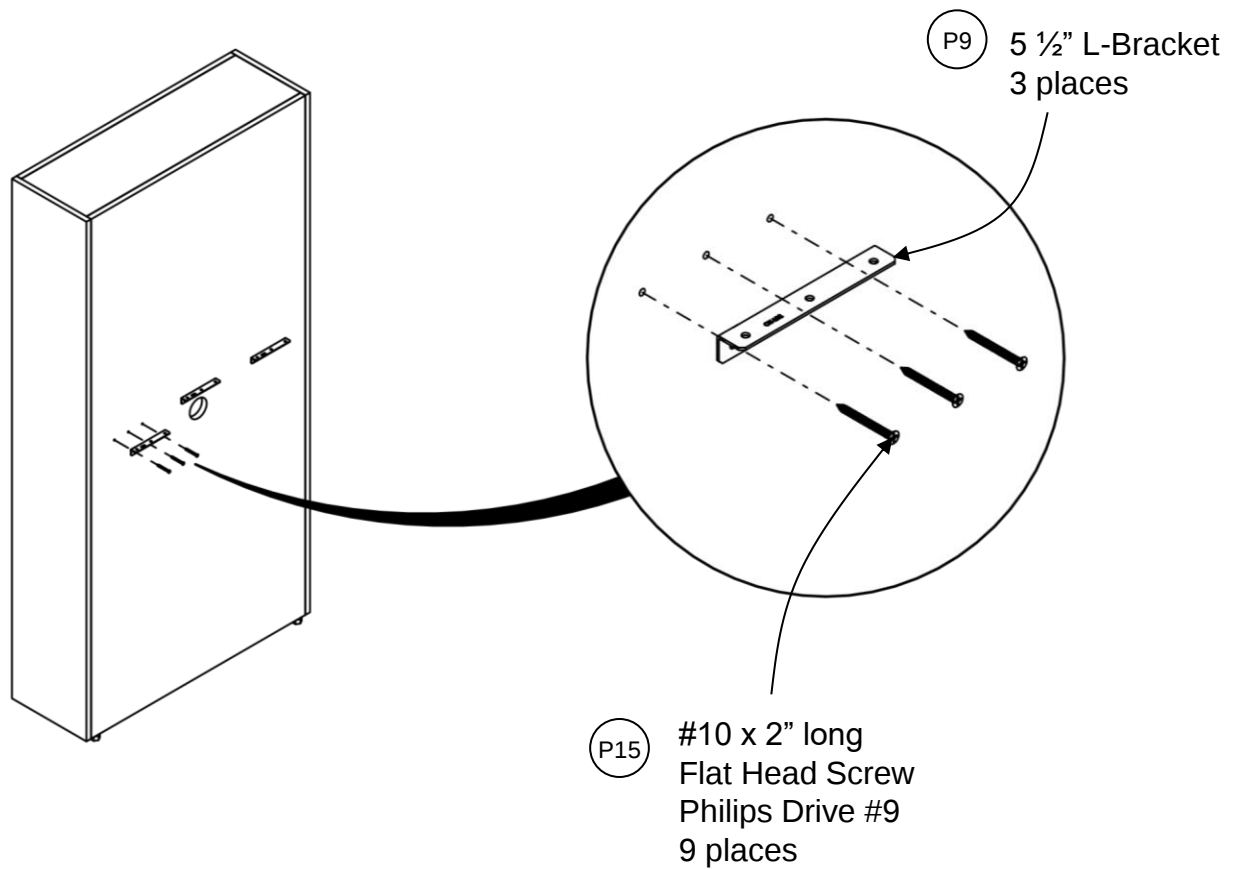



Step 2: Secure the worksurface to the tower base using #9 x 7/8" screws.

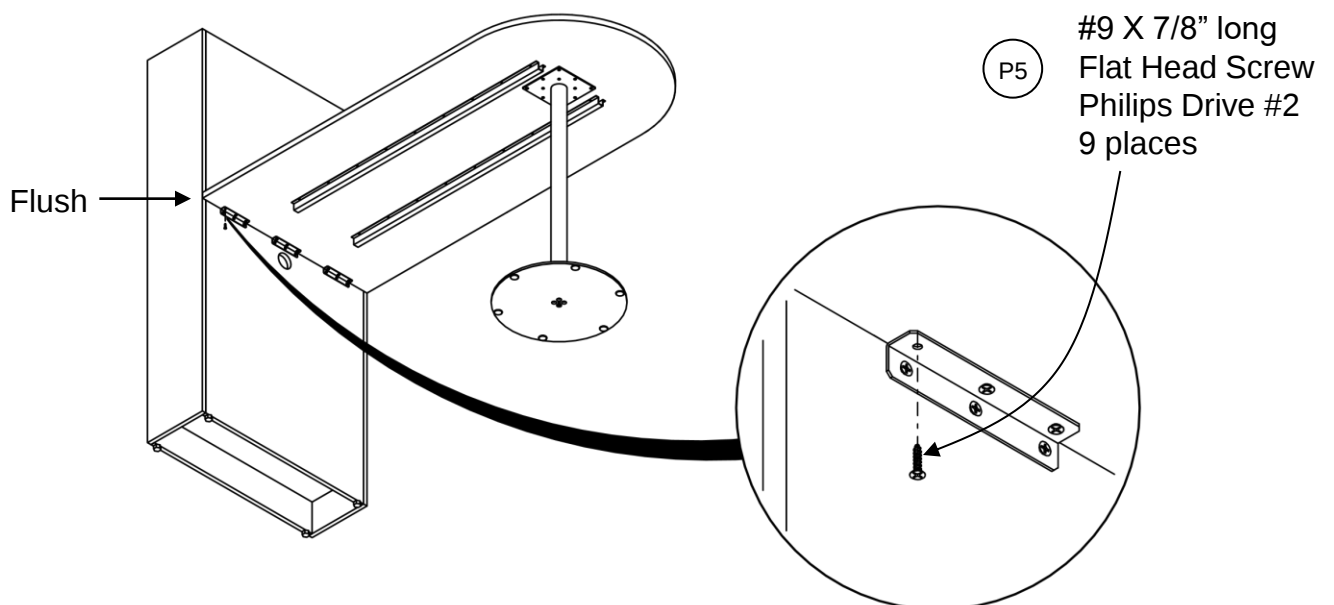



Collaborative Tables Installation Instructions

T-Leg

Step 1: Connect T-Leg panels using cam bushings and anchor pins as shown in Fig A and Fig B.

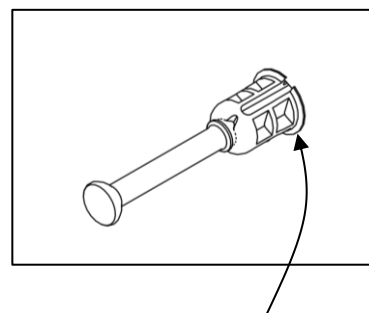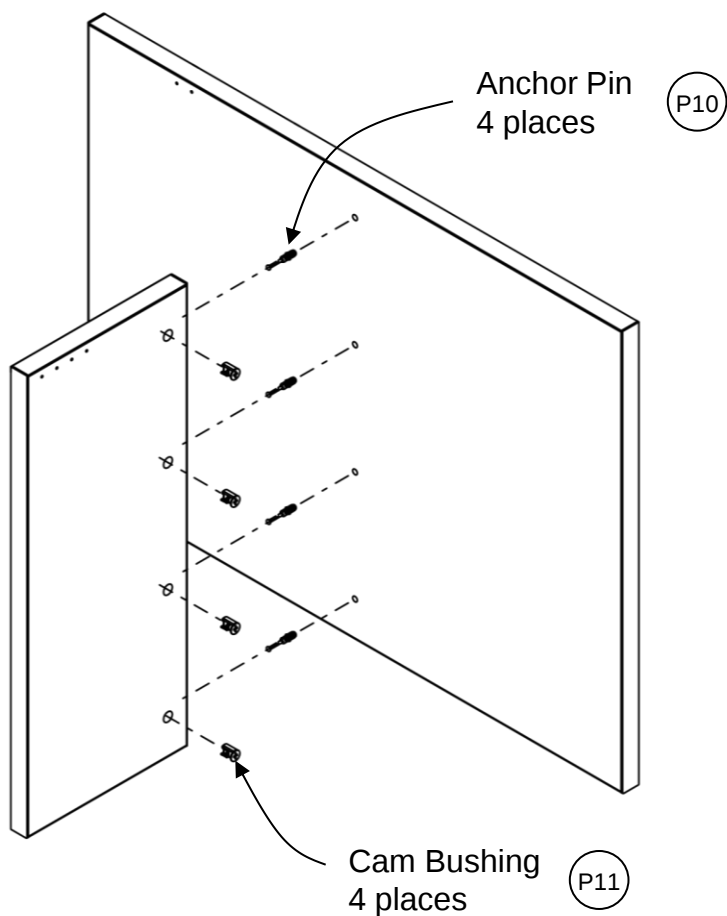



When installing anchor pins, be sure this rim remains exposed.

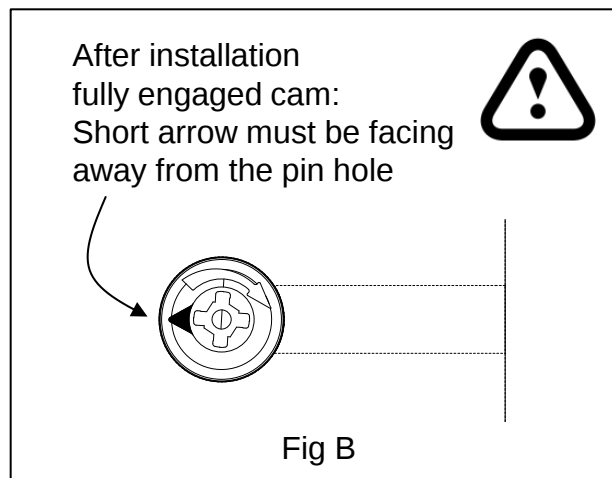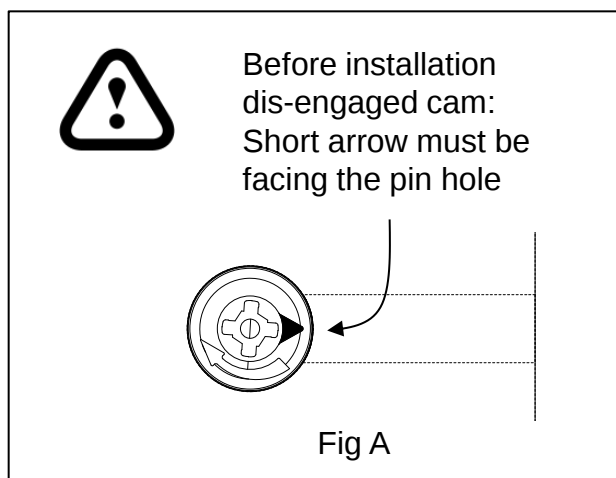

Collaborative Tables Installation Instructions

T-Leg


Step 2: Install glide inserts and glides to the bottom for the T-Leg panels.

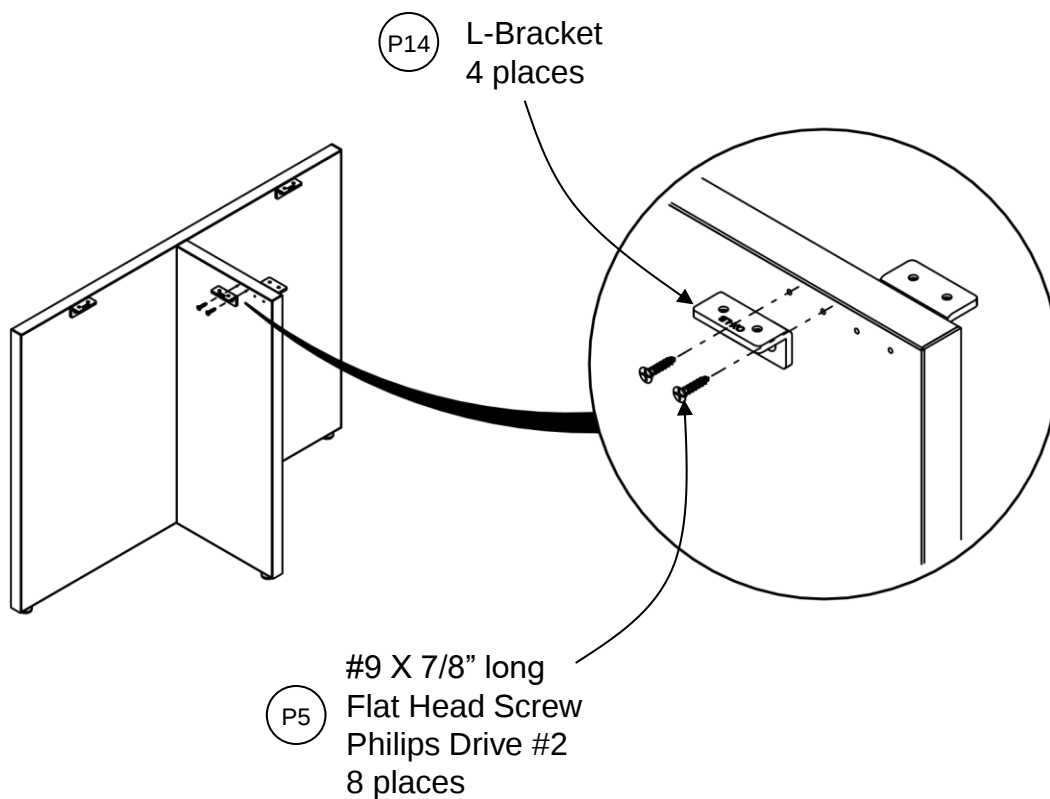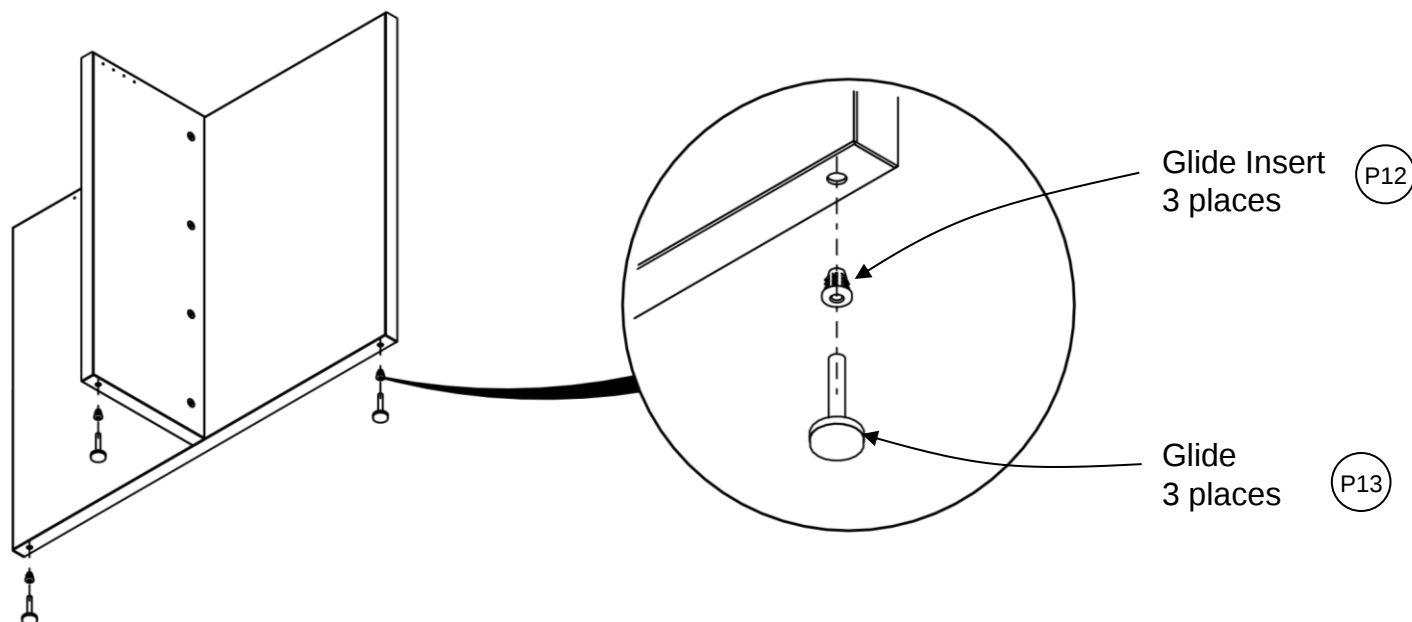


Collaborative Tables Installation Instructions

T-Leg

Step 1: Align worksurface flush to T-Leg.

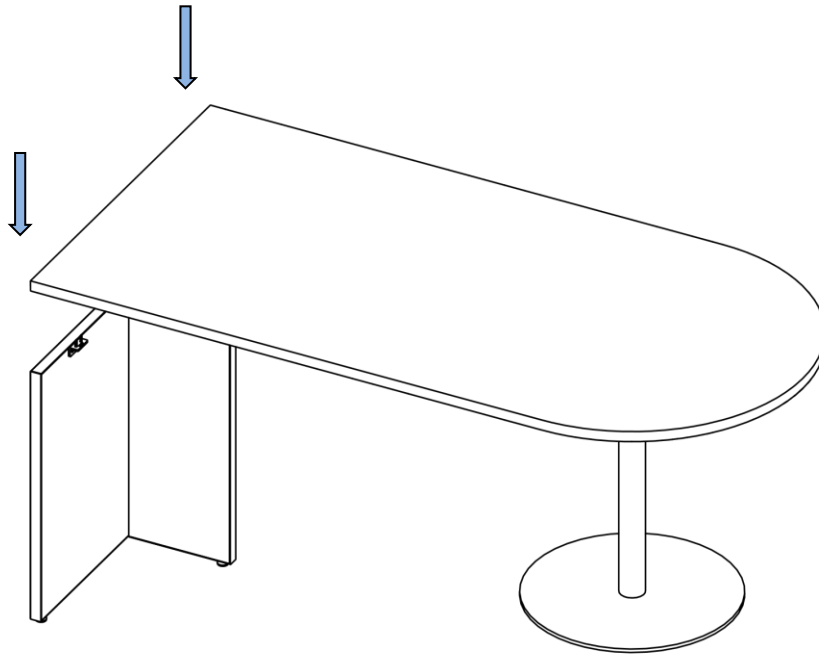


Step 2: Secure worksurface to T-Leg using (8) #9 x 7/8" screws.

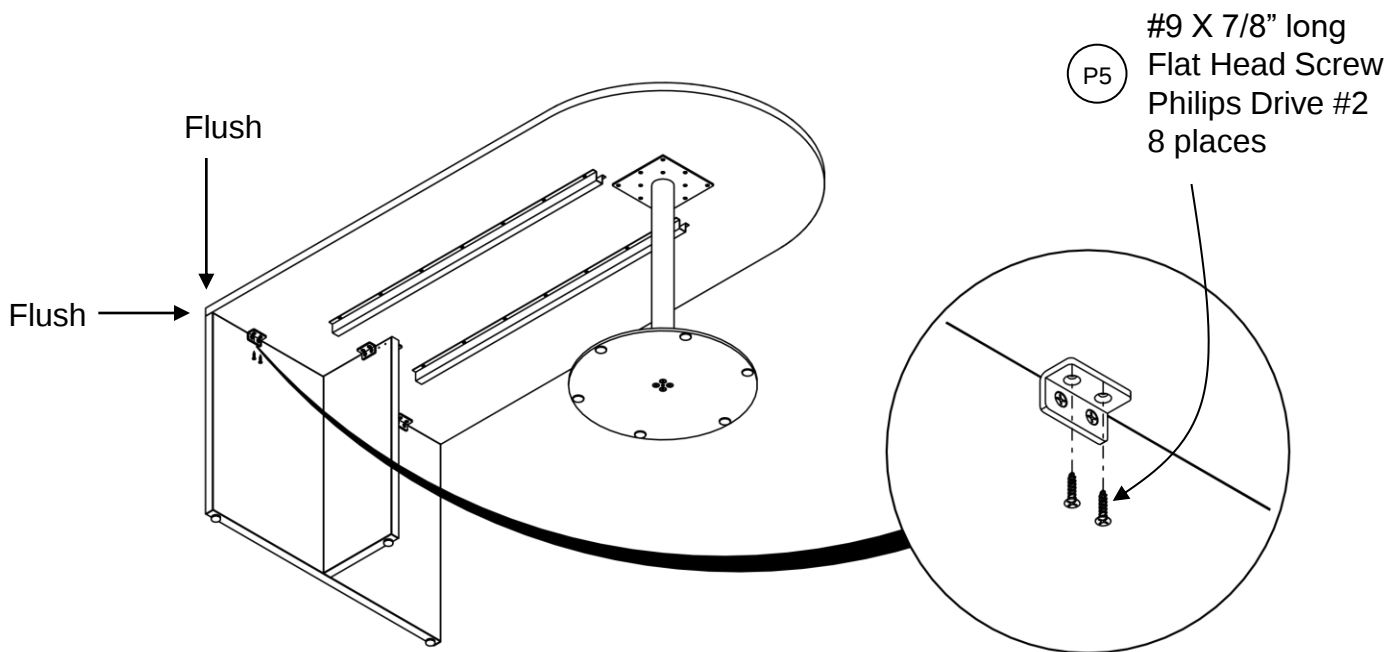

Collaborative Tables Installation Instructions

Wall Mount Kit

Step 1: Use L-brackets to securely mount the worksurface to the wall. (see note)

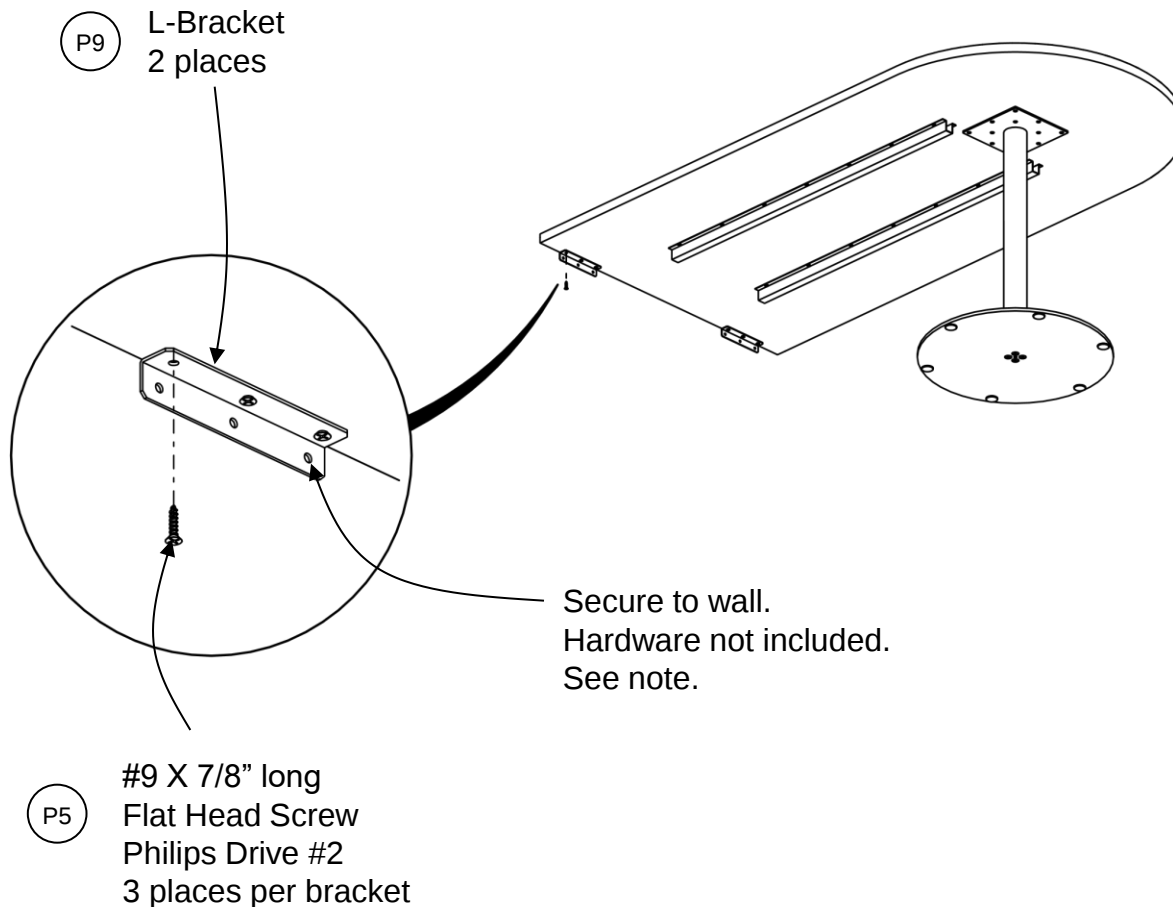


Note:

Customer must ensure structural integrity of the wall is sufficient to support the wall mounted product. All wall mounting hardware (not included) should be securely fastened to the studs on the load bearing wall.


Collaborative Tables Installation Instructions

Cove Power Unit

1. Install the Power Unit into the Box.

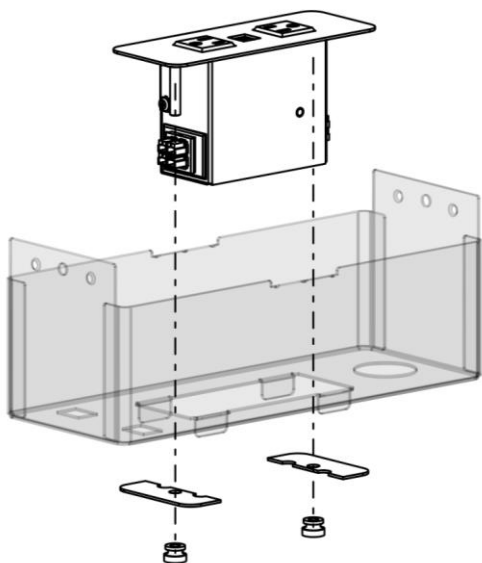


2. Install the Box into the worksurface.

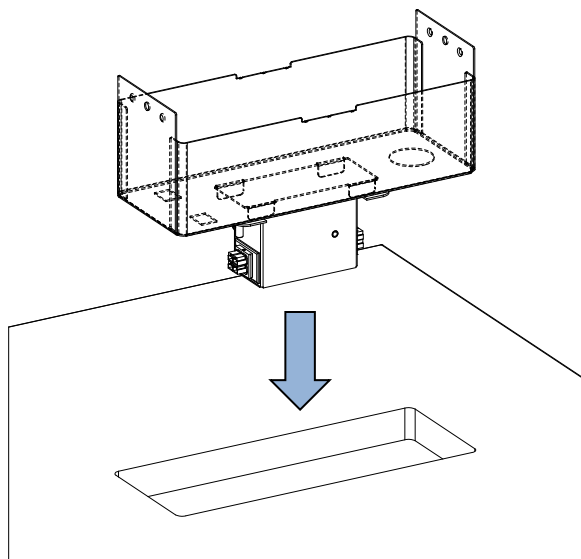


- 3a. Secure the Box to the worksurface using (4) #6 x 1" long flat head wood screw.


- 3b. Break tabs off box.

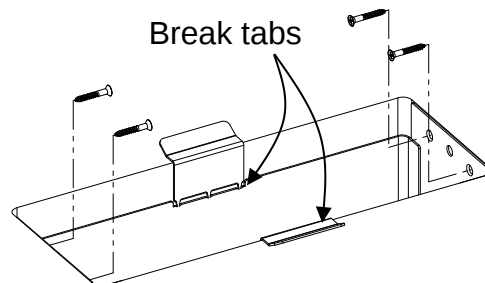

4. Install Cover. Confirm preferred orientation with client prior to installing.

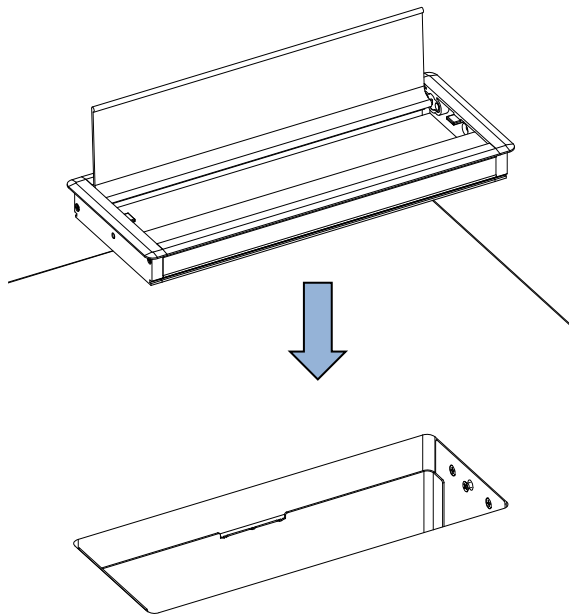


5. Secure Cover using (2) #6 x 1" long flat head wood screws.

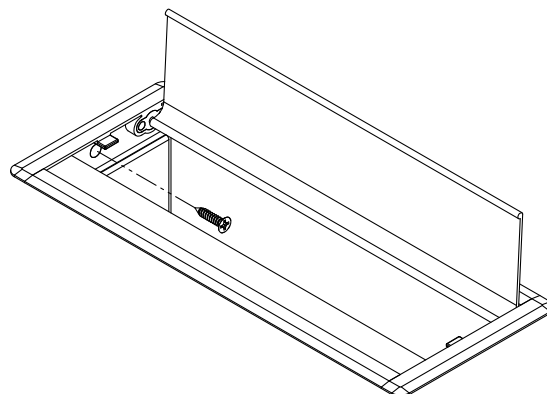


Collaborative Tables Installation Instructions

Domino Power Unit


1. Install the Power Unit into the Box using (2) M3 x 12mm flat head screws.

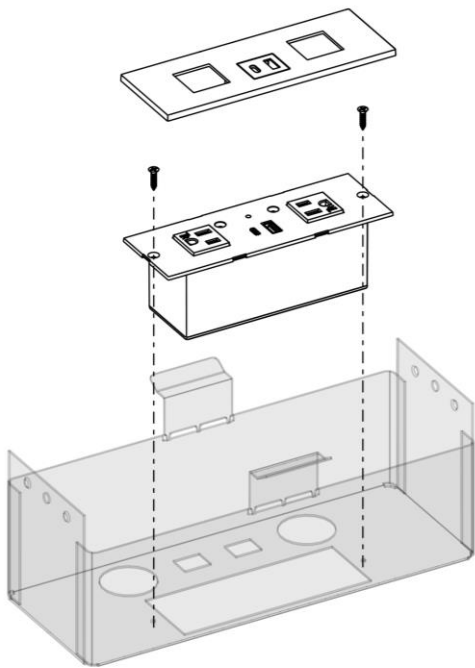


2. Install the Box into the worksurface.

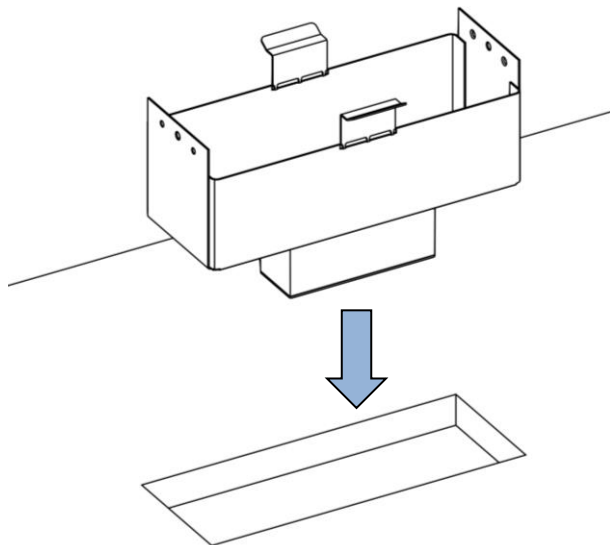

- 3a. Secure the Box to the worksurface using (4) #6 x 1" long flat head wood screw.
- 3b. Break tabs off box.

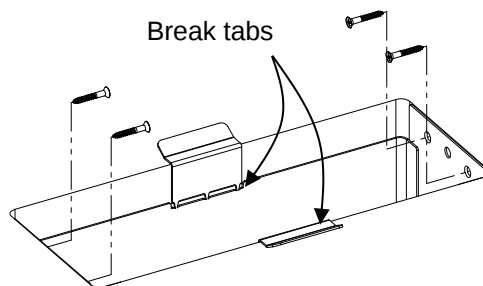

4. Install Cover. Confirm preferred orientation with client prior to installing.

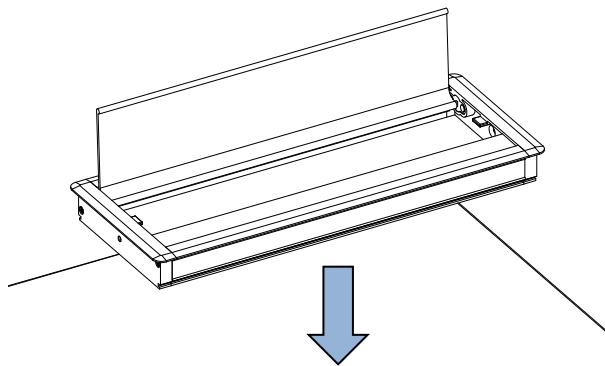

5. Secure Cover using (2) #6 x 5/8" long flat head wood screws

